
CONTROL SYSTEM LOCATION INDEX [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1804100

Engine Compartment

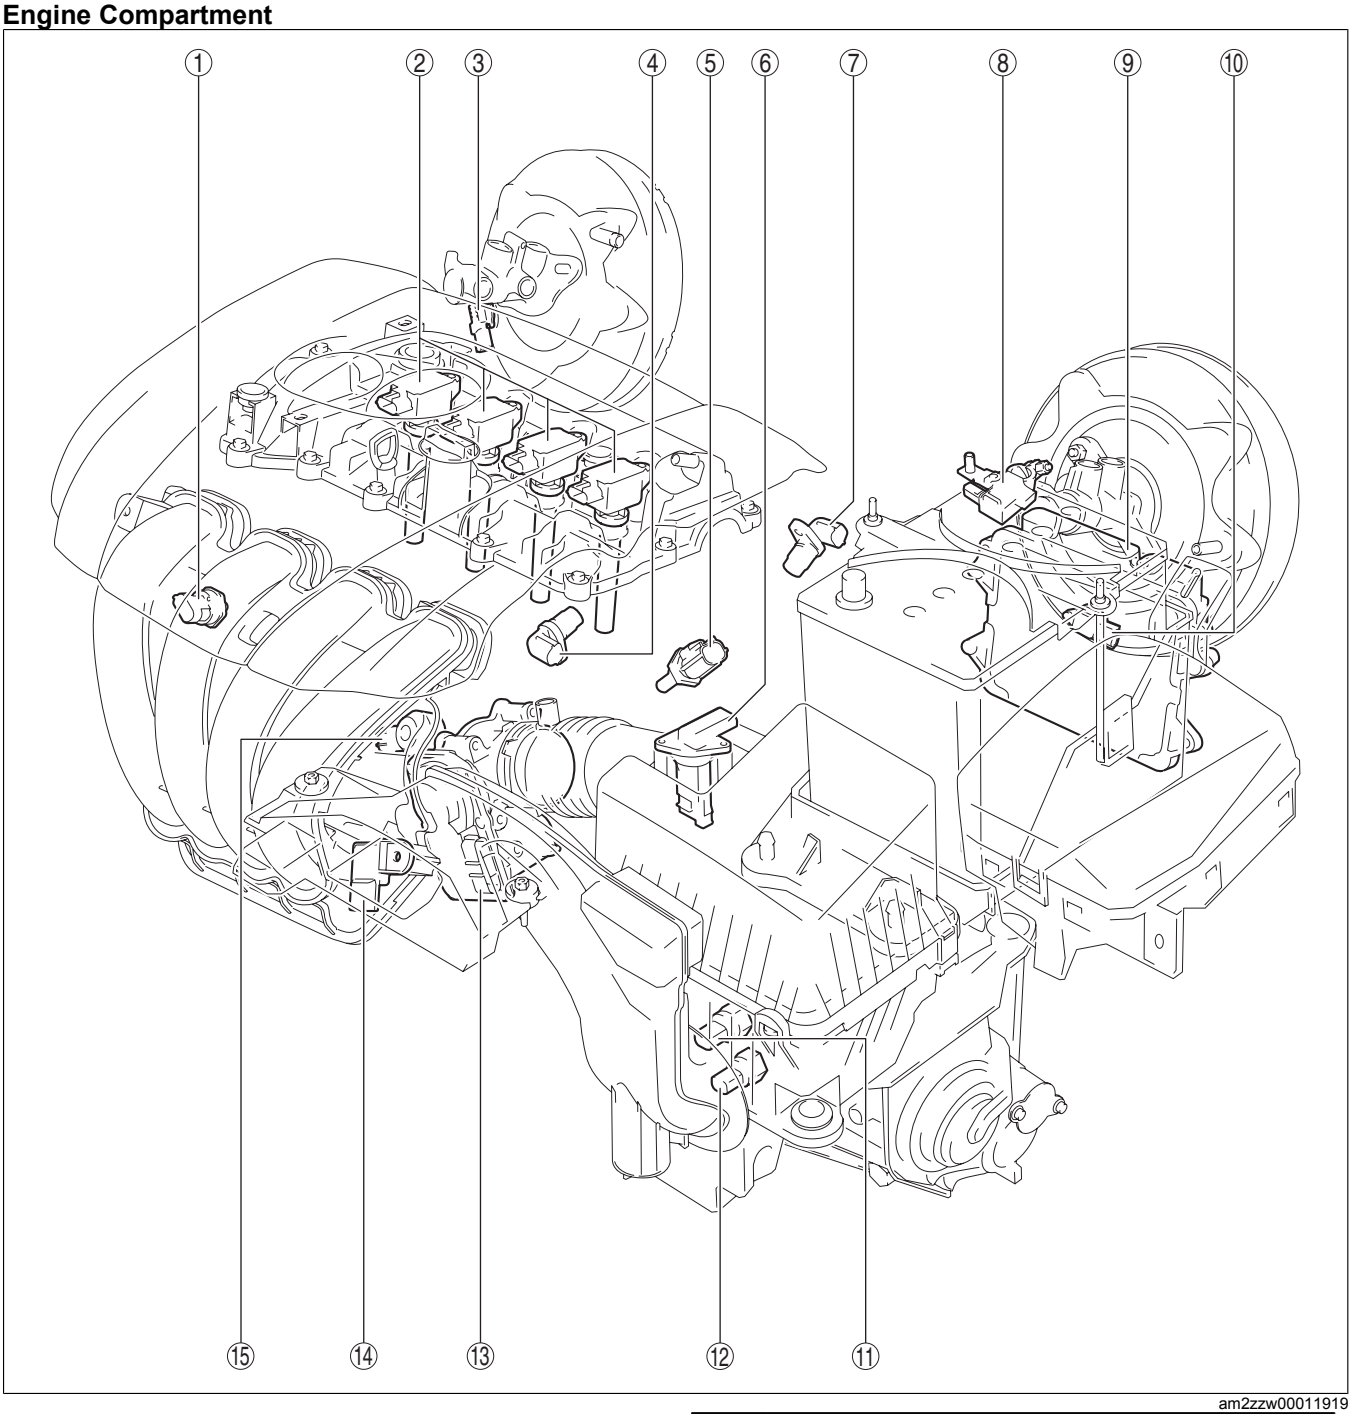


am2zzw00011919

1	Fuel pressure sensor (See FUEL PRESSURE SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See FUEL PRESSURE SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	Ion sensor (SKYACTIV-G 1.5 (with 4-2-1 exhaust system)) (See ION SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ION SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

3	Power brake unit vacuum sensor (with i-stop system (R.H.D.)) (See POWER BRAKE UNIT VACUUM SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4	Intake CMP sensor (See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

5	ECT sensor (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	MAF sensor/IAT sensor No.1 (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See MASS AIR FLOW (MAF) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
7	Exhaust CMP sensor (SKYACTIV-G 1.5 (with 4-2-1 exhaust system)) (See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
8	Current sensor (with i-stop system) (See CURRENT SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CURRENT SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
9	PCM (BARO sensor) (See PCM REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PCM INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PCM CONFIGURATION (USING READ/ WRITE FUNCTION) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PCM CONFIGURATION (USING AS-BUILT DATA) [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
10	Power brake unit vacuum sensor (with i-stop system (L.H.D.)) (See POWER BRAKE UNIT VACUUM SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
11	Neutral switch No.1 (MTX) (See NEUTRAL SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
12	Neutral switch No.2 (with i-stop system (MTX)) (See NEUTRAL SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
13	TP sensor (See THROTTLE POSITION (TP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See THROTTLE POSITION (TP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
14	MAP sensor/IAT sensor No.2 (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
15	KS (See KNOCK SENSOR (KS) REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See KNOCK SENSOR (KS) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

Except Engine Compartment

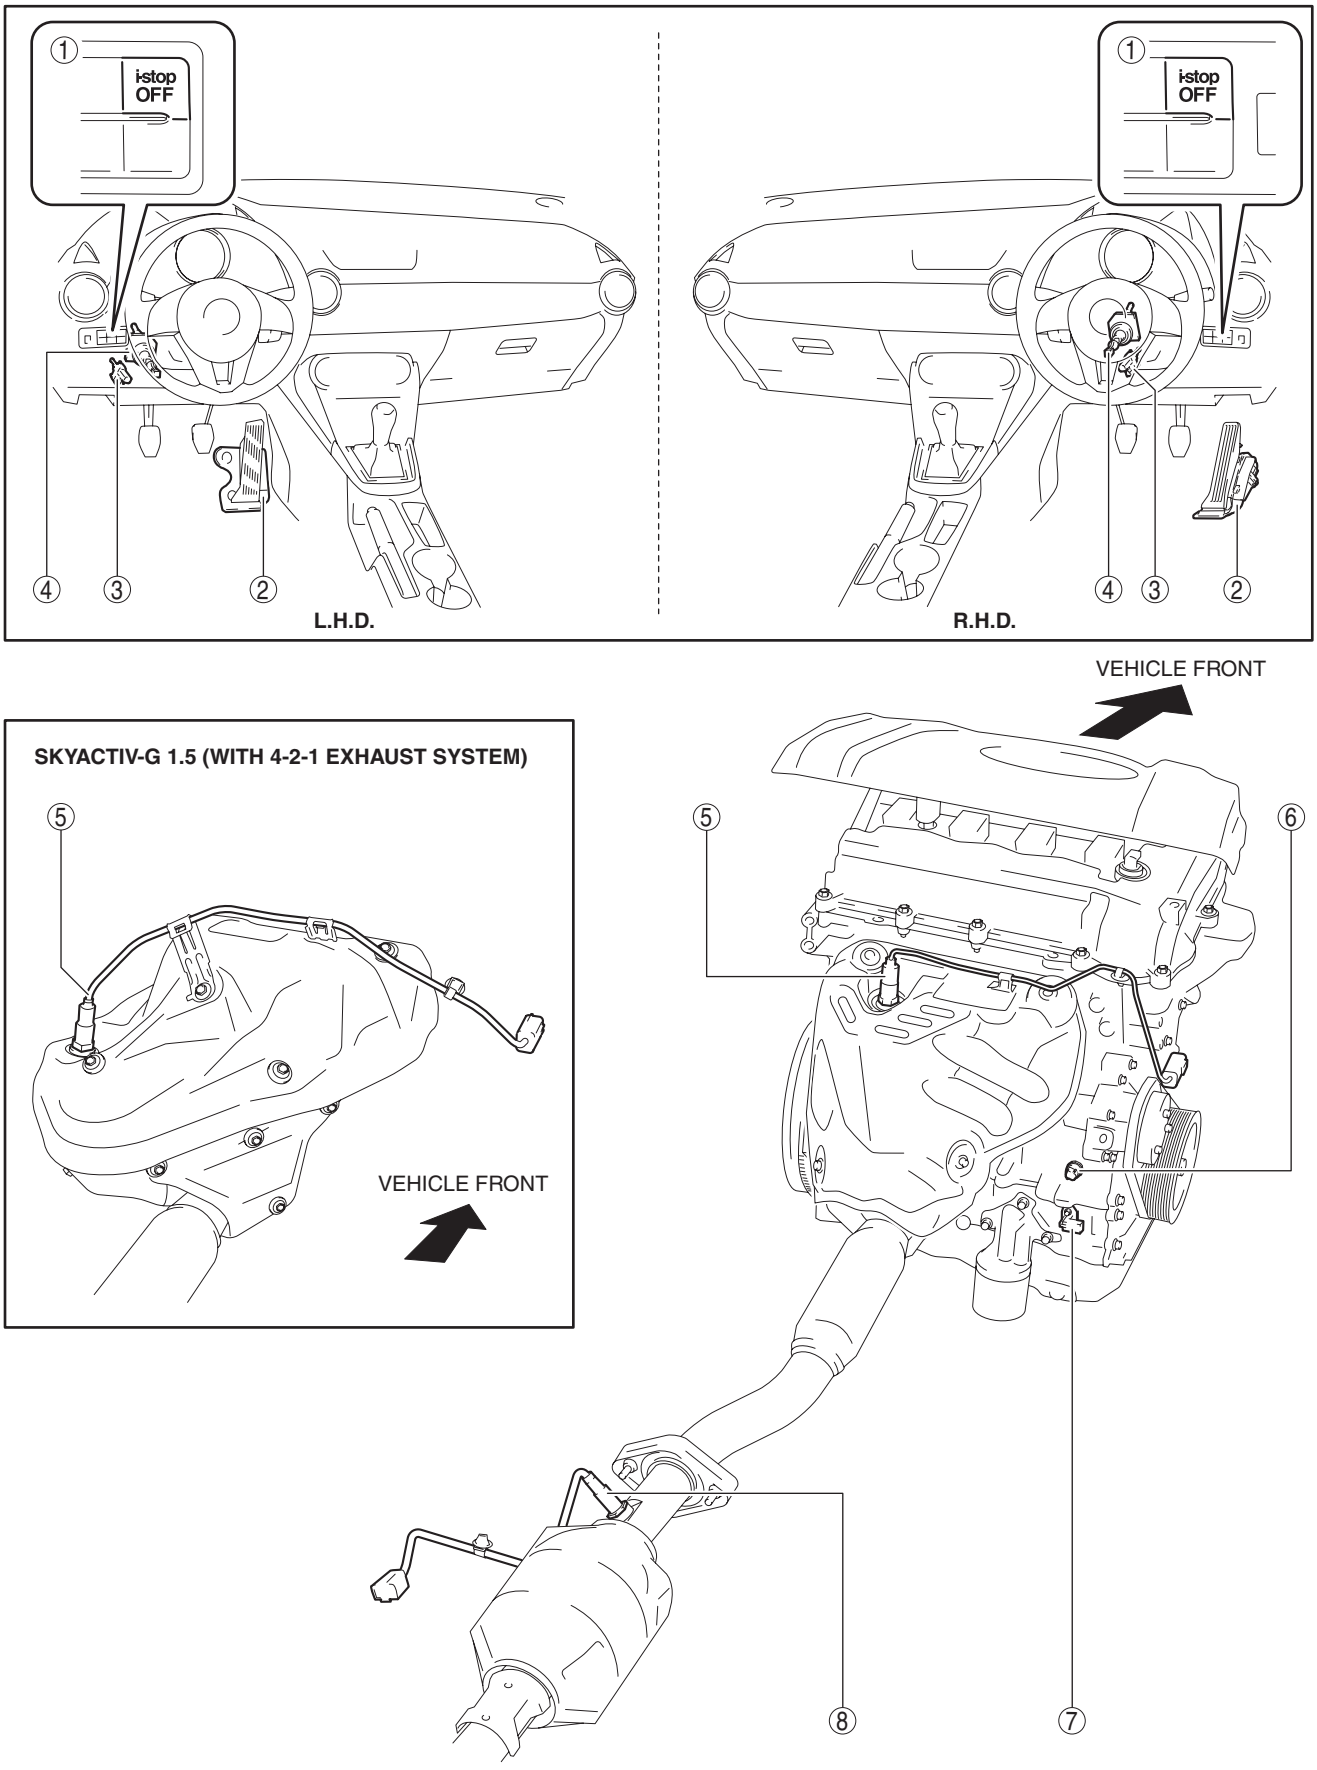

am2zzw00011920

1	i-stop OFF switch (with i-stop system) (See i-stop OFF SWITCH REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See i-stop OFF SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
2	APP sensor (See ACCELERATOR PEDAL POSITION (APP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3	CPP switch (MTX) (See CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
4	Clutch stroke sensor (with i-stop system (MTX)) (See CLUTCH STROKE SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
5	A/F sensor (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See AIR FUEL RATIO (A/F) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
6	Oil pressure switch (See OIL PRESSURE SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
7	CKP sensor (See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
8	HO2S (See HEATED OXYGEN SENSOR (HO2S) REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See HEATED OXYGEN SENSOR (HO2S) INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)