i-stop OFF SWITCH INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1888900

Note
- The i-stop OFF switch is integrated with the cluster switch.
- If the i-stop OFF switch is to be replaced, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

Resistance Inspection
1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (4) Cluster switch (See CLUSTER SWITCH REMOVAL/INSTALLATION.)
3. Measure the resistance between cluster switch terminals B and C under the following conditions.

Resistance with i-stop OFF switch pressed and held
- **83.66—85.34 ohms**

Resistance with any switch not pressed
- **1,139.99—1,163.01 ohms**

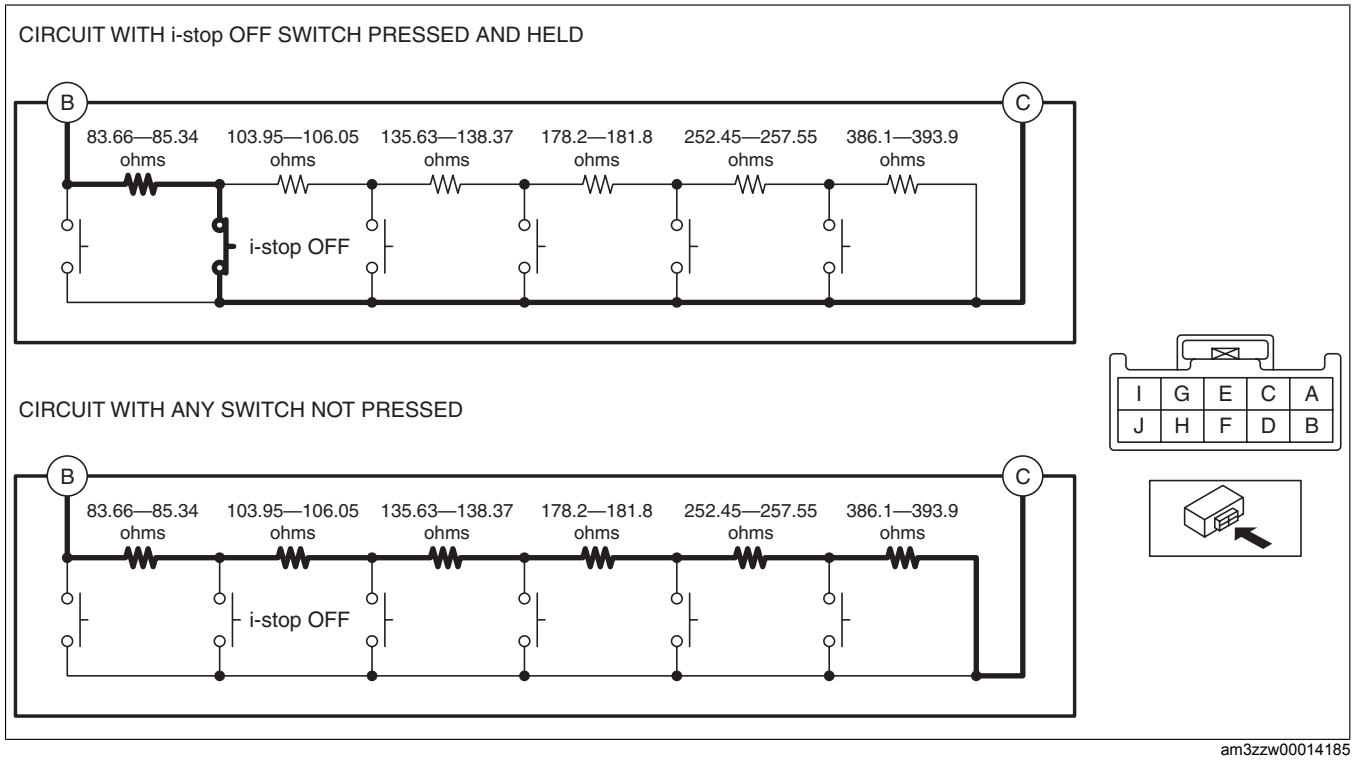


am3zzw00014185

- If not within the specification, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

LED Illumination Inspection
1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the following parts:
   (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
   (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
   (3) Driver-side lower panel (See DRIVER-SIDE LOWER PANEL REMOVAL/INSTALLATION.)
   (4) Cluster switch (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

3. Apply battery positive voltage to cluster switch terminal J, and connect terminal I to ground.
4. Verify that the LED is turned on.
   - If the LED does not turn on, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/ INSTALLATION.)

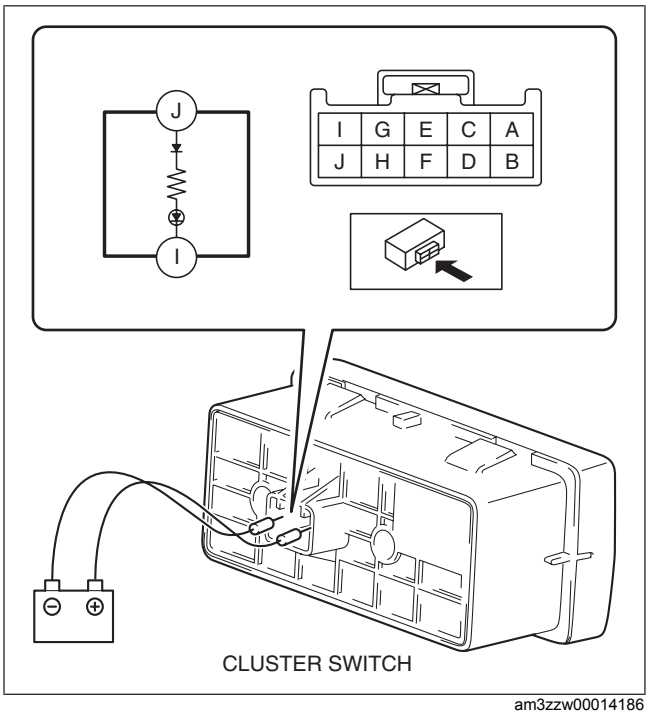

am3zzw00014186