CLUTCH STROKE SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]


id0140q1889000

Voltage Inspection

Note
- The clutch stroke sensor cannot be removed as a single unit. When replacing the clutch stroke sensor, replace it together with the clutch master cylinder as a single unit.

1. Connect the **M-MDS** to the DLC-2.
2. Switch the ignition ON (engine off).
3. Verify that the clutch stroke sensor output voltage (PID: CPP) within the specification. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].) (See PCM INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - If not as specified, replace the clutch master cylinder. (See CLUTCH MASTER CYLINDER REMOVAL/INSTALLATION [F65M-R].) (See CLUTCH MASTER CYLINDER REMOVAL/INSTALLATION [F66M-R].)

Specification (Reference)

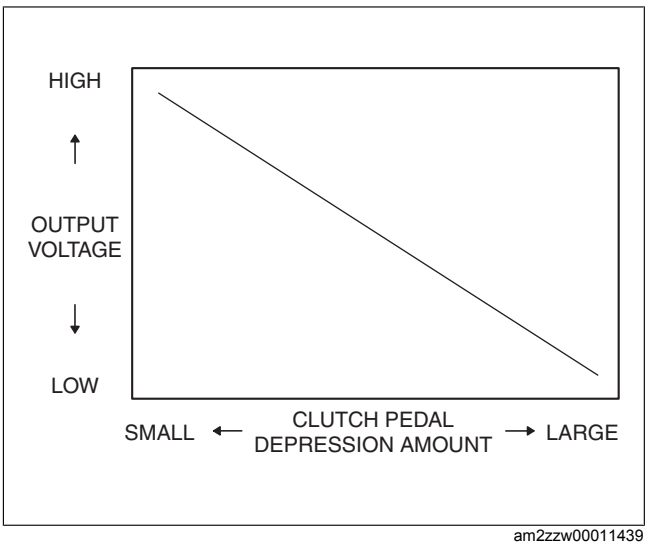

am2zzw00011439