
AIR FUEL RATIO (A/F) SENSOR INSPECTION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1899600

PID/DATA Monitor Inspection (A/F Sensor)

1. Connect the **M-MDS** to the DLC-2.
2. Start the engine and warm it up completely.
3. Access the following PIDs using the **M-MDS**. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
   - — VSS (Vehicle speed)
   - — RPM (Engine speed)
   - — O2S11 (A/F sensor output current)
4. Drive the vehicle and decelerate the engine speed by releasing the accelerator pedal fully when the engine speed is **3,000 rpm or more**.
5. Verify that the A/F sensor output current (PID: O2S11) is **0.25 mA or more** while decelerating as shown in the figure.
   - If not as verified, replace the A/F sensor. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

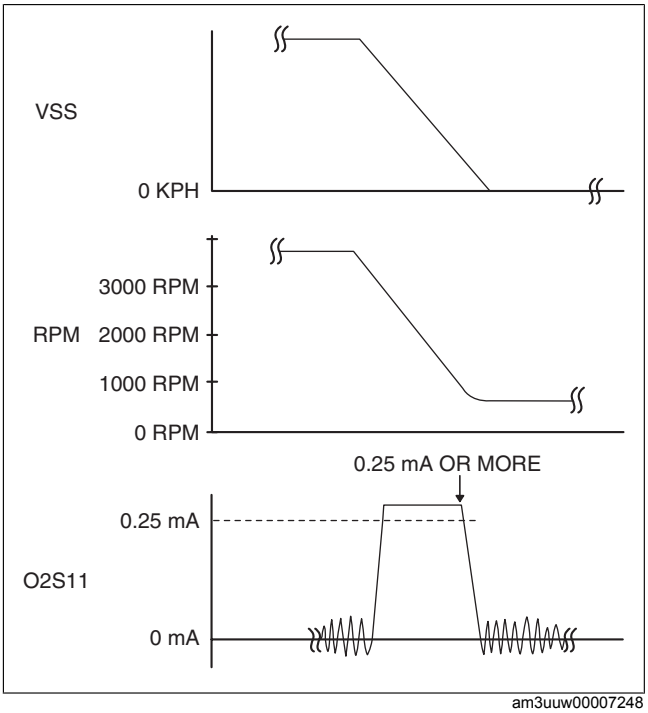

am3uuw00007248


Resistance Inspection (A/F Sensor Heater)

Warning

- **A hot engine and exhaust system can cause severe burns. Turn off the engine and wait until they are cool before removing the exhaust system.**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the A/F sensor connector. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)
3. Measure the resistance between A/F sensor terminals A and E.
   - If not as specified, replace the A/F sensor. (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5].)

A/F sensor heater resistance
1—10 ohms [normal temperature]

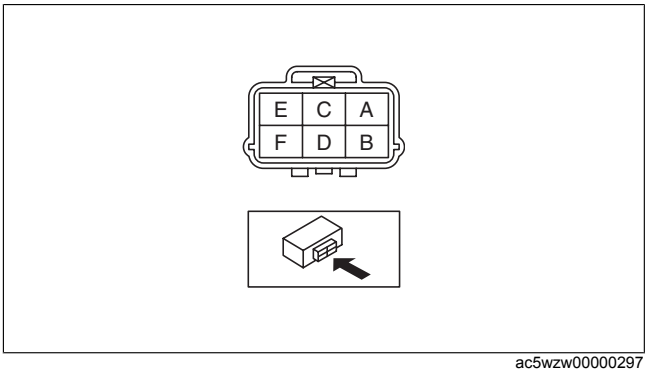

ac5wzw00000297