
MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/ INSTALLATION [SKYACTIV-G 1.3, SKYACTIV-G 1.5]

id0140q1900300

Note

- Because the IAT sensor No.1 is integrated in the MAF sensor, replacing the IAT sensor No.1 includes replacement of the MAF sensor/IAT sensor No.1.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the MAF sensor/IAT sensor No.1 connector.

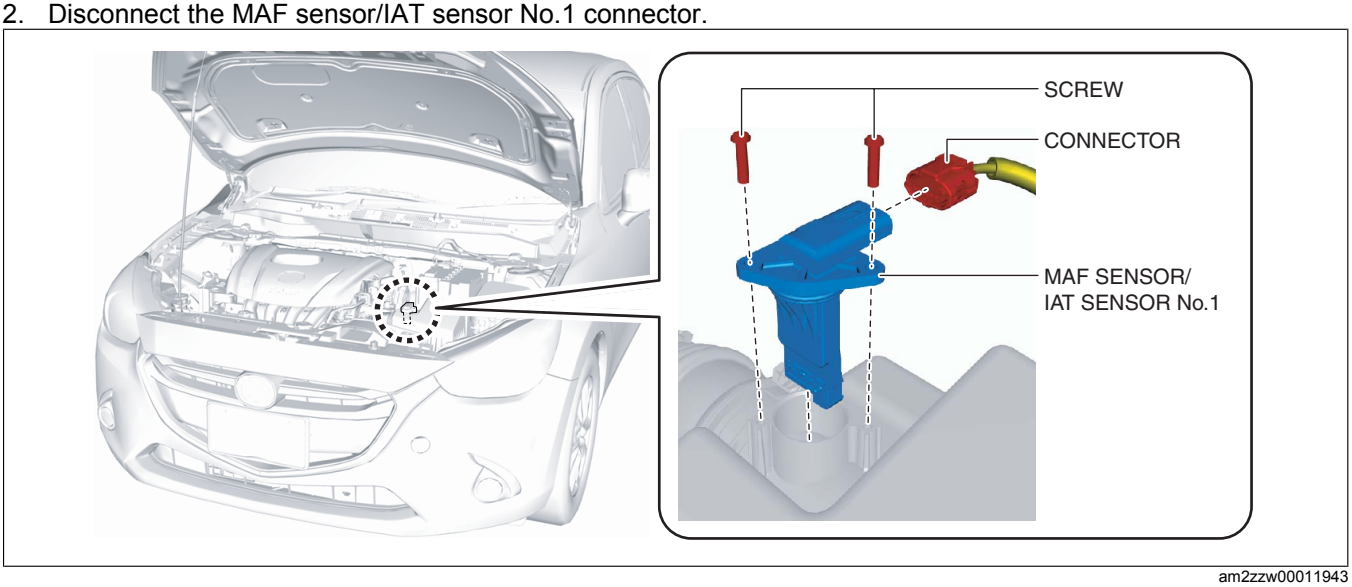

am2zzw00011943

3. Remove the screws.
4. Remove the MAF sensor/IAT sensor No.1.
5. Install in the reverse order of removal.