FUEL PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5]


id0140q2106100

Voltage Inspection

Note
- The fuel pressure sensor cannot be removed as a single unit. When replacing the fuel pressure sensor, replace it together with the common rail as a single unit.

1. Switch the ignition ON (engine off).
2. Measure the voltage at the fuel pressure sensor terminal B.
   - If the voltage is within the specification, go to the next step.
   - If the voltage is not within the specification, replace the common rail. (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)


Specification
Approx. 0.5 V

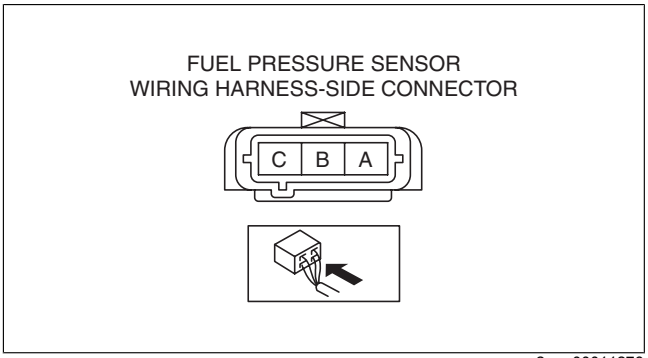

am2zzw00011276

3. Connect the M-MDS to the DLC-2.
4. Start the engine.
5. Access the PID/DATA monitor item FRP using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
6. Measure the voltage at the fuel pressure sensor terminal B when the FRP PID increases.
   - If the voltage does not increase, replace the common rail. (See COMMON RAIL REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Specification (Reference)

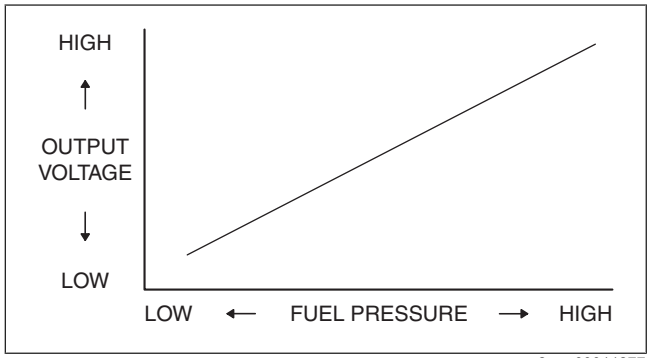

am2zzw00011277