
CONTROL SYSTEM LOCATION INDEX [SKYACTIV-D 1.5]

id0140q2106300

Except Engine Compartment

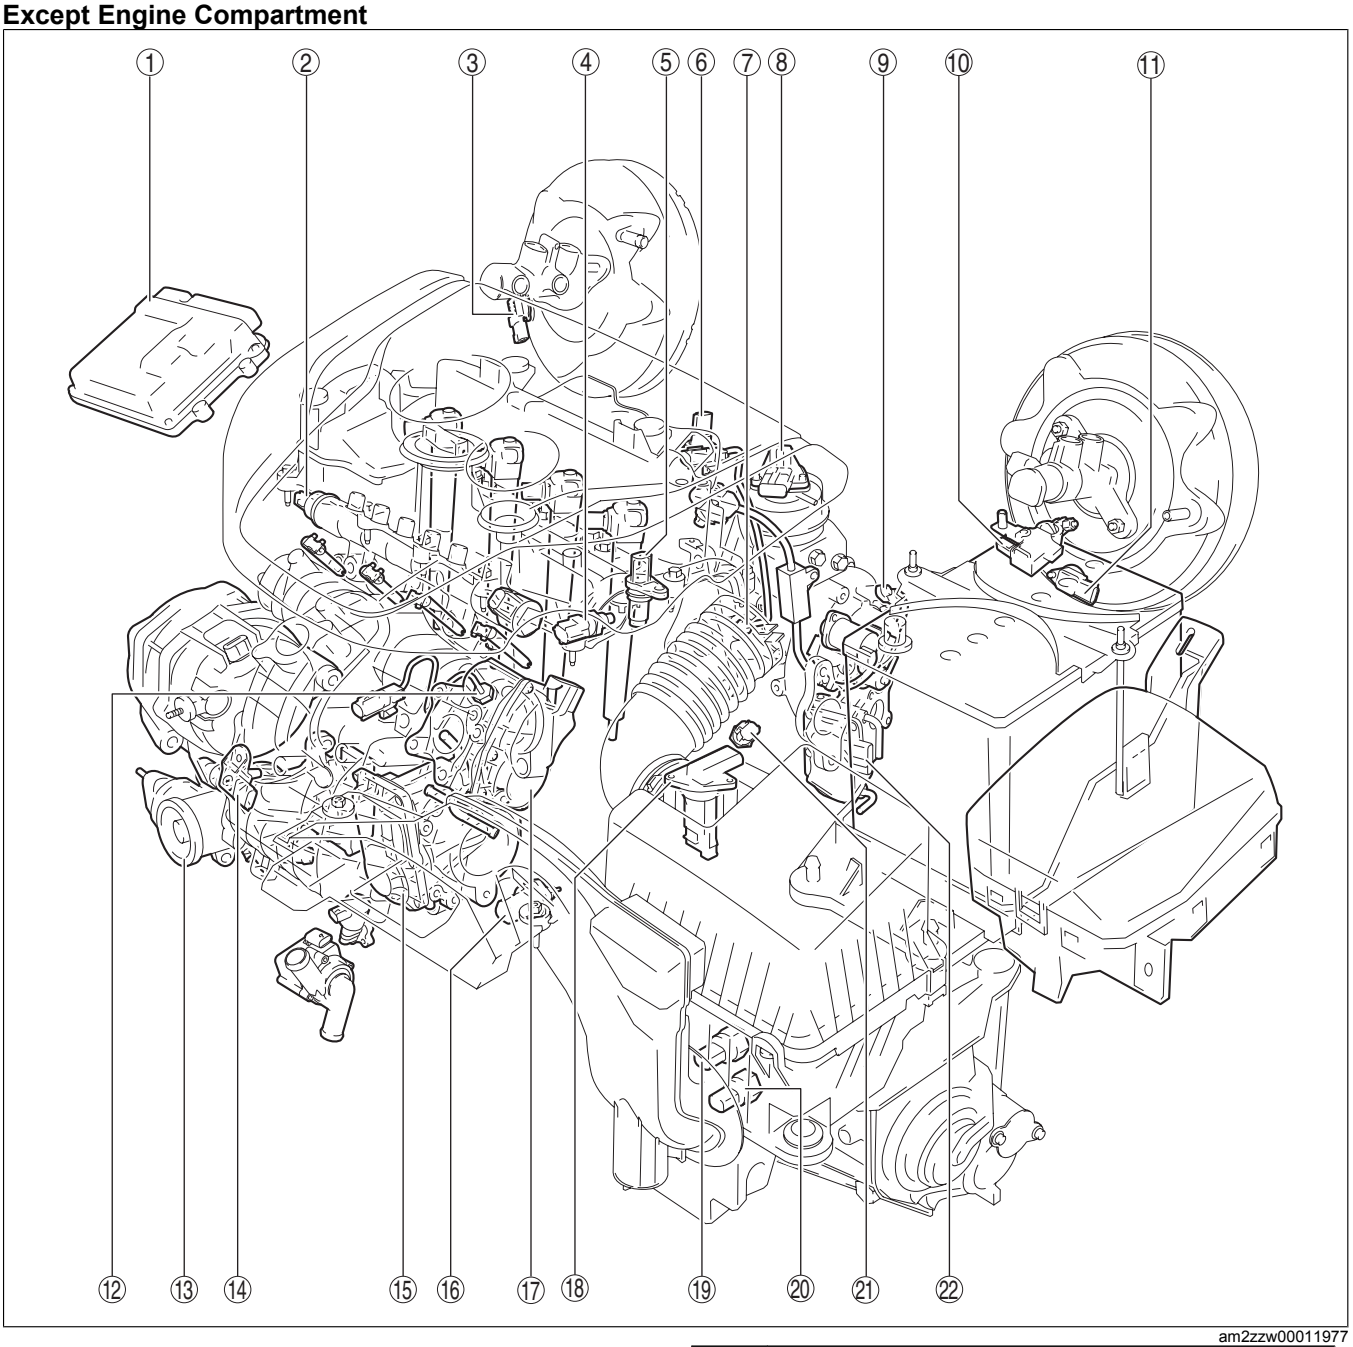


am2zzw00011977


1	PCM (BARO sensor) (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See PCM INSPECTION [SKYACTIV-D 1.5].) (See PCM DATA RESET [SKYACTIV-D 1.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See BAROMETRIC PRESSURE (BARO) SENSOR INSPECTION [SKYACTIV-D 1.5].) (See PCM CONFIGURATION (USING READ/WRITE FUNCTION) [SKYACTIV-D 1.5].) (See PCM CONFIGURATION (USING AS-BUILT DATA) [SKYACTIV-D 1.5].)


2	Fuel pressure sensor (See FUEL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See FUEL PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
3	Power brake unit vacuum sensor (R.H.D.) (See POWER BRAKE UNIT VACUUM SENSOR INSPECTION [SKYACTIV-D 1.5].)
4	Fuel temperature sensor (See FUEL TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See FUEL TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].)


5	CMP sensor (See CAMSHAFT POSITION (CMP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See CAMSHAFT POSITION (CMP) SENSOR INSPECTION [SKYACTIV-D 1.5].)
6	Exhaust gas pressure sensor No.1 (See EXHAUST GAS PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST GAS PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
7	Exhaust gas temperature sensor No.1 (See EXHAUST GAS TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST GAS TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
8	Actuator position sensor (turbocharger with variable turbine geometry) (See ACTUATOR POSITION SENSOR (TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY) REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See ACTUATOR POSITION SENSOR (TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY) INSPECTION [SKYACTIV-D 1.5].)
9	Speed sensor assy (turbocharger with variable turbine geometry) (See SPEED SENSOR ASSY (TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY) REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See SPEED SENSOR ASSY (TURBOCHARGER WITH VARIABLE TURBINE GEOMETRY) INSPECTION [SKYACTIV-D 1.5].)
10	Current sensor (See CURRENT SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See CURRENT SENSOR INSPECTION [SKYACTIV-D 1.5].)
11	Power brake unit vacuum sensor (L.H.D.) (See POWER BRAKE UNIT VACUUM SENSOR INSPECTION [SKYACTIV-D 1.5].)
12	IAT sensor No.2 (See INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [SKYACTIV-D 1.5].)
13	Coolant control valve position sensor (See COOLANT CONTROL VALVE POSITION SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See COOLANT CONTROL VALVE POSITION SENSOR INSPECTION [SKYACTIV-D 1.5].)
14	MAP sensor/Boost air temperature sensor (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [SKYACTIV-D 1.5].) (See BOOST AIR TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
15	Intake shutter valve position sensor (See INTAKE SHUTTER VALVE POSITION SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See INTAKE SHUTTER VALVE POSITION SENSOR INSPECTION [SKYACTIV-D 1.5].)
16	Engine oil temperature sensor/Engine oil pressure sensor (See ENGINE OIL TEMPERATURE SENSOR/ ENGINE OIL PRESSURE SENSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See ENGINE OIL TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].) (See ENGINE OIL PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
17	HP-EGR control valve position sensor (See HP-EGR CONTROL VALVE POSITION SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See HP-EGR CONTROL VALVE POSITION SENSOR INSPECTION [SKYACTIV-D 1.5].)
18	MAF sensor/IAT sensor No.1 (See MASS AIR FLOW (MAF) SENSOR DATA RESET [SKYACTIV-D 1.5].) (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See MASS AIR FLOW (MAF) SENSOR INSPECTION [SKYACTIV-D 1.5].) (See INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [SKYACTIV-D 1.5].)
19	Neutral switch No.1 (MTX) (See NEUTRAL SWITCH INSPECTION [SKYACTIV-D 1.5].)
20	Neutral switch No.2 (MTX) (See NEUTRAL SWITCH INSPECTION [SKYACTIV-D 1.5].)
21	ECT sensor (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See ENGINE COOLANT TEMPERATURE (ECT) SENSOR INSPECTION [SKYACTIV-D 1.5].)
22	LP-EGR control valve position sensor (See LP-EGR CONTROL VALVE POSITION SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See LP-EGR CONTROL VALVE POSITION SENSOR INSPECTION [SKYACTIV-D 1.5].)

Except Engine Compartment

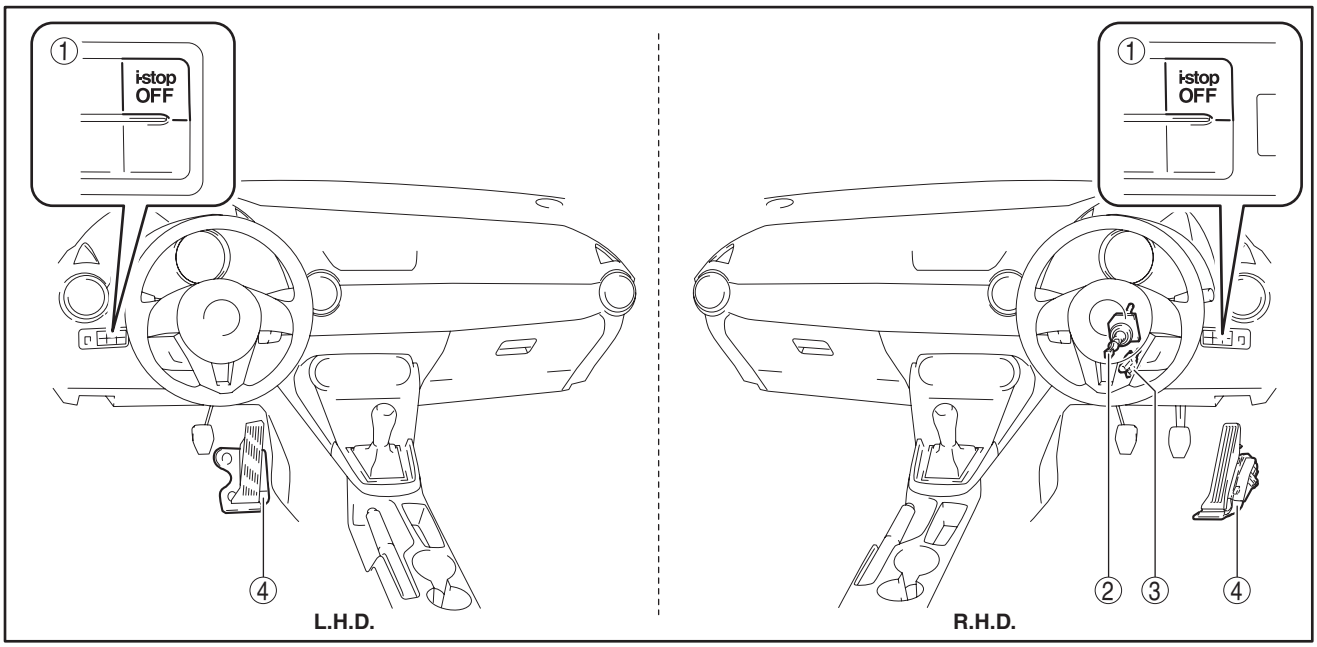

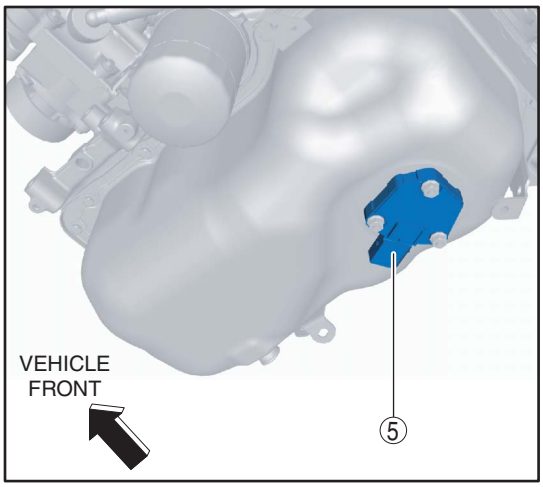

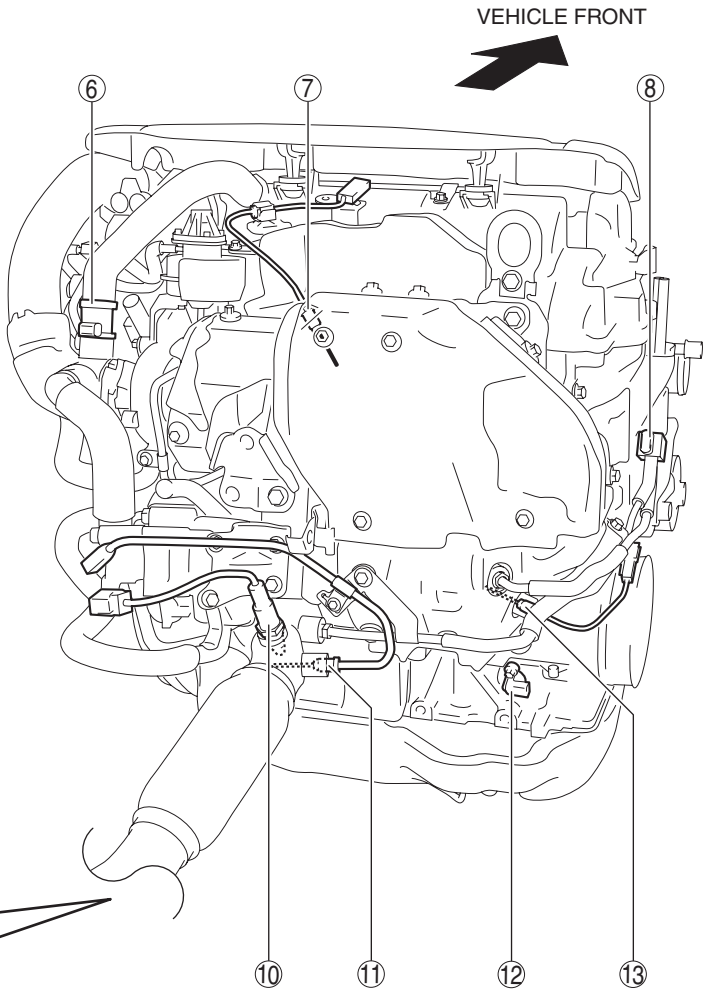

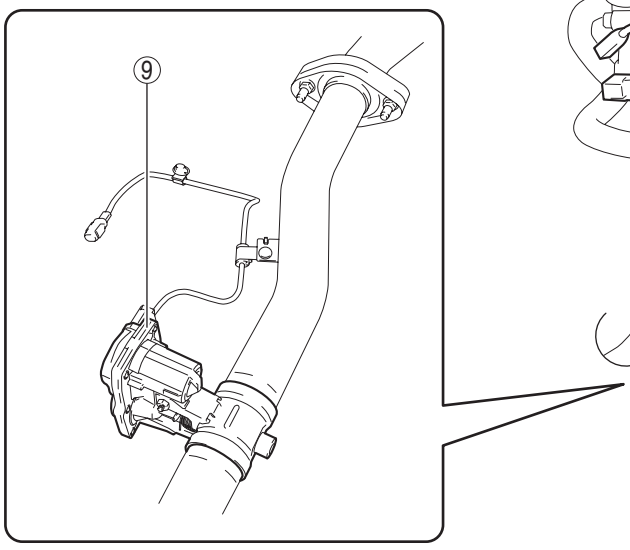

am2zzw00012790

1	i-stop OFF switch (See i-stop OFF SWITCH REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].) (See i-stop OFF SWITCH INSPECTION [SKYACTIV-D 1.5].)

2	Clutch stroke sensor (MTX) (See CLUTCH STROKE SENSOR INSPECTION [SKYACTIV-D 1.5].)

3	CPP switch (MTX) (See CLUTCH PEDAL POSITION (CPP) SWITCH INSPECTION [SKYACTIV-D 1.5].)
4	APP sensor (See ACCELERATOR PEDAL POSITION (APP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See ACCELERATOR PEDAL POSITION (APP) SENSOR INSPECTION [SKYACTIV-D 1.5].)
5	Engine oil level sensor (with engine oil level sensor) (See ENGINE OIL LEVEL SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See ENGINE OIL LEVEL SENSOR INSPECTION [SKYACTIV-D 1.5].)
6	Blow-by heater (See BLOW-BY HEATER INSPECTION [SKYACTIV-D 1.5].)
7	Exhaust gas temperature sensor No.2 (See EXHAUST GAS TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST GAS TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
8	Exhaust gas pressure sensor No.2 (See EXHAUST GAS PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST GAS PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
9	Exhaust shutter valve position sensor (See EXHAUST SHUTTER VALVE POSITION SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST SHUTTER VALVE POSITION SENSOR INSPECTION [SKYACTIV-D 1.5].)
10	A/F sensor (See AIR FUEL RATIO (A/F) SENSOR DATA RESET [SKYACTIV-D 1.5].) (See AIR FUEL RATIO (A/F) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See AIR FUEL RATIO (A/F) SENSOR INSPECTION [SKYACTIV-D 1.5].)
11	Exhaust gas temperature sensor No.4 (See EXHAUST GAS TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST GAS TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].)
12	CKP sensor (See CRANKSHAFT POSITION (CKP) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See CRANKSHAFT POSITION (CKP) SENSOR INSPECTION [SKYACTIV-D 1.5].)
13	Exhaust gas temperature sensor No.3 (See EXHAUST GAS TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].) (See EXHAUST GAS TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5].)