MASS AIR FLOW (MAF) SENSOR INSPECTION [SKYACTIV-D 1.5]


id0140q2107200

Visual Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Visually inspect the MAF sensor for the following malfunction:
   - Damage, cracks, dirt
   - Rusted sensor terminal
   - Bent sensor terminal
     - — If there is any malfunction, repair or replace the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)


Voltage Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the MAF sensor/IAT sensor No.1 without disconnect the connector. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Reconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
4. Switch the ignition ON (engine off).
5. As the air gradually approaches the MAF detection part of the MAF sensor/IAT sensor No.1, measure the voltage at the MAF sensor/IAT sensor No.1 terminal C.
   - If the voltage does not increase, replace the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

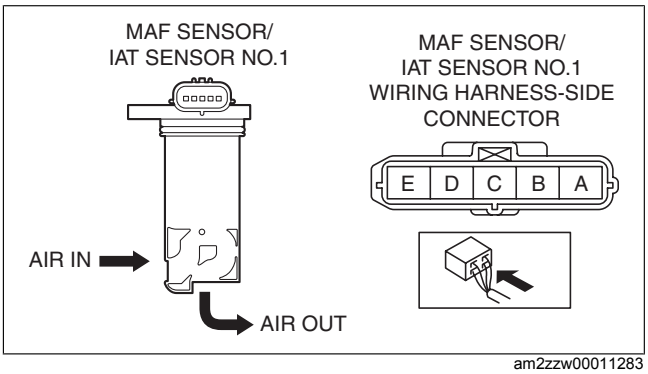

am2zzw00011283

Specification (Reference)

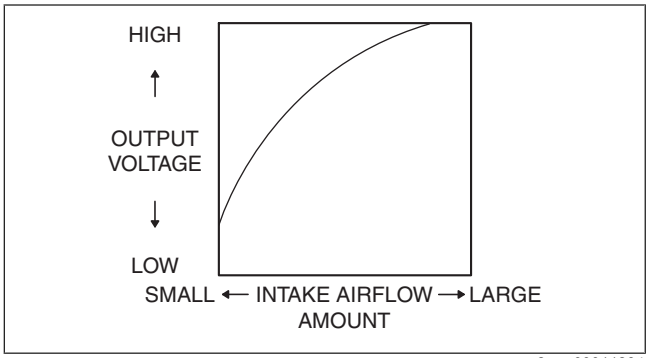

am2zzw00011284