
INTAKE AIR TEMPERATURE (IAT) SENSOR INSPECTION [SKYACTIV-D 1.5]

id0140q2112200

IAT Sensor No.1
Resistance inspection

Note
- Because the IAT sensor No.1 is integrated in the MAF sensor, replacing the IAT sensor No.1 includes replacement of the MAF sensor/IAT sensor No.1.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the MAF sensor/IAT sensor No.1 connector.
3. Measure the resistance between MAF sensor/IAT sensor No.1 terminals A and B.
   - If not as specified, replace the MAF sensor/IAT sensor No.1. (See MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

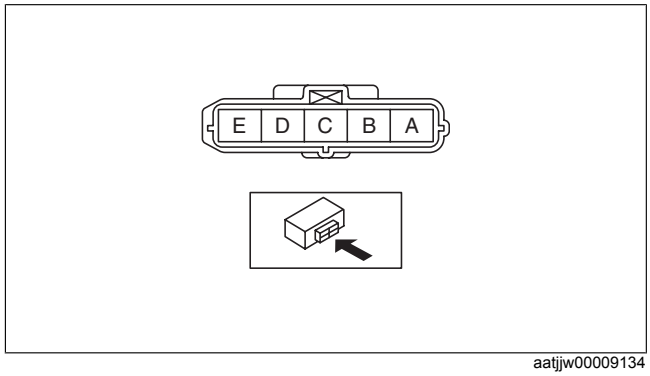


aatjjw00009134

Resistance

IAT (°C {°F})	Resistance (Kilohms)
−20 {−4}	13.7—16.6
20 {68}	2.49—2.79
60 {140}	0.622—0.703

Specification (Reference)

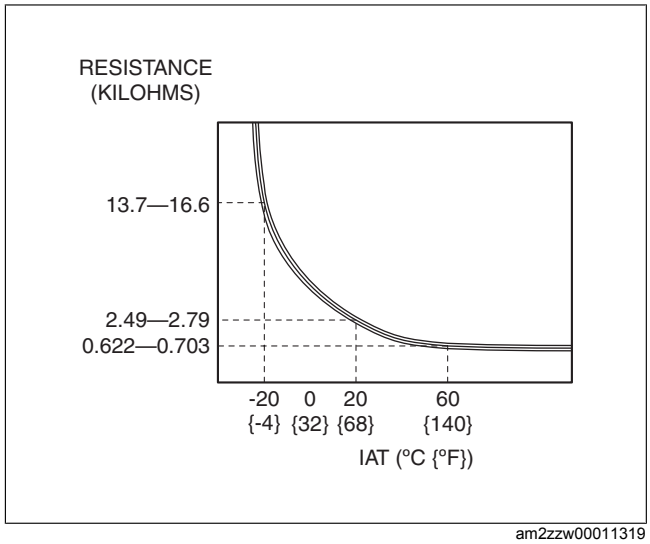


am2zzw00011319

IAT Sensor No.2
Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Remove the IAT sensor No.2. (See INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

4. Place the IAT sensor No.2 in water with a thermometer, and heat the water gradually.

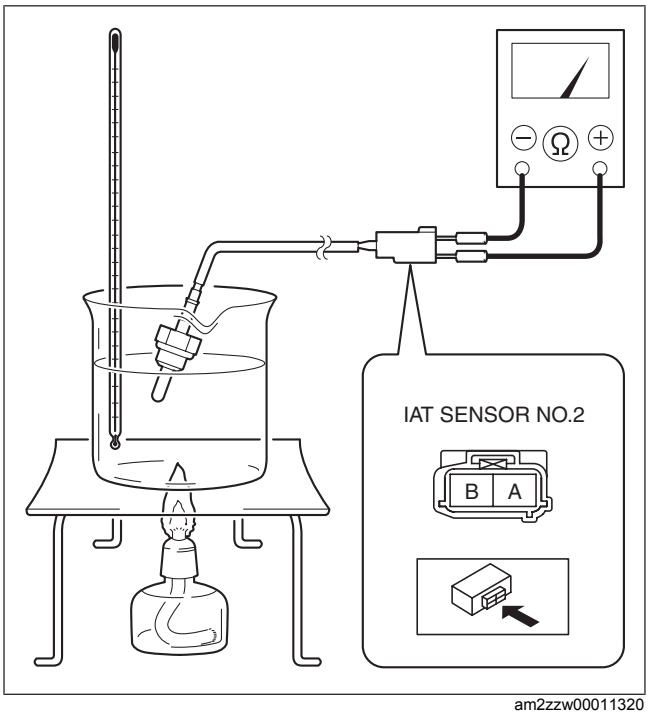


am2zzw00011320

5. Measure the resistance between IAT sensor No.2 terminals A and B.
   - If not as specified, replace the IAT sensor No.2. (See INTAKE AIR TEMPERATURE (IAT) SENSOR NO.2 REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Resistance

Water temperature (°C {° F})	Resistance (Kilohms)
0 {32}	Approx. 15.00
50 {122}	Approx. 2.20
100 {212}	Approx. 0.508

Specification (Reference)

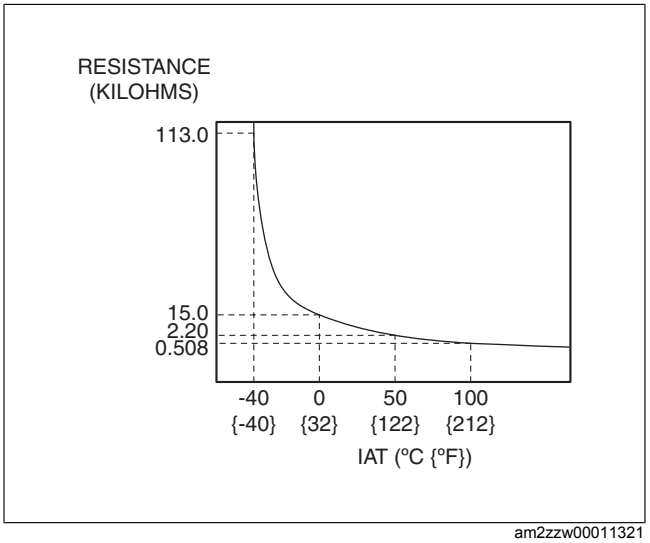

am2zzw00011321