
ENGINE OIL TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5]

id0140q2216800

Resistance Inspection

Note
- The engine oil temperature sensor and engine oil pressure sensor cannot be removed as a single unit. When replacing the engine oil temperature sensor or engine oil pressure sensor, replace the engine oil temperature sensor/engine oil pressure sensor.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT [SKYACTIV-D 1.5].)
3. Remove the following parts: (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
   - Fresh-air duct
   - Air cleaner
   - Air hose
   - Air inlet pipe
4. Remove the battery and battery tray (See BATTERY REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
5. Remove the turbocharger air outlet pipe (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
6. Remove the intake shutter valve. (See INTAKE SHUTTER VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
7. Disconnect the engine oil temperature sensor/engine oil pressure sensor connector. (See ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
8. Measure the resistance between engine oil temperature sensor/engine oil pressure sensor terminals E and C.
   - If not as specified, replace the engine oil temperature sensor/engine oil pressure sensor. (See ENGINE OIL TEMPERATURE SENSOR/ ENGINE OIL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

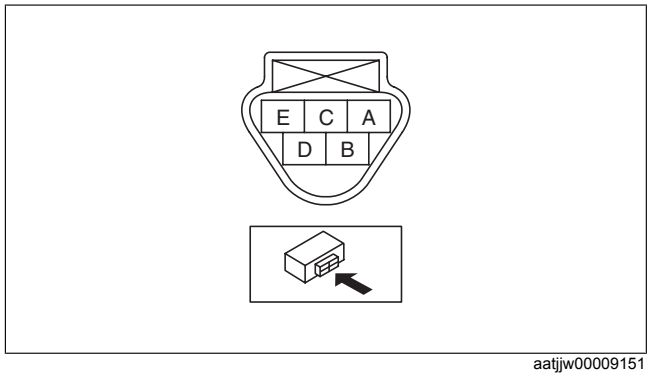


aatjjw00009151

Resistance

Engine oil temperature (°C {°F})	Resistance (Kilohms)
−40 {−40}	Approx. 44.9
0 {32}	Approx. 5.78
25 {77}	Approx. 2.04
140 {284}	Approx. 0.0719

Specification (Reference)

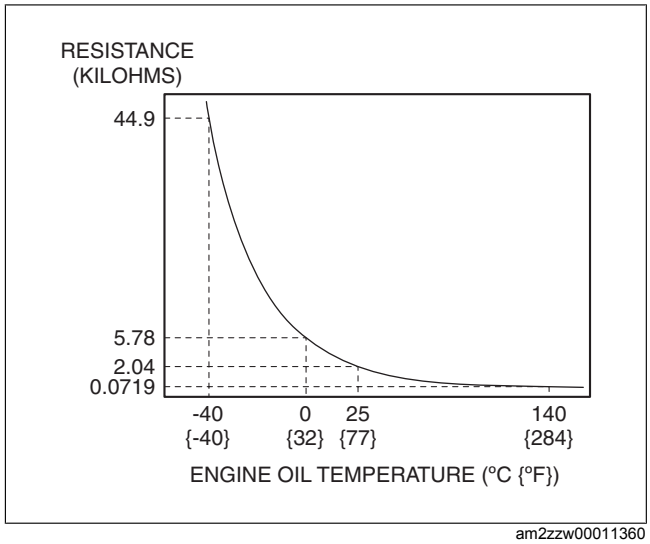

am2zzw00011360