
ENGINE OIL PRESSURE SENSOR INSPECTION [SKYACTIV-D 1.5]

id0140q2216900

Voltage Inspection

Note
- The engine oil temperature sensor and engine oil pressure sensor cannot be removed as a single unit. When replacing the engine oil temperature sensor or engine oil pressure sensor, replace the engine oil temperature sensor/engine oil pressure sensor.

1. Switch the ignition ON (engine off).
2. Measure the voltage at the engine oil temperature sensor/engine oil pressure sensor terminal D.
   - If the voltage is within the specification, go to the next step.
   - If the voltage is not within the specification, replace the engine oil temperature sensor/ engine oil pressure sensor. (See ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

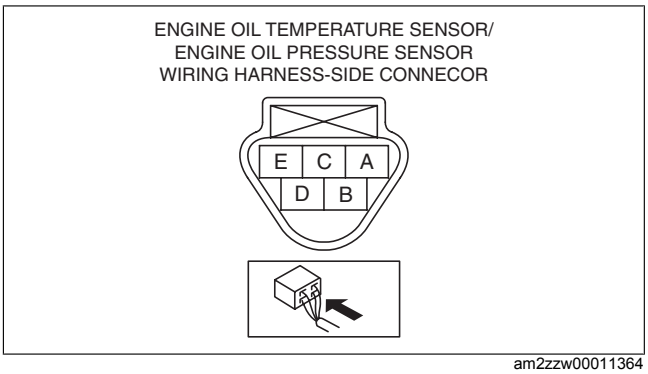


am2zzw00011364

Specification
Approx. 0.5 V

3. Connect the M-MDS to the DLC-2.
4. Start the engine.
5. Access the PID/DATA monitor item EOP using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
6. Measure the voltage at the engine oil temperature sensor/engine oil pressure sensor terminal D when the EOP PID increases.
   - If the voltage does not increase, replace the engine oil temperature sensor/engine oil pressure sensor. (See ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Specification (Reference)

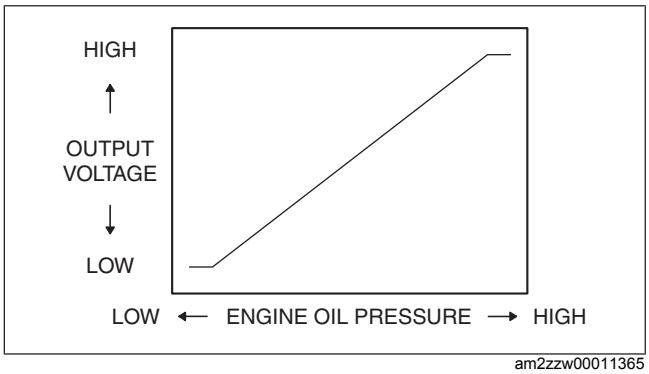

am2zzw00011365