
BLOW-BY HEATER INSPECTION [SKYACTIV-D 1.5]

id0140q2446500


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the blow-by heater connector.

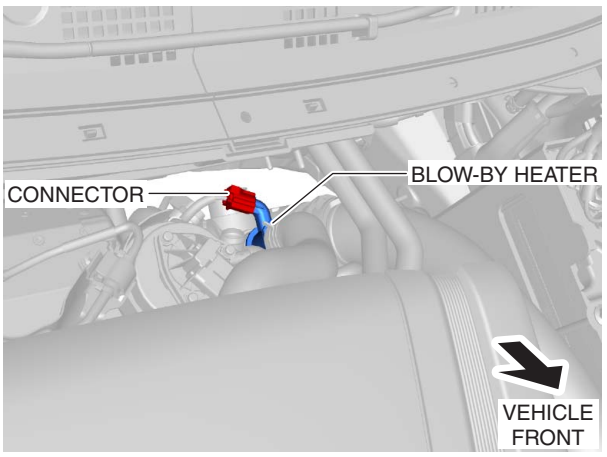

am2zzw00011403

3. Measure the resistance between the blow-by heater terminals A and B.
   - If not as specified, replace the blow-by heater. (See INTAKE-AIR SYSTEM REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

   Blow-by heater resistance
   6—10 ohms [normal temperature]

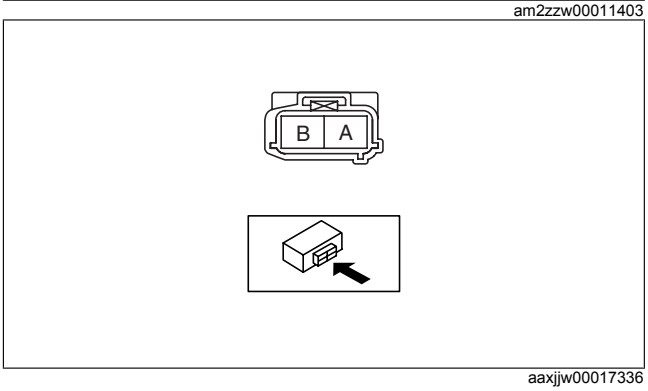

aaxjjw00017336