## LP-EGR CONTROL VALVE POSITION SENSOR INSPECTION [SKYACTIV-D 1.5]


id0140q2497700

### Voltage Inspection

**Note**
- The LP-EGR control valve position sensor is built into the LP-EGR control valve. When replacing the LP-EGR control valve position sensor, replace the LP-EGR control valve.

1. Switch the ignition ON (engine off).
2. Measure the voltage at the LP-EGR control valve terminal B.
   - If the voltage is within the specification, go to the next step.
   - If the voltage is not within the specification, replace the LP-EGR control valve. (See LP-EGR CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)


**Specification**
**1.05—1.35 V**

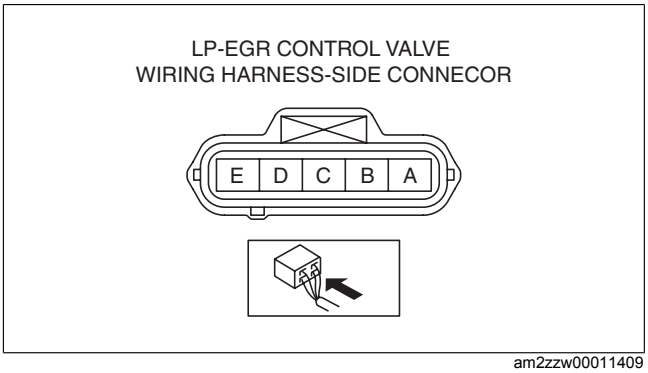

am2zzw00011409

3. Connect the M-MDS to the DLC-2.
4. Access the PID/DATA monitor item LP_EGR_ACT and simulation item LPEGR_DSD using the M-MDS. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
5. Verify that the LP_EGR_ACT monitor value conforms to the LPEGR_DSD monitor value when the simulation item LPEGR_DSD is set from 0 % to 80 %.
   - If not as verified, replace the LP-EGR control valve. (See LP-EGR CONTROL VALVE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

**Specification (Reference)**

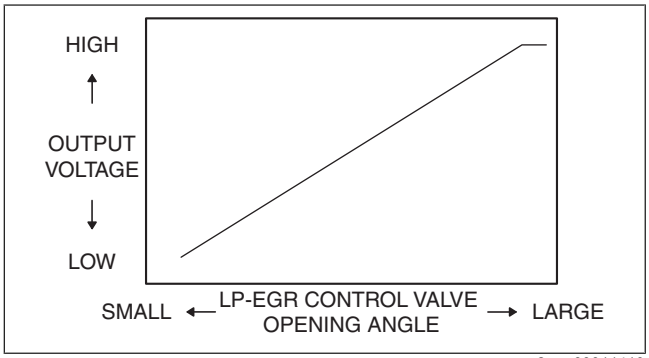

am2zzw00011410