BOOST AIR TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5]


id0140q2736800

Note

- Because the boost air temperature sensor is integrated with the MAP sensor, replacing the boost air temperature sensor includes replacement of the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Resistance Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Measure the resistance between MAP sensor/boost air temperature sensor terminals A and B.
   - If not as specified, replace the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

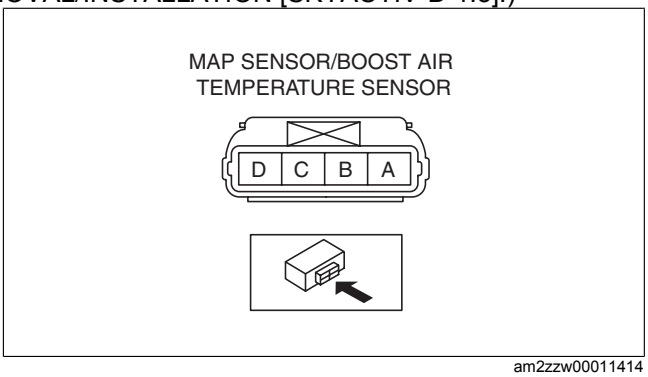


am2zzw00011414

Resistance

IAT (°C {°F})	Resistance (Kilohms)
0	Approx. 5.9
20 {68}	Approx. 2.5
80 {176}	Approx. 0.323

Specification (Reference)

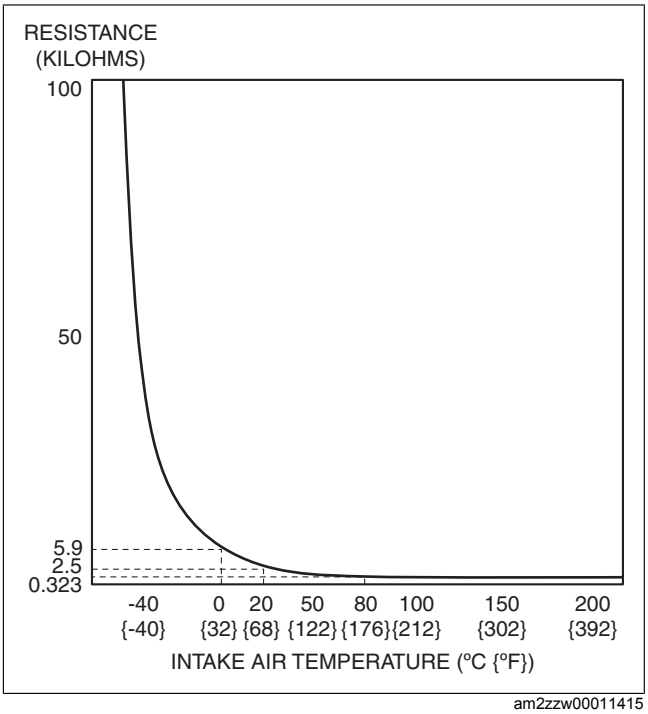

am2zzw00011415