
NEUTRAL SWITCH INSPECTION [SKYACTIV-D 1.5]

id0140q2800800

Continuity inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)
2. Remove the air cleaner, the air hose, and the fresh-air duct assembly. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Remove the neutral switch. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F65M-R].) (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F66M-R].)
4. Inspect for continuity between neutral switch terminals A and D.
   - If not as specified, replace the neutral switch. (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F65M-R].) (See NEUTRAL SWITCH REMOVAL/INSTALLATION [F66M-R].)

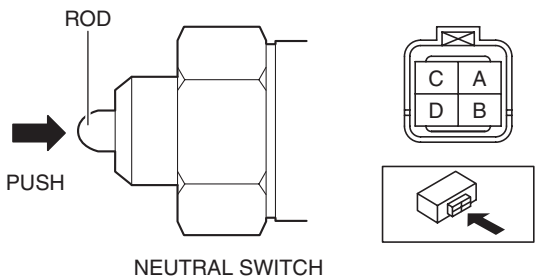

NEUTRAL SWITCH

Measured condition	Continuity
Rod pushed	Continuity detected
Rod not pushed	No continuity

am2zzw00011419