
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR INSPECTION [SKYACTIV-D 1.5]

id0140q2800900

Note
- Because the MAP sensor is integrated with the boost air temperature sensor, replacing the MAP sensor includes replacement of the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Visual inspection
1. Disconnect the negative battery cable.(See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Visually inspect the MAP sensor/boost air temperature sensor for the following malfunction:
   - Damage, cracks, dirt
     - — If there is any malfunction, repair or replace the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

Voltage inspection
1. Switch the ignition ON (engine off).
2. Measure the voltage at the MAP sensor/boost air temperature sensor terminal D.
   - If the voltage is within the specification, go to the next step.
   - If the voltage is not within the specification, replace the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

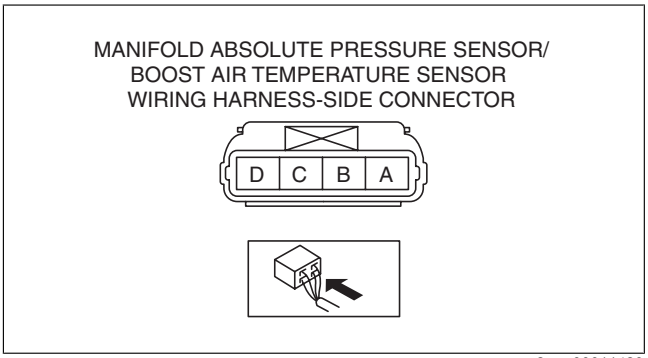


am2zzw00011420

Specification
Approx. 1.6 V

3. Connect the M-MDS to the DLC-2.
4. Access the PID/DATA monitor item MAP_DSD using the M-MDS.(See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
5. Start the engine.
6. Measure the voltage at the MAP sensor/boost air temperature sensor terminal D when the MAP_DSD PID increases.
   - If the voltage does not increase, replace the MAP sensor/boost air temperature sensor. (See MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5].)

Specification (Reference)

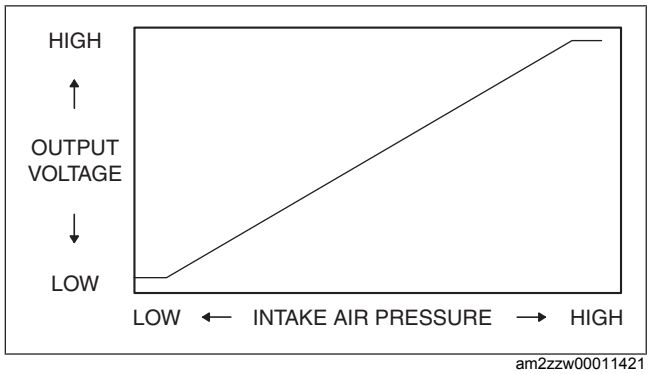

am2zzw00011421