
MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR/BOOST AIR TEMPERATURE SENSOR REMOVAL/ INSTALLATION [SKYACTIV-D 1.5]

id0140q2801000

Note


- The MAP sensor is integrated with the boost air temperature sensor. When replacing the MAP sensor or the boost air temperature sensor, replace the MAP sensor/boost air temperature sensor.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the bolt.
3. Remove the bracket.

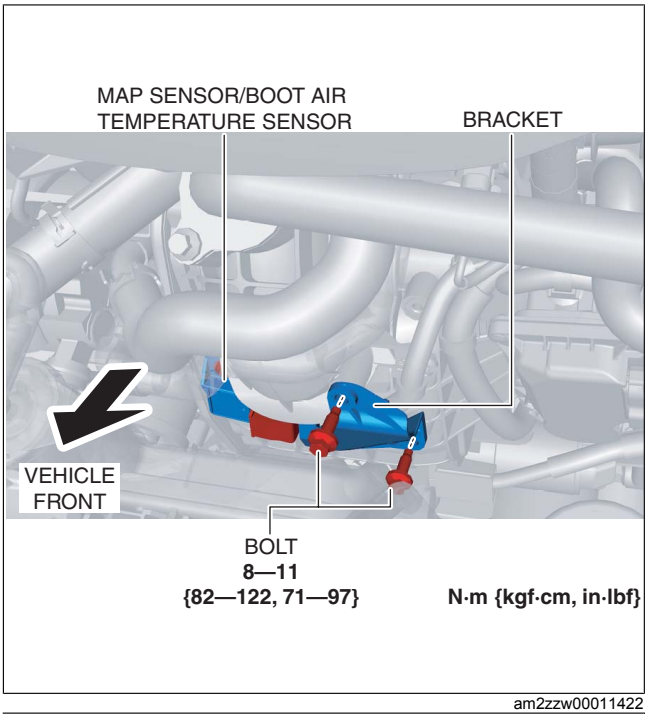


am2zzw00011422

4. Disconnect the MAP sensor/boost air temperature sensor connector.
5. Remove the screw.

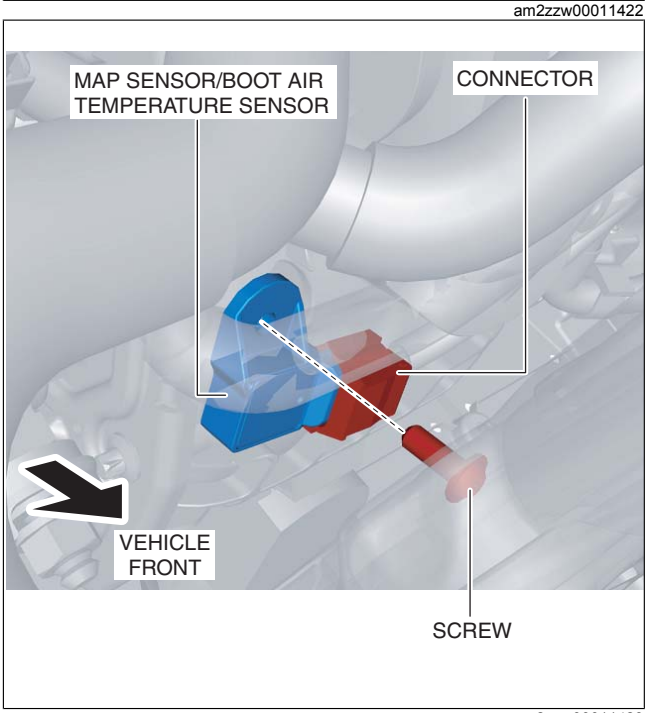

am2zzw00011423

6. Remove the MAP sensor/boost air temperature sensor.
7. Install in the reverse order of removal.

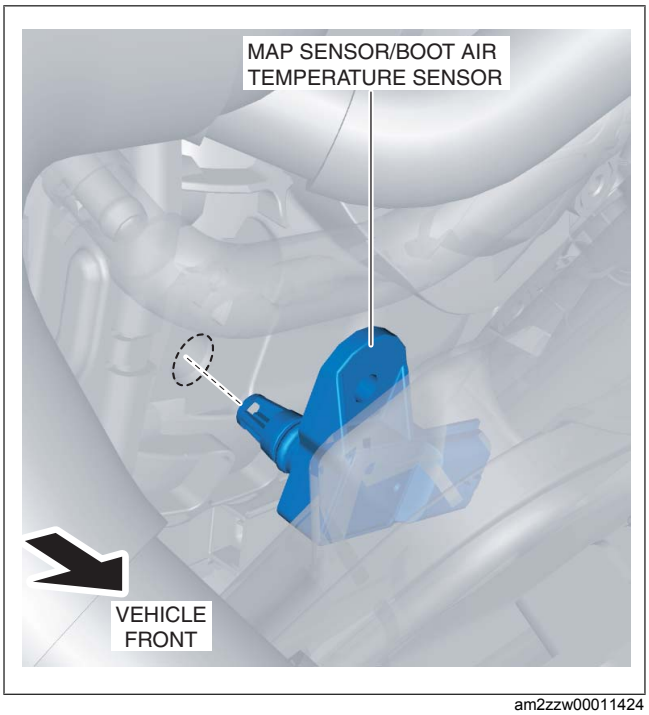

am2zzw00011424