
FUEL TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 1.5]

id0140q2806400

Resistance Inspection

Note
- The fuel temperature sensor cannot be removed as a single unit. When replacing the fuel temperature sensor, replace it together with the lower case as a single unit.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
3. Disconnect the fuel temperature sensor connector.
4. Measure the resistance between fuel temperature sensor terminals A and B.(See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)
   - If not as specified, replace the lower case. (See LOWER CASE REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)

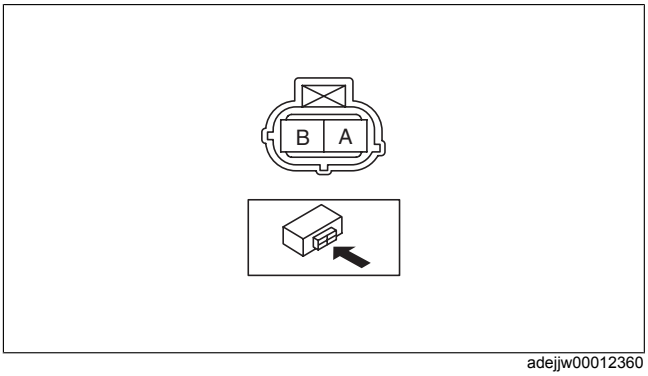


adejjw00012360

Resistance

Fuel temperature (°C {°F})	Resistance (Kilohms)
20 {68}	Approx. 2.45

Specification (Reference)

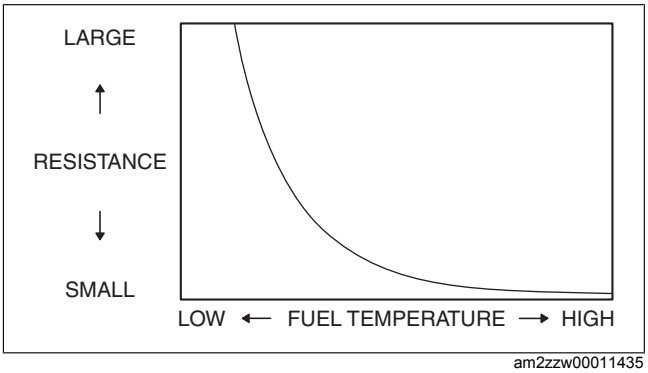

am2zzw00011435