
AIR FUEL RATIO (A/F) SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 1.5]

id0140q2899700

Warning
- **A hot engine and exhaust system can cause severe burns. Turn off the engine and wait until they are cool before removing the exhaust system.**

Caution
- **Do not allow flammable objects such as the taping for bundling wiring harness to come into contact with the catalytic converter.**

Note
- If the A/F sensor is replaced, perform the Operation After Replacing A/F Sensor procedure. (See Operation After Replacing A/F Sensor.)
- If penetrant lubricating spray penetrates the airflow hole of the A/F sensor, it could cause interference with the A/F sensor function.
- When removing the A/F sensor, wrap a rag around the lower position so that penetrant lubricating spray does not get sprayed into the airflow hole.

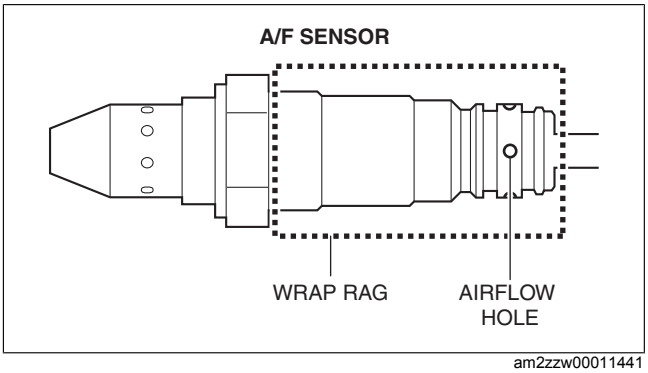

am2zzw00011441

Operation After Replacing A/F Sensor


1. If the A/F sensor is replaced, perform the following procedure.

Step	Action	Page
1	Perform the A/F sensor data reset procedure.	(See AIR FUEL RATIO (A/F) SENSOR DATA RESET [SKYACTIV-D 1.5].)
2	Switch the ignition off.	—
3	Wait for 20 s.	—
4	Perform the KOEO self test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)
5	Start the engine.	—
6	Verify that the check engine light does not illuminate.	—
7	Perform the KOER self test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)
8	Perform the compulsory diesel particulate filter regeneration procedure.	(See COMPULSORY DIESEL PARTICULATE FILTER REGENERATION [SKYACTIV-D 1.5].)
9	Perform the following procedure. **Caution** **• If the M-MDS is connected to the DLC-2, disconnect the M-MDS. Otherwise, it could adversely affect safety when performing the procedure.** 1. Vehicle is traveling at a speed of 50 km/h {31 mph} or more. 2. Release the accelerator pedal at a vehicle speed of **50 km/h {31 mph} or more** and maintain this condition for **6 s**.	—
10	Verify that the PID “O2S11_CAL” value is other than 0.	(See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 1.5].)

A/F Sensor Removal/Installation


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)

2. Lift up the vehicle.
3. Remove the plate (exhaust system). (See EXHAUST SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 1.5].)
4. Disconnect the A/F sensor connector.

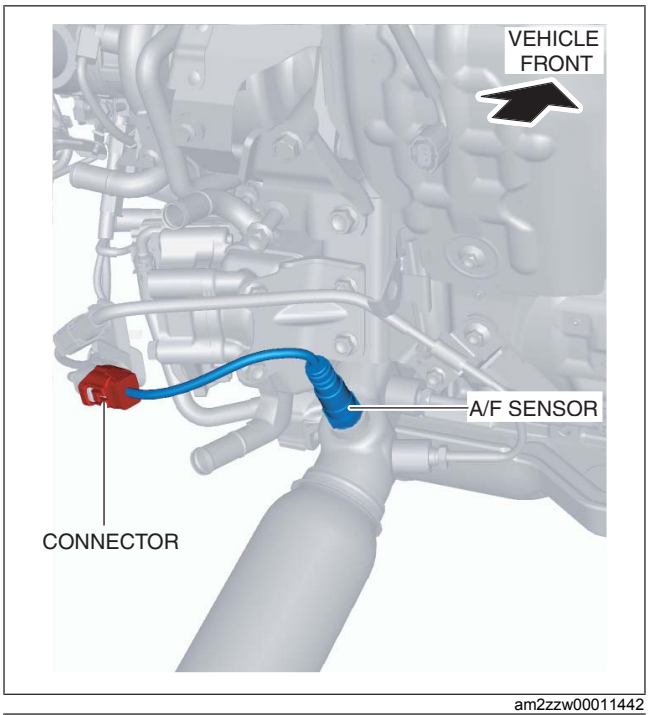

am2zzw00011442

5. Remove the A/F sensor using the SST.
6. Install in the reverse order of removal.
7. Perform the Operation After Replacing A/F Sensor procedure. (See Operation After Replacing A/F Sensor.)

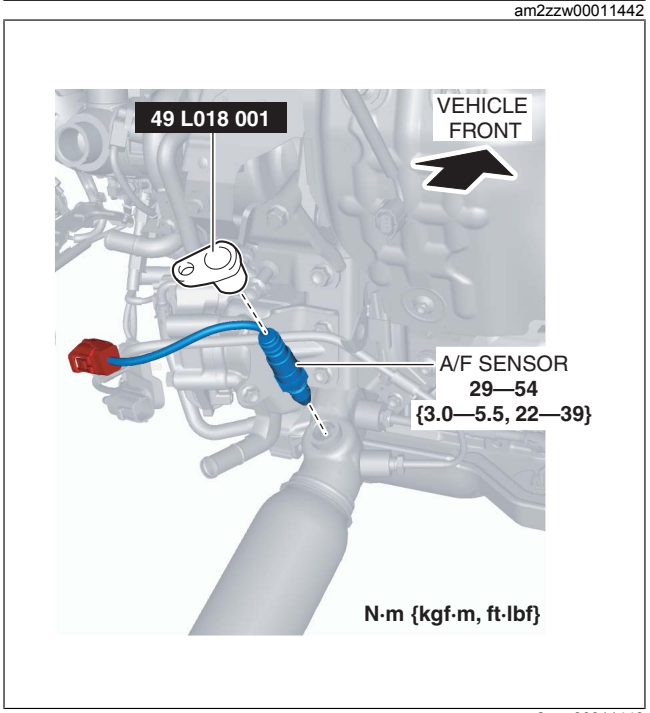

am2zzw00011443