MASS AIR FLOW (MAF) SENSOR/INTAKE AIR TEMPERATURE (IAT) SENSOR NO.1 REMOVAL/ INSTALLATION [SKYACTIV-D 1.5]

id0140q2900300

Note

- Because the IAT sensor No.1 is integrated in the MAF sensor, replacing the IAT sensor No.1 includes replacement of the MAF sensor/IAT sensor No.1.
- If the MAF sensor/IAT sensor No.1 is replaced, perform the Operation After Replacing MAF Sensor/IAT Sensor No.1 procedure. (See Operation After Replacing MAF Sensor/IAT Sensor No.1.)


Operation After Replacing MAF Sensor/IAT Sensor No.1

1. MAF sensor/IAT sensor No.1 is replaced, perform the following procedure.

Step	Action	Page
1	Perform the “MASS AIR FLOW (MAF) SENSOR DATA RESET” procedure.	(See MASS AIR FLOW (MAF) SENSOR DATA RESET [SKYACTIV-D 1.5].)
2	Switch the ignition off.	—
3	Wait for 20 s.	—
4	Perform the KOEO self test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)
5	Start the engine.	—
6	Verify that the check engine light does not illuminate.	—
7	Perform the KOER self test procedure.	(See KOEO/KOER SELF TEST [SKYACTIV-D 1.5].)
8	Perform the “FUEL INJECTOR INJECTION AMOUNT CORRECTION” procedure.	(See FUEL INJECTOR INJECTION AMOUNT CORRECTION [SKYACTIV-D 1.5].)
9	Clear the DTCs.	(See CLEARING DTC [SKYACTIV-D 1.5].)

MAF Sensor/IAT Sensor No.1 Removal/Installation

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/ CONNECTION.)
2. Disconnect the MAF sensor/IAT sensor No.1 connector.
3. Remove the screws.
4. Remove the MAF sensor/IAT sensor No.1.
5. Install in the reverse order of removal.
6. Perform the Operation After Replacing MAF Sensor/IAT Sensor No.1. (See Operation After Replacing MAF Sensor/IAT Sensor No.1.)

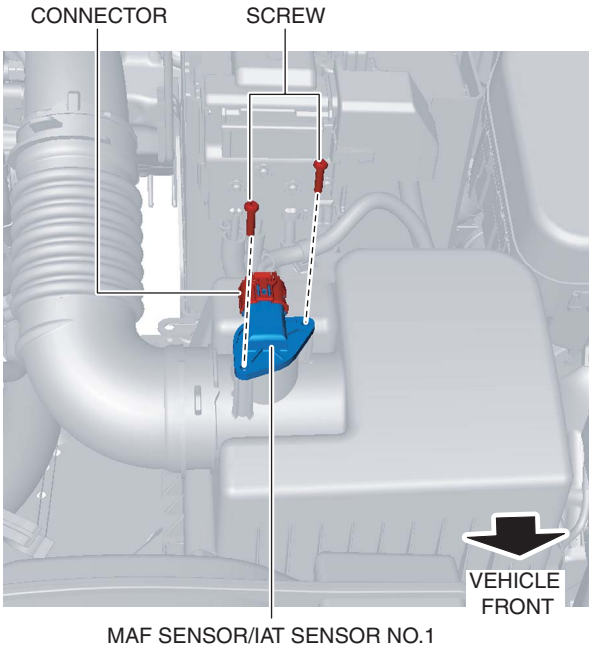

am2zzw00011444