DC-DC CONVERTER CONTROL [SKYACTIV-D 1.5]


id0140z5004300

Note
- For the DC-DC converter control for vehicles with i-ELOOP, refer to the [i-ELOOP]. (See i-ELOOP [i-ELOOP].)

Without i-ELOOP


Outline
- Stability of the power supply to the cabin has been realized by preventing decreases in the power supply due to battery voltage decreases while the engine is restarted by the i-stop control.
- When the engine is restarted by the i-stop control, the PCM sends a battery voltage (DC-DC converter downstream voltage) boost request signal to the DC-DC converter.

Block Diagram

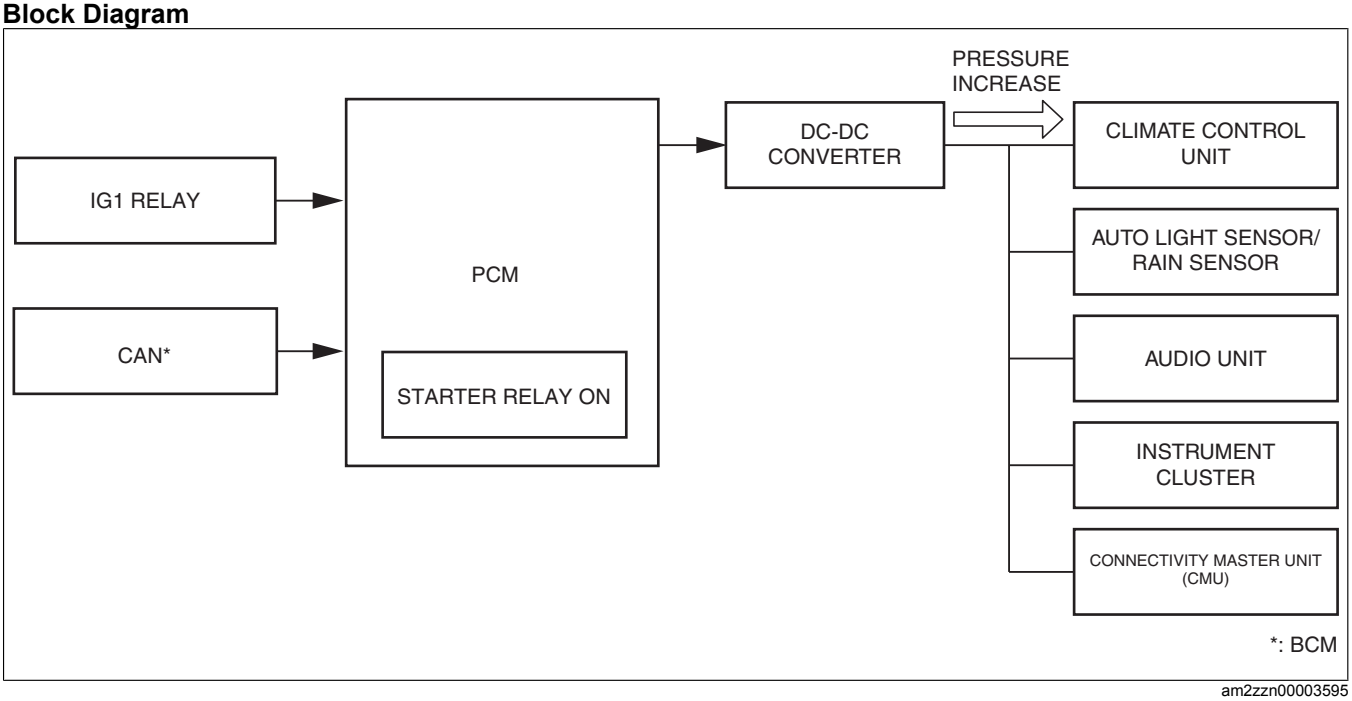

am2zzn00003595

Operation
- When the engine is restarted by the i-stop control, the PCM sends a voltage boost request signal to the DC-DC converter so that the DC-DC converter downstream voltage is maintained at 11.5—12.5 V.

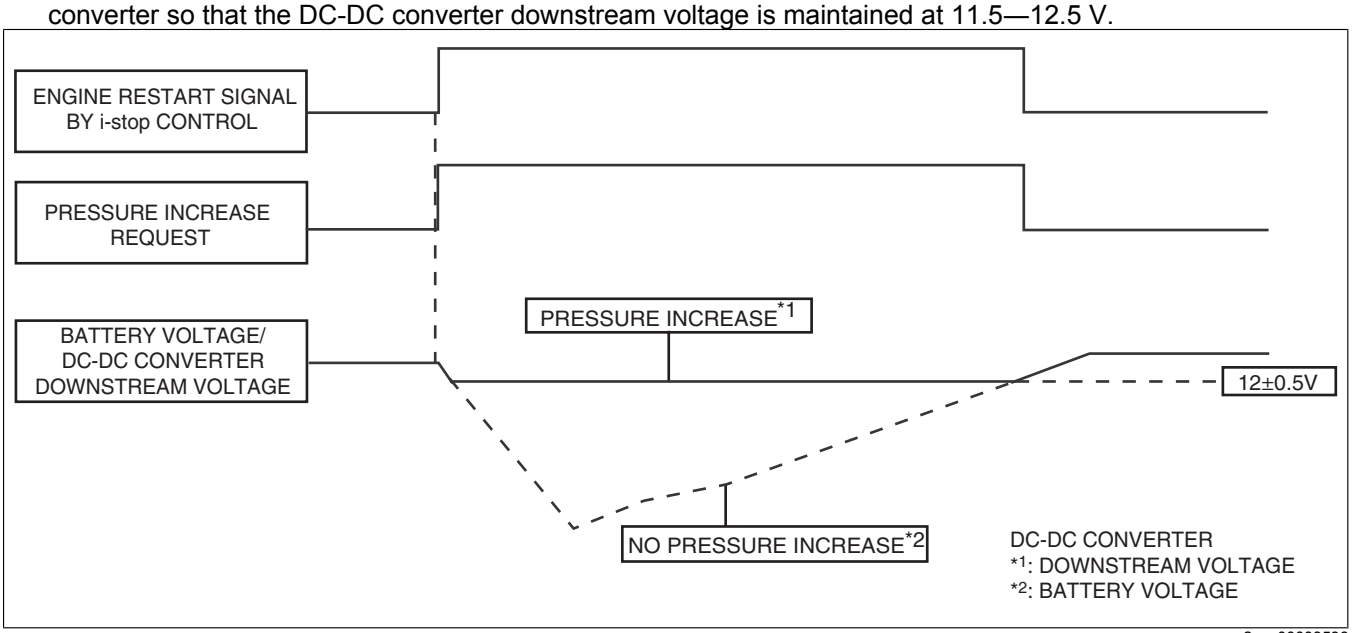

am2zzn00003596