CURRENT SENSOR [SKYACTIV-D 1.5]


id0140z5005000

Purpose/Function

- The battery conditions are monitored as basic information for determining the generator output current.
- The battery condition is send to the PCM by LIN communication via the BCM.

Construction


- Installed to the negative battery cable.
- The current sensor has adopted shunt resistance on the detection area and a thermistor for detecting the battery condition.

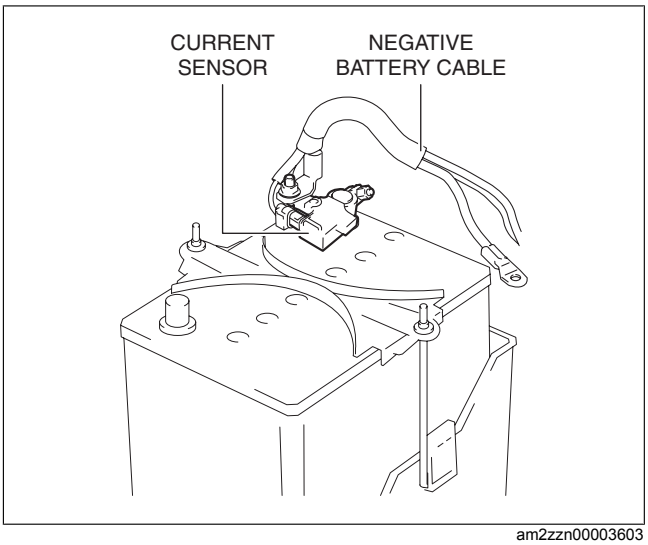

am2zzn00003603

Operation

- The battery charge/discharge flow, battery voltage, and the battery terminal temperature are send to the PCM by LIN communication via the BCM.

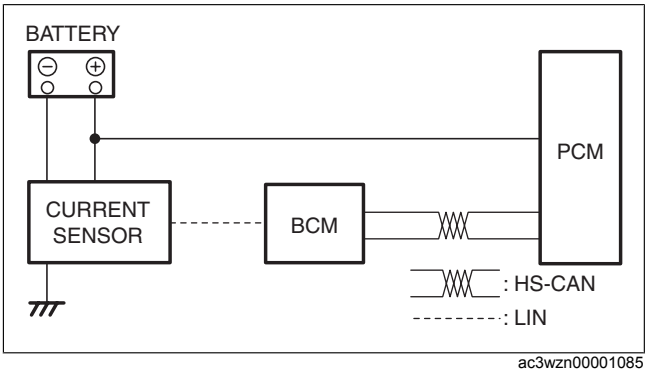

ac3wzn00001085

Fail-safe

- Not applicable