FUEL PRESSURE SENSOR [SKYACTIV-D 1.5]


id0140z5006100

Purpose/Function

- Detects the fuel pressure in the common rail as basic information for mainly determining the fuel injection amount.
- Detects the fuel pressure in the common rail and sends it to the PCM as a fuel pressure signal.

Construction


- Installed on the common rail.
- A piezoelectric element has been adopted as the detecting element for detecting the fuel pressure.

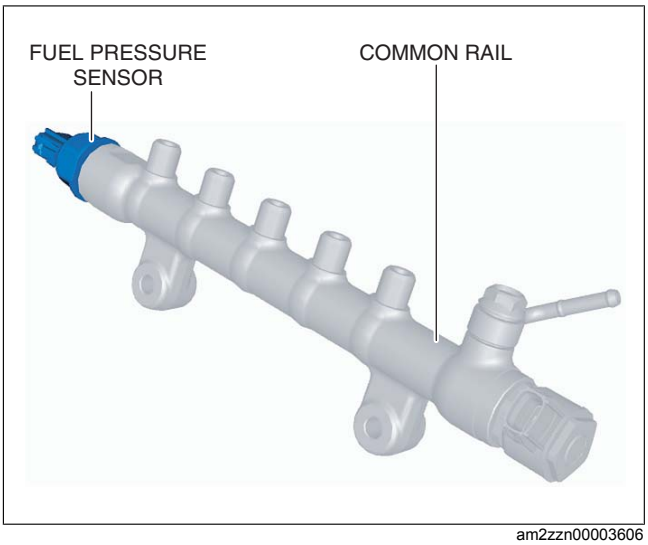

am2zzn00003606


Operation

- Sends the signal, which fluctuates according to the fuel pressure, to the PCM.

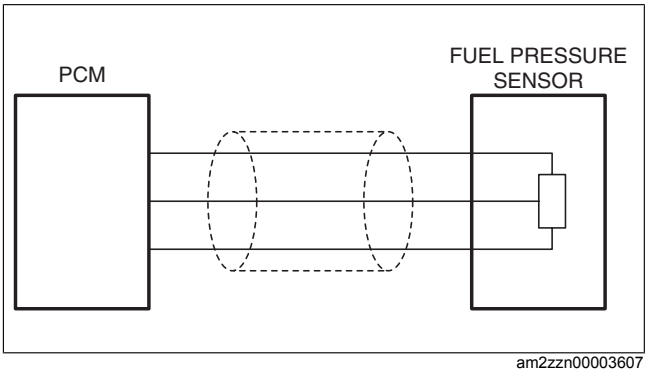

am2zzn00003607

Fuel pressure sensor characteristic

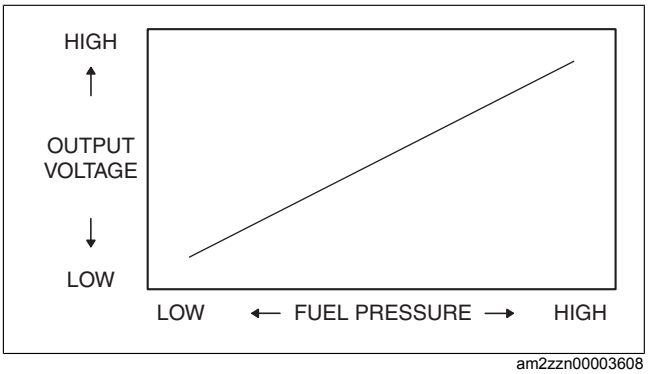

am2zzn00003608

Fail-safe

DTC No.	Fail-safe function
P0087:00	• Inhibits the EGR control. • Increase the idle speed. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)

DTC No.	Fail-safe function
P0088:00	• Inhibits the EGR control.
P0191:00	• Inhibits the auto DPF regeneration control.
P0192:00	• Inhibits the compulsory DPF regeneration control.
P0193:00	• Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)
P0698:00	• Limits the engine torque.
P0699:00	• Inhibits the EGR control. • Fully open the intake shutter valve. • Inhibits engine-stop by operating the i-stop function.