ENGINE COOLANT TEMPERATURE (ECT) SENSOR [SKYACTIV-D 1.5]


id0140z5006200

Purpose/Function

- Detects the ECT as basic information for mainly determining the fuel injection amount.
- Detects the ECT and sends it to the PCM as an ECT signal.

Construction


- Installed on the water outlet case.
- A thermistor has been adopted as the detecting element for detecting the ECT.

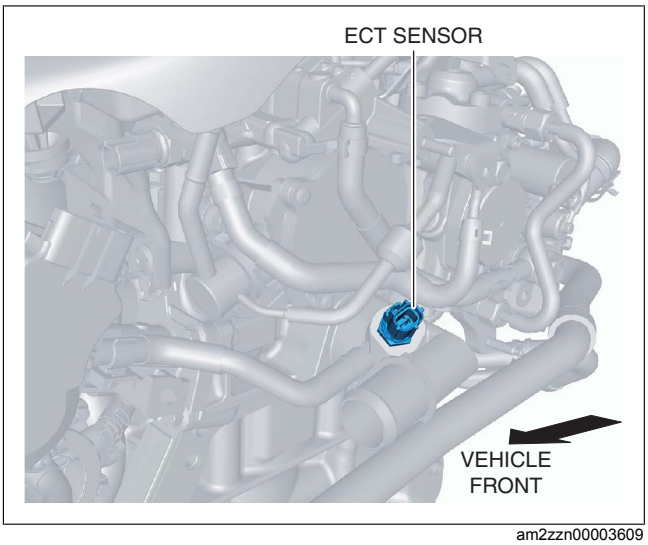

am2zzn00003609


Operation

- Sends the signal, which fluctuates according to the ECT, to the PCM.

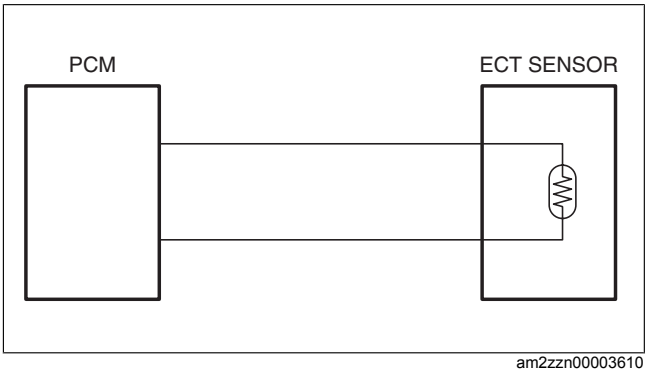

am2zzn00003610

ECT sensor characteristic

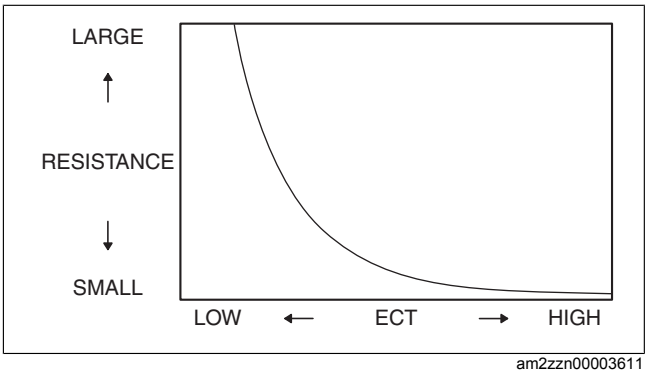

am2zzn00003611

Fail-safe

DTC No.	Fail-safe function
P0116:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Increase the idle speed. • Inhibits the A/C control. • Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)
P0117:00	
P0118:00	