CRANKSHAFT POSITION (CKP) SENSOR [SKYACTIV-D 1.5]


id0140z5006300

Purpose/Function

- Detects the crankshaft speed as basic information for mainly determining the fuel injection timing.
- Detects the crankshaft speed and sends it to the PCM as a CKP signal.

Construction


- Installed on the side of the cylinder block (right side).
- A MR (Magnetic Resistance) element has been adopted as the detecting element for detecting the crankshaft speed.

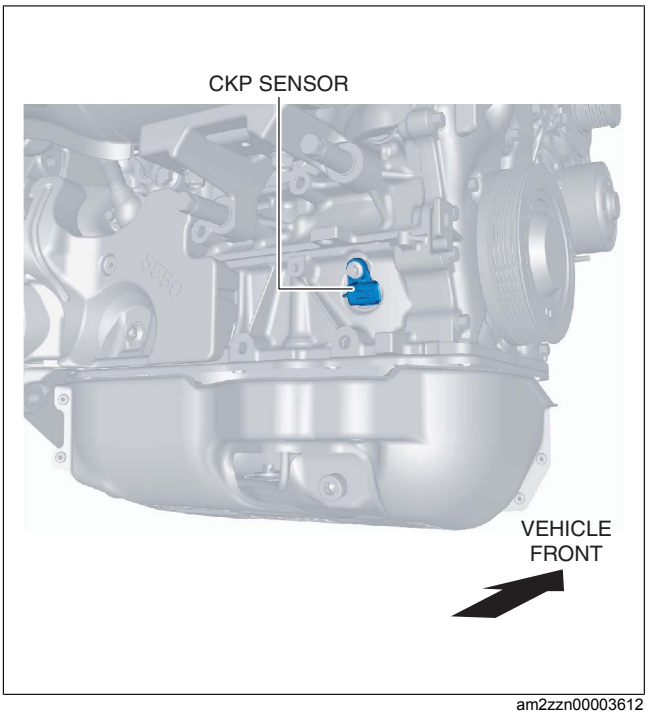

am2zzn00003612


Operation

- Sends the signal, which fluctuates according to the crankshaft speed, to the PCM.

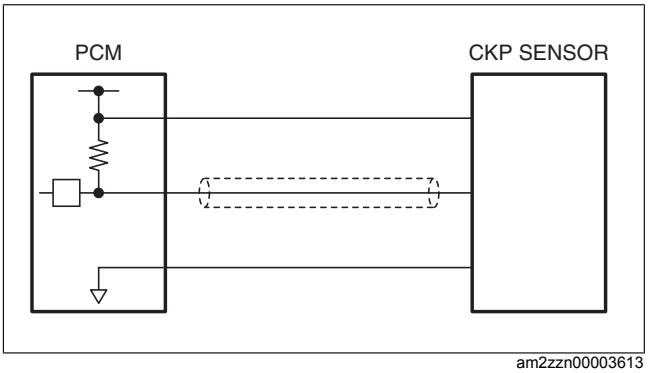

am2zzn00003613

CKP sensor characteristic

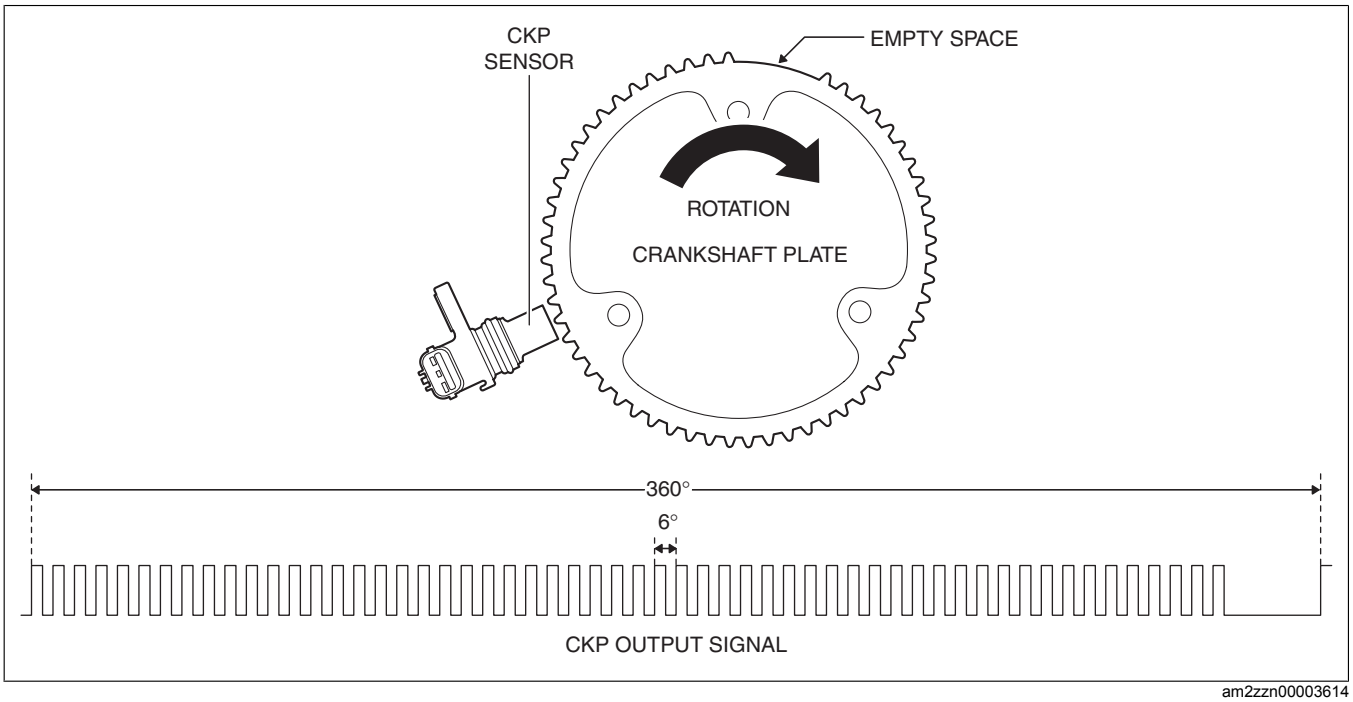

am2zzn00003614

Fail-safe

DTC No.	Fail-safe function
P0016:00	• Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)
P0336:00	• Inhibits engine-stop by operating the i-stop function.
P0339:00	
P0337:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Fully open the intake shutter valve. • Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)