MAIN RELAY [SKYACTIV-D 1.5]


id0140z5008300

Purpose/Function

- Supplies power to each part.
- Supplies battery voltage to each part based on the signals from the PCM even though the ignition is switched on or off.

Construction


- Installed in the relay and fuse block.

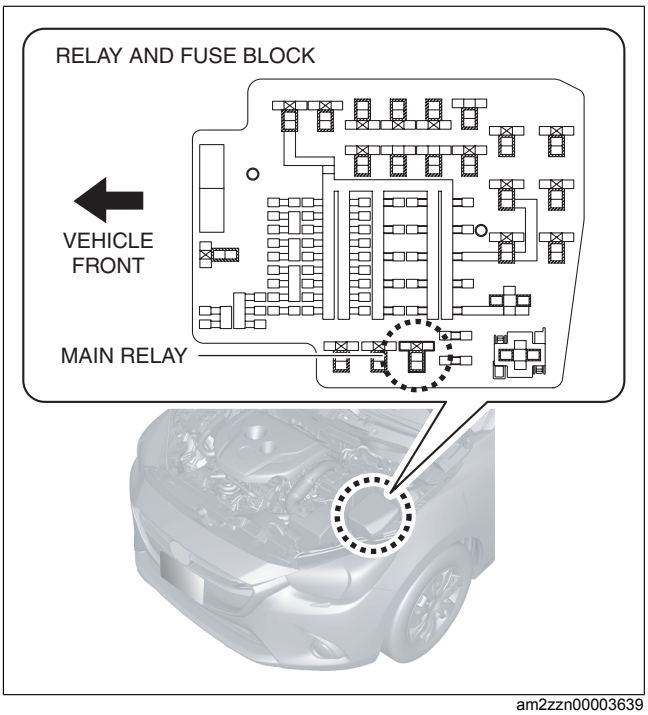

am2zzn00003639

Operation

- After the contact point is on battery voltage is supplied to the coil based on the signals from the PCM.

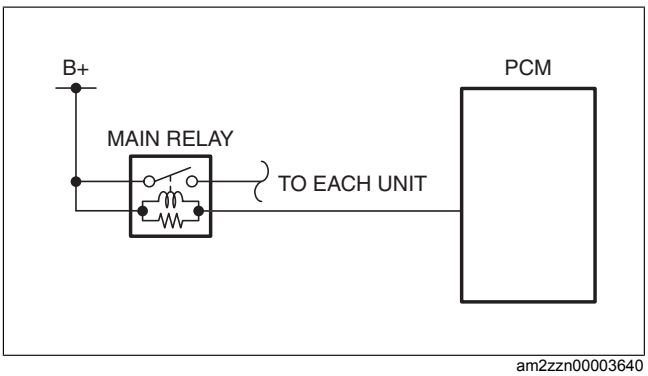

am2zzn00003640

Fail-safe

- Not applicable