i-stop INDICATOR LIGHT (GREEN) [SKYACTIV-D 1.5]


id0140z5008600

Purpose, Function

- If the i-stop (engine stop control) permit condition is met while the vehicle is being driven, the i-stop indicator light (green) illuminates to inform the driver that an engine-stop by the i-stop control is permitted. In addition, if the engine cannot be stopped by the i-stop control due to insufficient depression of the brake pedal after the vehicle is stopped, the light flashes to warn the driver to further depress the brake pedal.
- The light illuminates based on the i-stop (engine stop control) permit conditions.

Construction


- The i-stop indicator light (green) is built into the instrument cluster.

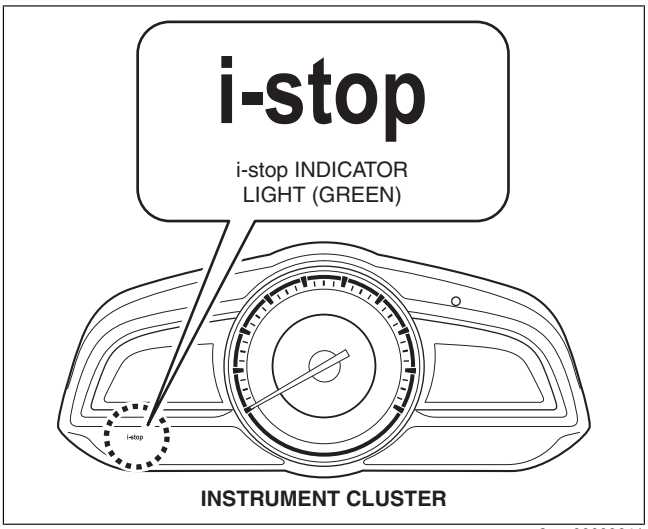

am2zzn00003641

Operation

- The illumination/flashing conditions of the i-stop indicator light (green) differ depending on the i-stop (engine-stop control) permit condition.
- The illumination/flashing conditions of the i-stop indicator light (green) are as follows:

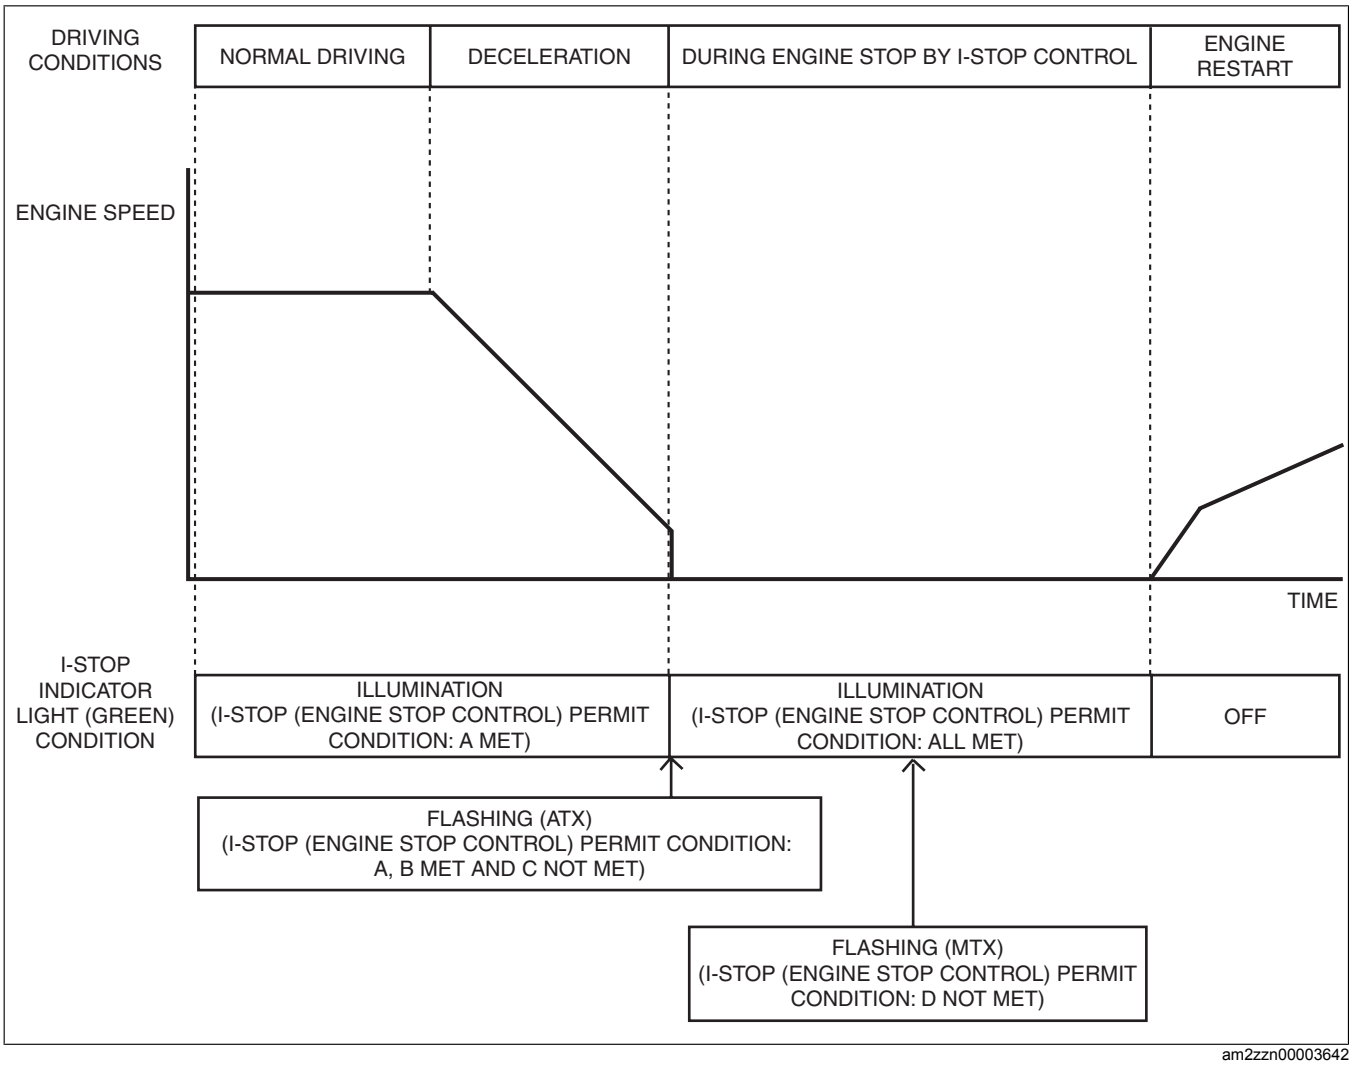

am2zzn00003642

i-stop indicator light (green) illumination/ flashing condition determination	i-stop (engine-stop control) permit condition item	ATX	MTX
A	Cabin temperature (with full-auto air conditioner)	Difference between target temperature in cabin and temperature in cabin is within a certain value (A/C cabin temperature control is performed)	
	A/C temperature (with full-auto air conditioner)	Setting other than MIN	
	Warm up condition (with manual air conditioner)	Ambient temperature is **10 °C {50 °F} or more** or engine coolant temperature is **60 °C {140 °F} or more**	
	Cold condition (with manual air conditioner)	Ambient temperature is **20 °C {68 °F} or less** or evaporator temperature is specified value or less	
	Ambient temperature	**-10—50 °C {14—122 °F}**	
	i-stop OFF switch	OFF	
	Vehicle speed history	**3 km/h {2 mph} or more**	**4 km/h {2.5 mph} or more**
	Battery charge condition	**65.7% or more**	
	Battery fluid temperature	**0—70 °C {32—158 °F}**	
	Battery voltage	**11.2 V or more**	
	MODE dial	Except DEFROSTER	
	Door (driver side)	Closed	
	Bonnet	Closed *2	
	Seat belt (driver side)	Fastened*3	
	System condition	i-stop related module is normal	
	Fast idle increase	Completed	
	DPF regeneration	Completed	
	Fuel injection amount learning	Completed	
	Battery condition learning	Completed	
	Steering angle sensor initialization setting	Completed	Not applicable
	DC-DC converter (i-ELOOP) current output	**25 A or less**	
	i-ELOOP control condition	Bypass mode not operating	
	Capacitor (i-ELOOP) voltage	**14 V or more**	
	Engine coolant temperature	**30—110 °C {86—230 °F}**	
	Intake air temperature	**100°C {212 °F} or less**	
	TFT	**20—117 °C {68—242 °F}**	Not applicable
	Altitude	**1,800 m {5,906 ft} or less** (BARO: **81.5 kPa {0.831 kgf/cm^2, 11.8 psi} or less**)	
B	Vehicle speed	**0 km/h {0 mph}**	**3 km/h {2 mph} or less**
	Vehicle conditions	Vehicle stopped in D position*1	Not applicable
	Brake pedal	Brake pedal depressed in D position or M position	Not applicable
	Accelerator pedal	Released	
	Clutch pedal	Not applicable	Released
	Steering speed angle	**15 deg/sec or less**	
	Steering angle	**-65—65 °**(center) After EPS control module learned center value	Not applicable
	Steering torque	**1.1 N·m {11 kgf·cm, 9.7 in·lbf} or less**	
	Door (front, rear)	Closed	
	Trunk (4SD)/Liftgate (5HB)	Closed	
	Power brake unit vacuum	**−45 kPa {−0.46 kgf/cm^2, −6.5 psi} or less**	
	Vehicle inclination angle	**Less than ±7%** when level	

i-stop indicator light (green) illumination/ flashing condition determination	i-stop (engine-stop control) permit condition item	ATX	MTX
C	Brake fluid pressure	Brake fluid pressure is **1.7 MPa {17 kgf/cm^2, 247 psi} or more** while in D or M position	Not applicable
D	Gear position	Not applicable	Neutral

*1 : After the vehicle is stopped, the engine stops if the gear is shifted to N position. In addition, if the gear is shifted to P position after the vehicle is stopped in D position, the engine stop condition by the i-stop control is maintained.
*2 : If the engine is started with the bonnet open, i-stop is inhibited until the engine is stopped.
*3 : If the seat belt is unfastened while the vehicle is stopped, i-stop is inhibited until a vehicle speed record is input once.

- The PCM sends an i-stop indicator light (green) illumination/flashing request to the instrument cluster via CAN communication.