i-stop WARNING LIGHT (AMBER) [SKYACTIV-D 1.5]


id0140z5008700

Purpose, Function

- If the i-stop control inhibits the operation, the i-stop warning light (amber) flashes/illuminates to inform the driver that the i-stop control inhibits the operation.

Construction

- The i-stop warning light (amber) is equipped in the instrument cluster.
- For vehicles with center display, a warning message in the center display is displayed when the i-stop warning light (amber) is illuminated or flashes. For the message content and verification method, refer to the [CENTER DISPLAY]. (See CENTER DISPLAY [WITH CENTER DISPLAY].)

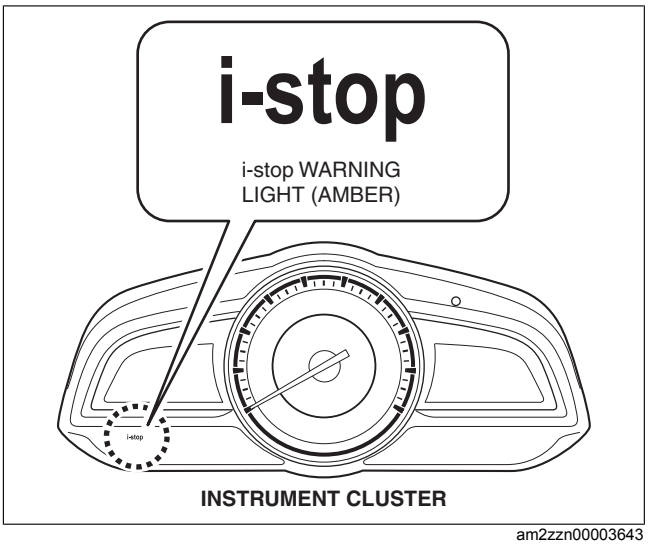

am2zzn00003643

Operation

- The flashing/illumination conditions of the i-stop warning light (amber) are as follows:

i-stop warning light (amber) flashing condition

— Any of the following DTCs are stored:

PCM DTC

- P0555:00, P057F:00, P058A:00, P0615:00, P0A0F:00, P0A8D:00, P0A8F:00, P0A94:00, P2502:00, P2503:00, P2504:00, U0101:00, U0121:00, U0131:00, U0140:00, U0151:00, U0155:00, U0214:00, U0298:00, U1007:00
- For details on DTCs, refer to [Engine On-board Diagnostic System]. (See ON-BOARD DIAGNOSTIC SYSTEM TEST MODE [SKYACTIV-D 1.5].)

TCM DTC

- P0C2C:00, P0C2D:00, P181F:00, P2712:00
- For details on DTCs, refer to [Transmission/Transaxle On-board Diagnostic System]. (See ON-BOARD DIAGNOSTIC SYSTEM MALFUNCTION DETECTION FUNCTION [TCM (EW6A-EL)].)

DSC HU/CM DTC

- B11D4:08, C0020:11, C0020:12, C0020:13, C0020:71, C0023:62, C0030:07, C0031:07, C0031:29, C0031:2F, C0031:64, C0033:07, C0034:07, C0034:29, C0034:2F, C0034:64, C0036:07, C0037:07, C0037:29, C0037:2F, C0037:64, C0039:07, C003A:07, C003A:29, C003A:2F, C003A:64, C0040:64, C0044:49, C0051:62, C0051:64, C0051:67, C0051:85, C0061:28, C0061:54, C0061:64, C0063:28, C0063:54, C0063:64, C006B:00, C1109:64, U0100:00, U0101:00, U0131:00, U0151:00, U0155:00, U0235:00, U0336:00, U0401:00, U0402:00, U0420:00, U0423:00, U0433:00, U0443:00, U0452:86, U3003:08
- For details on DTCs, refer to [Brake On-board Diagnostic System]. (See ON-BOARD DIAGNOSTIC SYSTEM [DSC HU/CM].)

EPS control module DTC

- C200B:61, C200B:2F, C200B:62, C200C:2F, C200D:49, U3000:49, U3000:41, U3000:96, U3000:61, U2011:49, U2011:61, U0121:00, U0415:00, U0001:88, U0100:00, U0401:00, C1B00:2F, C1B00:54, C1B00:61, C1B00:62, C1B00:95
- For details on DTCs, refer to [Steering On-board Diagnostic System]. (See ON-BOARD DIAGNOSTIC SYSTEM [EPS CONTROL MODULE].)

DC-DC CONVERTER (i-ELOOP) DTC (with i-ELOOP)

- P0A12:00, P1794:00

i-stop warning light (amber) illumination condition

— Any one of the following conditions is met:

- Ignition switched ON (check of i-stop control system)
- i-stop OFF switch is on
- Engine stalls due to driver's operation while engine is stopped by i-stop control
- Communication error to PCM and instrument cluster

- The PCM sends an i-stop warning light (amber) flashing/illumination request to the instrument cluster via CAN communication.