
RUN DRY PREVENTION (RDP) CONTROL [SKYACTIV-D 1.5]

id0140z5018400

Outline

- To prevent air from flowing into the fuel line when fuel in the fuel tank decreases, the output is intentionally controlled to warn the driver to supply fuel.

Block Diagram

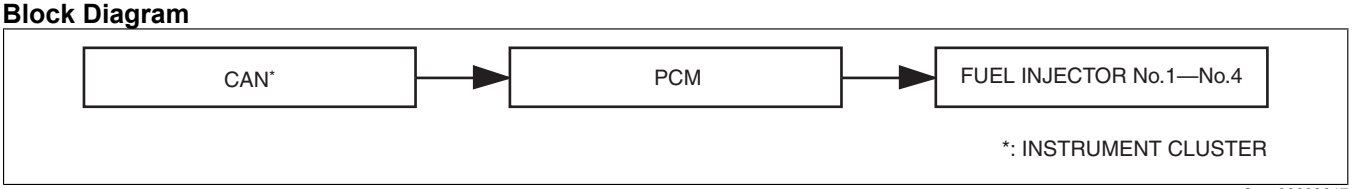

am2zzn00003647

Operation

- The PCM controls the engine output according to the fuel consumption amount after turning fuel gauge segments off (point E).

—: Not applicable

Item	Behavior for remaining fuel level			
Fuel consumption amount from fuel gauge point E*1	**0.0—1.0 L {0.0—1.0 US qt, 0.00—0.87 Imp qt}**	**1.0—2.0 L {1.1—2.1 US qt, 0.9—1.7 Imp qt}**	**2.0—2.1 L {2.12—2.21 US qt, 1.76—1.84 Imp qt}**	**2.1 L {2.2 US qt, 1.8 Imp qt} or more**
Output restriction	—	Fuel injection amount control (Small*2)	Fuel injection amount control (Large*3)	Engine stall*4
DTC recorded in PCM	—	P115A:00	P0313:00	P115B:00

*1 : For fuel gauge point E, refer to the [FUEL GAUGE]. (See FUEL GAUGE.)

*2 : When accelerating, the engine output is suppressed by controlling the fuel injection amount.

*3 : Vibration of the vehicle body occurs due to the intermittent fuel cut.

*4 : If the engine is restarted, driving is possible after **approx. 20 s** have elapsed.