
BLOW-BY HEATER CONTROL [SKYACTIV-D 1.5]

id0140z5028400

Outline

- Operates the blow-by heater at an extremely low temperature to prevent freezing of the moisture in the blow-by gas in the ventilation pipe and blocking the passage.
- The PCM operates the blow-by heater by switching the blow-by heater relay on/off.

Block Diagram

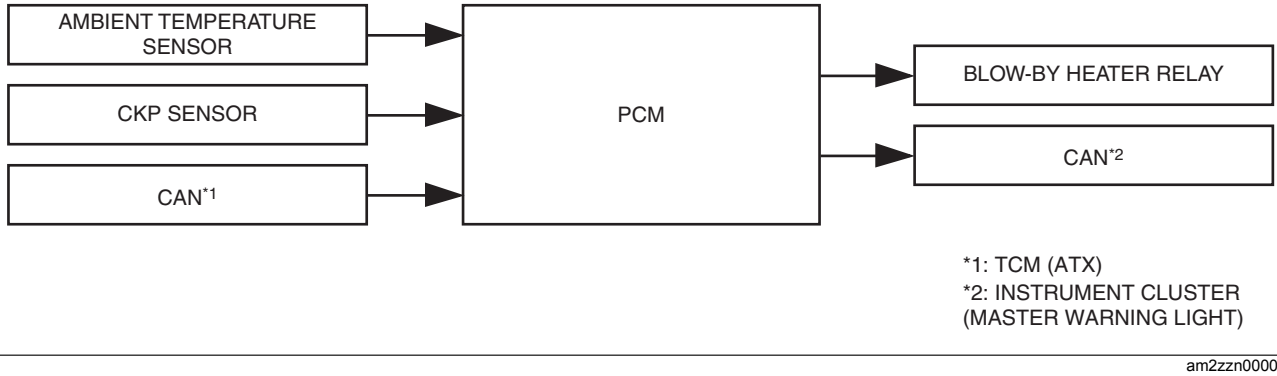

am2zzn00003648

Operation

- The PCM energizes the blow-by heater relay under the following conditions:

Operation condition	Blow-by heater relay energization time	Purpose
At engine start	**1 s**	Blow-by heater relay sticking prevention
Ambient temperature is **less than 0 °C {0 °F}**	Until ambient temperature is **0 °C {0 °F} or more**	Blow-by passage freezing prevention