
STARTER CUT-OFF CONTROL [SKYACTIV-D 1.5]

id0140z5204700

Outline

- The PCM controls energization to the starter relay according to an immobilizer system request to improve security.
- While the selector lever is not in P or N position, starter relay energization using the push button start is inhibited. (ATX)
- When the clutch pedal is not depressed, starter relay energization using the push button start is inhibited. (MTX)

Block Diagram

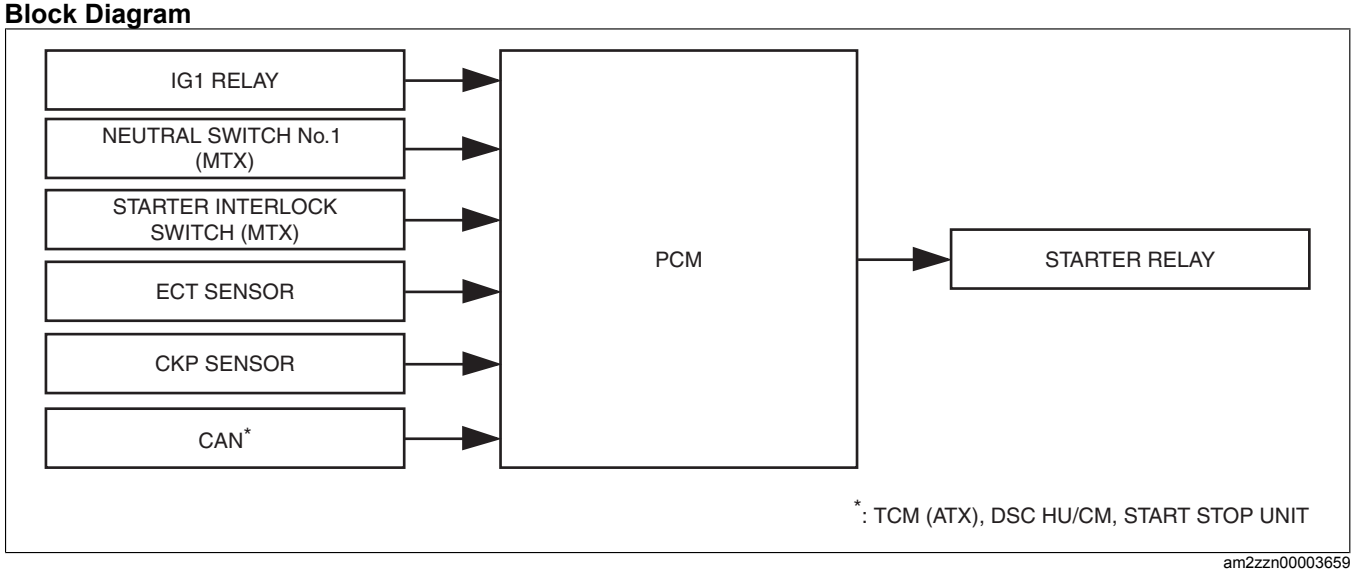

am2zzn00003659


Operation

When engine stop request signal received

- The PCM does not establish a ground with the starter circuit. Therefore, even if the ignition is switched ON (START), the starter motor does not rotate because the starter relay is not energized, and the engine does not start.

When engine stop request signal not received

- The PCM establishes a ground with the starter circuit. Therefore, when the ignition is switched ON (START), the starter relay is energized and the starter motor rotates. As a result, the engine starts normally.

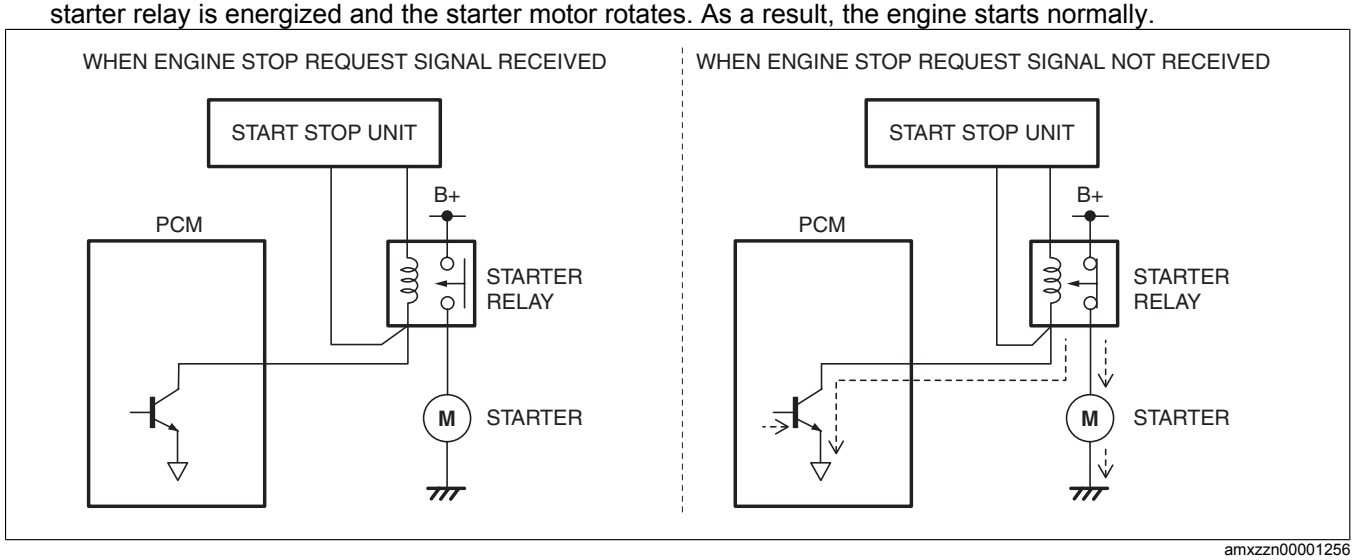

amxzzn00001256

- The PCM turns the starter relay off with the engine speed at the set value or more (value varies depending on engine coolant temperature).

Starter cut-off control during preheating

- During the preheating timer operation by the glow control, energization to the starter relay is cut.