
A/C RELAY [SKYACTIV-D 1.5]

id0140z5256300


Purpose/Function
- Supplies power to magnetic clutch.
- Supplies battery voltage to magnetic clutch based on the signals from the PCM.

Construction
- Installed in the relay and fuse block.

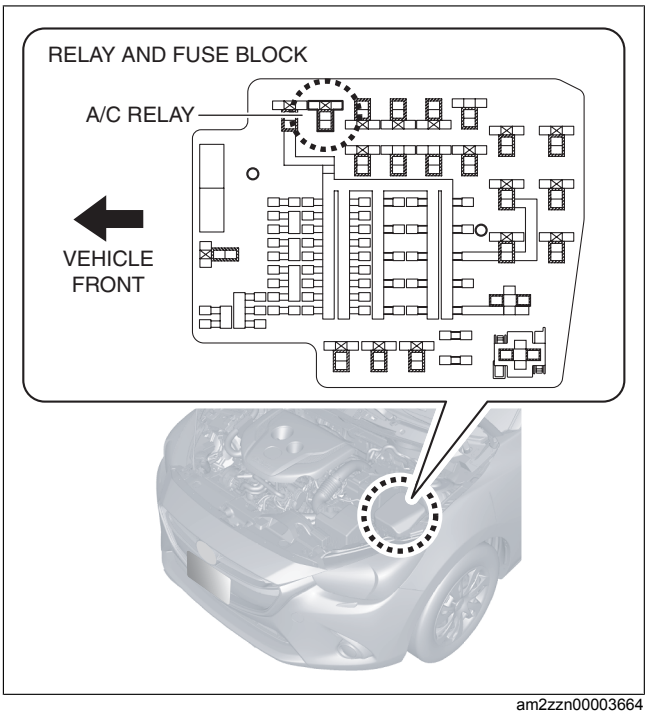

am2zzn00003664

Operation
- The contact point is on when the battery voltage is supplied to the coil based on the signal from the PCM, and the battery voltage is supplied to the magnetic clutch.

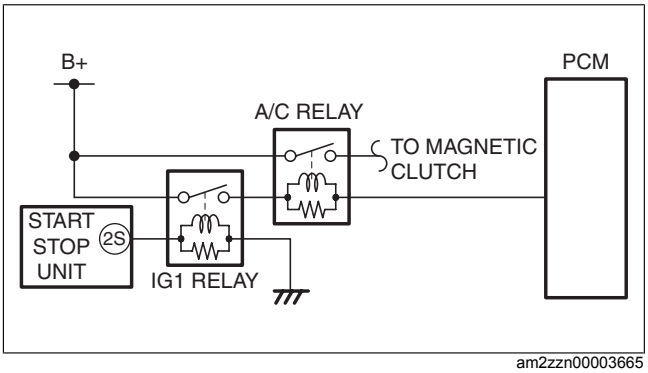

am2zzn00003665

Fail-safe
- Not applicable