BOOST AIR TEMPERATURE SENSOR [SKYACTIV-D 1.5]


id0140z5256400

Purpose/Function

- Detects the IAT after it passes through the charge air cooler as basic information for mainly determining the diesel particulate filter regeneration control.
- Detects the IAT after it passes through the charge air cooler and sends it to the PCM as an intake air temperature signal.

Construction


- Installed on the intake manifold.
- A thermistor has been adopted as the detecting element for detecting the IAT.
- The boost air temperature sensor is integrated with the MAP sensor.

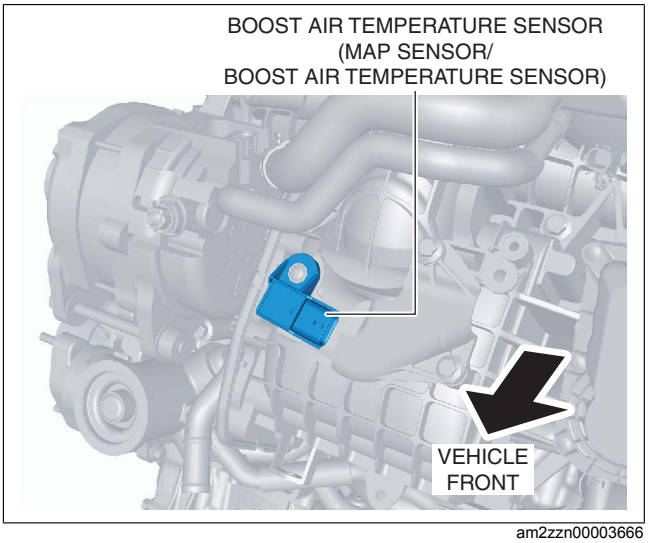

am2zzn00003666


Operation

- Sends the signal, which fluctuates according to the IAT after passing through the charge air cooler, to the PCM.

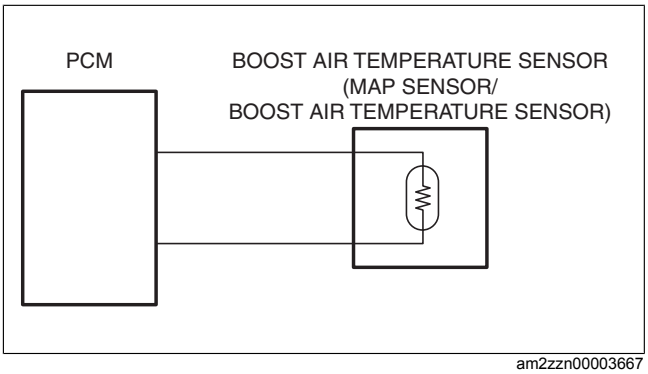

am2zzn00003667

Boost air temperature sensor characteristic

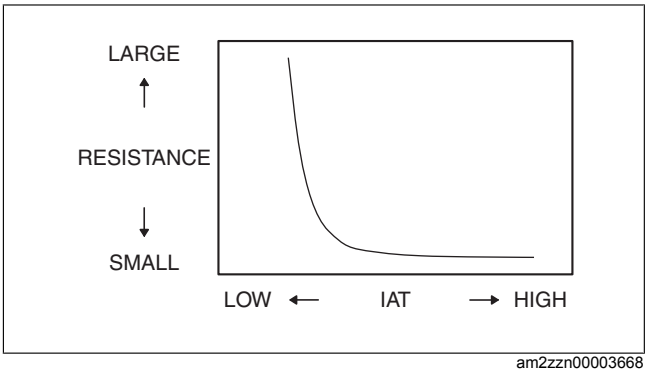

am2zzn00003668

Fail-safe

DTC No.	Fail-safe function
P007B:00	• Limits the engine torque. • Inhibits the EGR control.
P007C:00	
P007D:00	