FUEL TEMPERATURE SENSOR [SKYACTIV-D 1.5]


id0140z5256500

Purpose/Function

- Detects the fuel temperature in the fuel supply line as basic information for mainly determining the fuel injection amount.
- Detects the fuel temperature in the fuel supply line and sends it to the PCM as the fuel temperature signal.

Construction


- Fuel temperature sensor is installed in lower case.
- A thermistor has been adopted as the detecting element for detecting the fuel temperature in the fuel supply line.

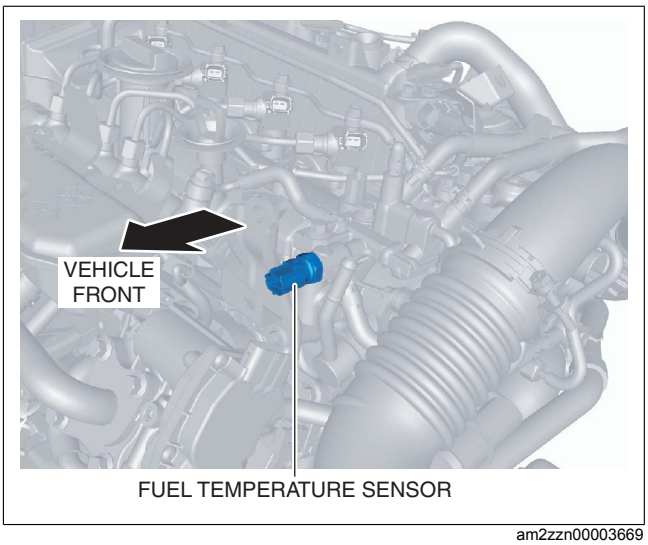

am2zzn00003669


Operation

- Sends the signal, which fluctuates according to the fuel temperature in the fuel supply line, to the PCM.

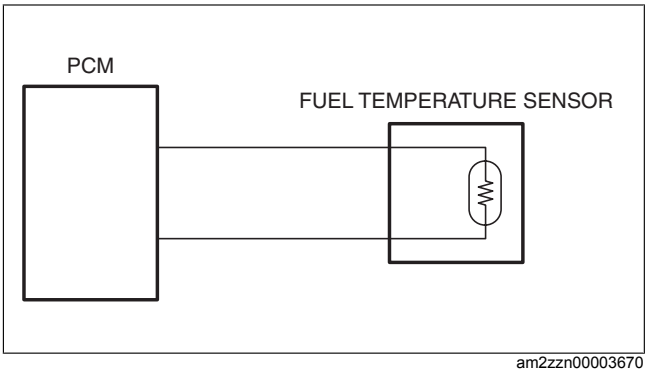

am2zzn00003670

Fuel temperature sensor characteristic

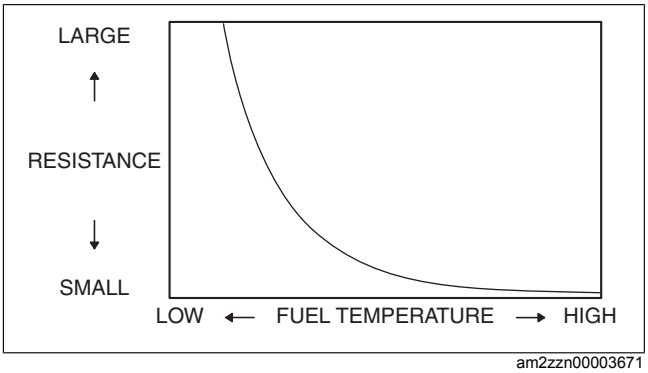

am2zzn00003671

Fail-safe

DTC No.	Fail-safe function
P0181:00	• Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)
P0182:00	
P0183:00	