EXHAUST GAS TEMPERATURE SENSOR [SKYACTIV-D 1.5]

id0140z5256600


Exhaust Gas Temperature Sensor No.1

Purpose/Function

- Detects the exhaust gas temperature before it passes through the variable geometry turbocharger as basic information for mainly determining the fuel injection amount, EGR control, and boost control.
- Detects the exhaust gas temperature before it passes through the variable geometry turbocharger and sends the signal to the PCM as an exhaust gas temperature signal.

Construction


- Installed in the variable geometry turbocharger.
- A thermistor has been adopted as the detecting element for detecting the exhaust gas temperature.

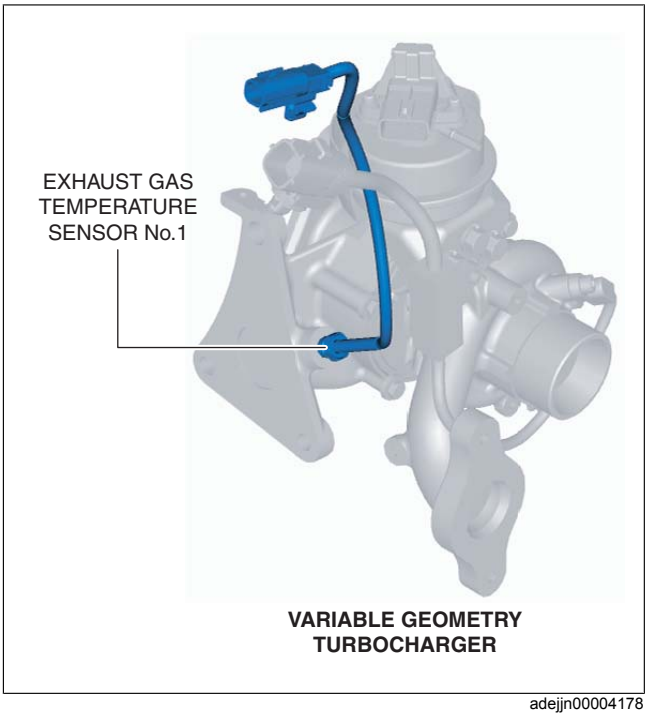

adejjn00004178


Operation

- Sends the signal, which fluctuates according to the exhaust gas temperature before it passes through the turbocharger, to the PCM.

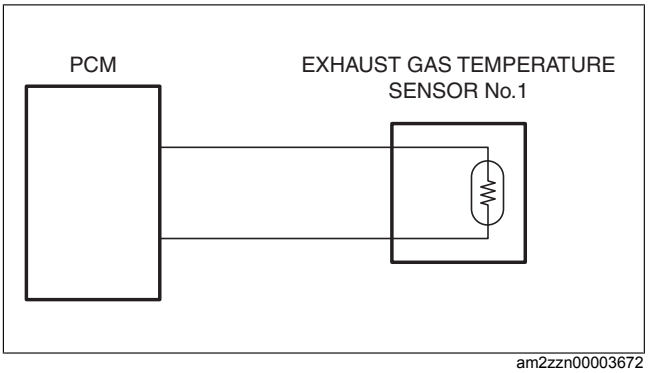

am2zzn00003672

Exhaust gas temperature sensor No.1 characteristic

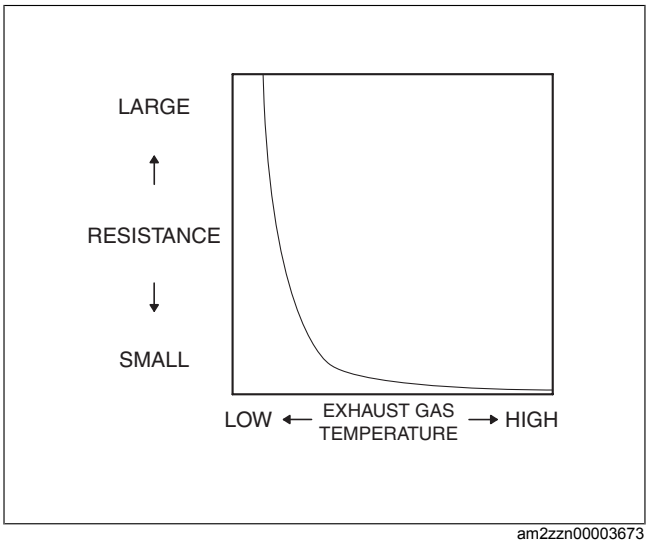

am2zzn00003673

Fail-safe

DTC No.	Fail-safe function
P0545:00	• Inhibits the EGR control.
P0546:00	• Inhibits the auto DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.


Exhaust Gas Temperature Sensor No.2

Purpose/Function

- Detects the exhaust gas temperature before it passes through the catalytic converter as basic information for mainly determining the fuel injection amount and diesel particulate filter regeneration control.
- Detects the exhaust gas temperature before it passes through the catalytic converter and sends it to the PCM as an exhaust gas temperature signal.

Construction


- Installed on the catalytic converter.
- A thermistor has been adopted as the detecting element for detecting the exhaust gas temperature.

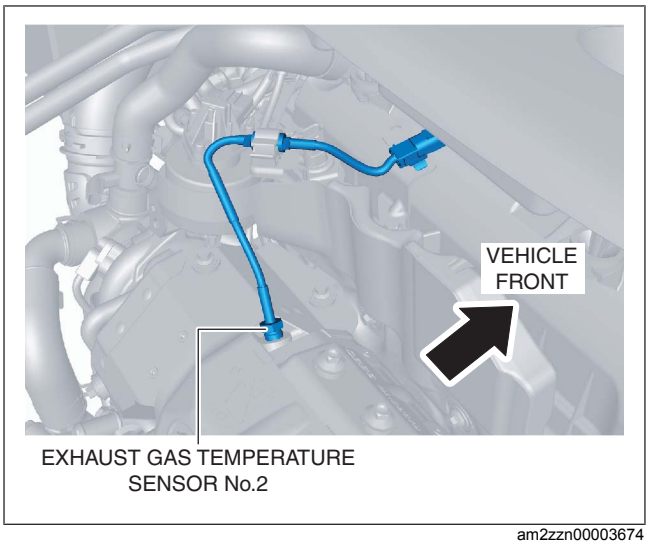

am2zzn00003674


Operation

- Sends the signal, which fluctuates according to the exhaust gas temperature before it passes through the catalytic converter, to the PCM.

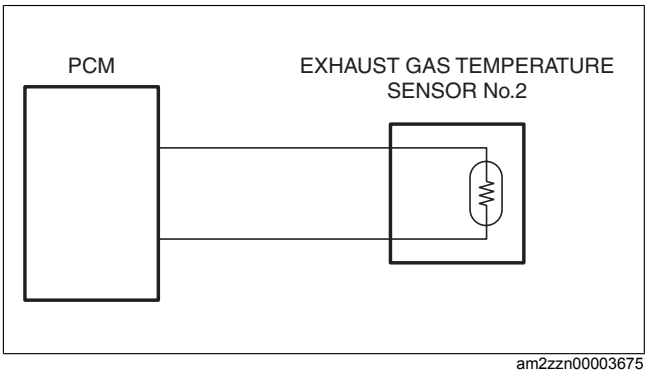

am2zzn00003675

Exhaust gas temperature sensor No.2 characteristic

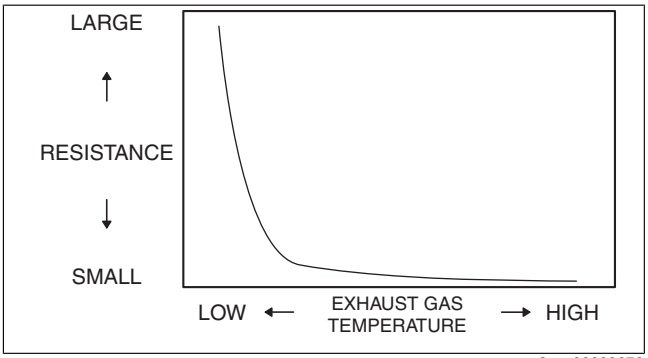

am2zzn00003676

Fail-safe

DTC No.	Fail-safe function
P2032:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.
P2033:00	


Exhaust Gas Temperature Sensor No.3

Purpose/Function

- Detects the exhaust gas temperature after it passes through the catalytic converter as basic information for mainly diesel particulate filter regeneration control.
- Detects the exhaust gas temperature after it passes through the catalytic converter and sends it to the PCM as an exhaust gas temperature signal.

Construction


- Installed on the catalytic converter.
- A thermistor has been adopted as the detecting element for detecting the exhaust gas temperature.

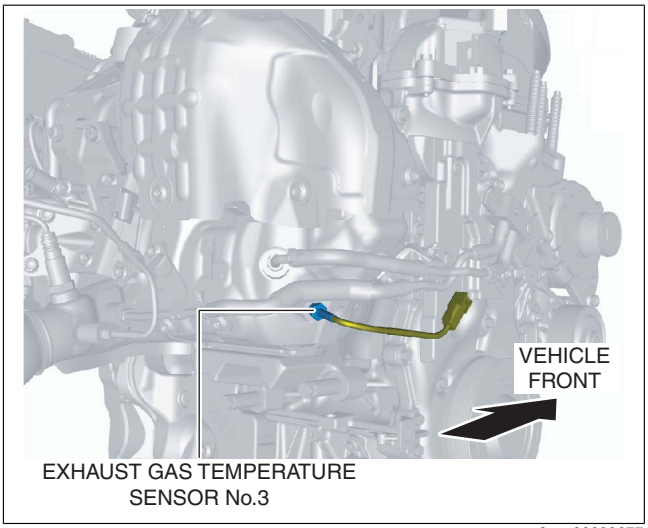

am2zzn00003677


Operation

- Sends the signal, which fluctuates according to the exhaust gas temperature after it passes through the catalytic converter, to the PCM.

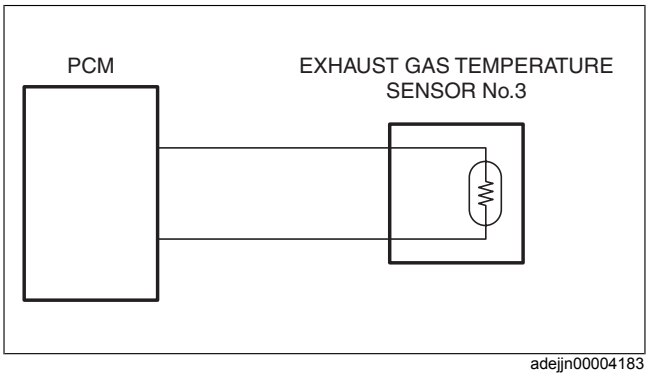

adejjn00004183

Exhaust gas temperature sensor No.3 characteristic

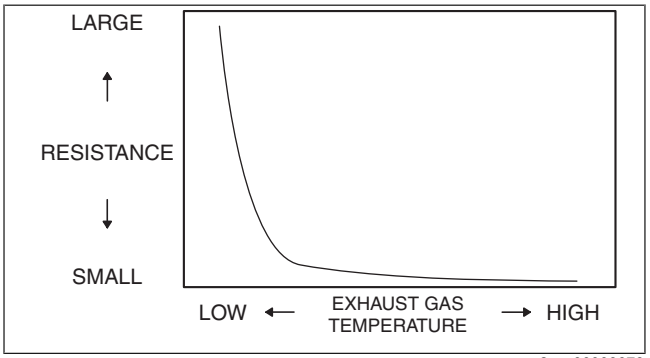

am2zzn00003678

Fail-safe

DTC No.	Fail-safe function
P242C:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.
P242D:00	


Exhaust Gas Temperature Sensor No.4

Purpose/Function

- Detects the exhaust gas temperature before it passes through the EGR cooler as basic information for mainly diesel particulate filter regeneration control.
- Detects the exhaust gas temperature before it passes through the EGR cooler and sends the signal to the PCM as an exhaust gas temperature signal.

Construction


- Installed on the rear side of the catalytic converter.
- A thermistor has been adopted as the detecting element for detecting the exhaust gas temperature.

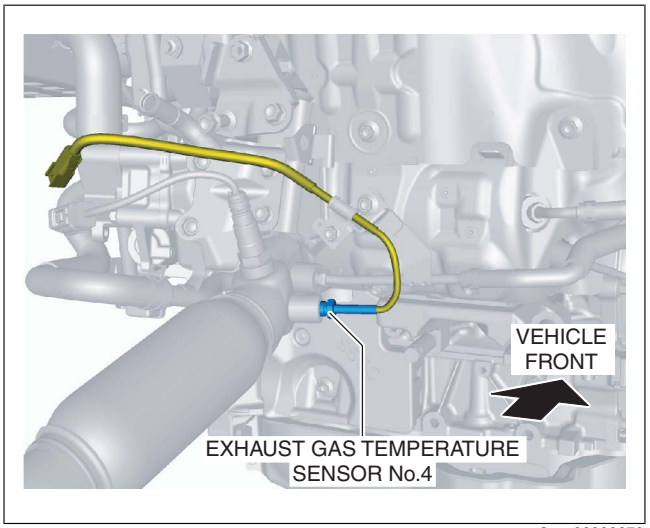

am2zzn00003679


Operation

- Sends the signal, which fluctuates according to the exhaust gas temperature before it passes through the EGR cooler, to the PCM.

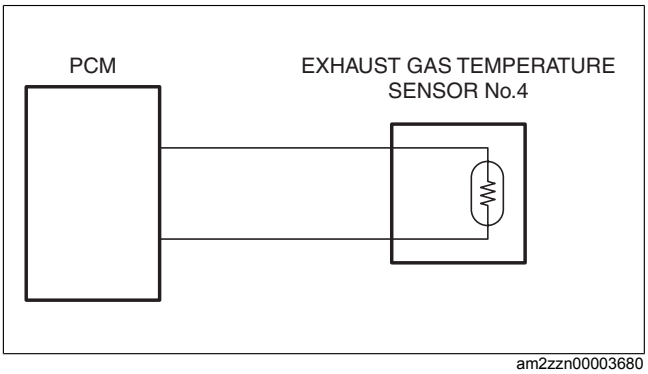

am2zzn00003680

Exhaust gas temperature sensor No.4 characteristic

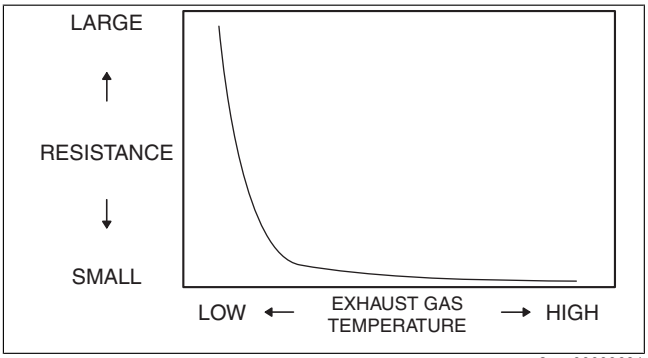

am2zzn00003681

Fail-safe

DTC No.	Fail-safe function
P2470:00	• Limits the engine torque.
P2471:00	• Inhibits the EGR control.