EXHAUST GAS PRESSURE SENSOR [SKYACTIV-D 1.5]

id0140z5256700


Exhaust Gas Pressure Sensor No.1

Purpose/Function

- Detects the exhaust gas pressure exhausted from the cylinder as basic information for mainly EGR control and boost control.
- Detects the exhaust gas pressure exhausted from the cylinder and sends to the PCM as an exhaust gas pressure signal.

Construction


- Exhaust gas pressure sensor No.1 is installed to the cylinder head cover with the bracket.
- A semiconductor strain gauge has been adopted to the exhaust gas pressure sensor No.1 as the detecting element for detecting the exhaust gas pressure exhausted from the cylinder.

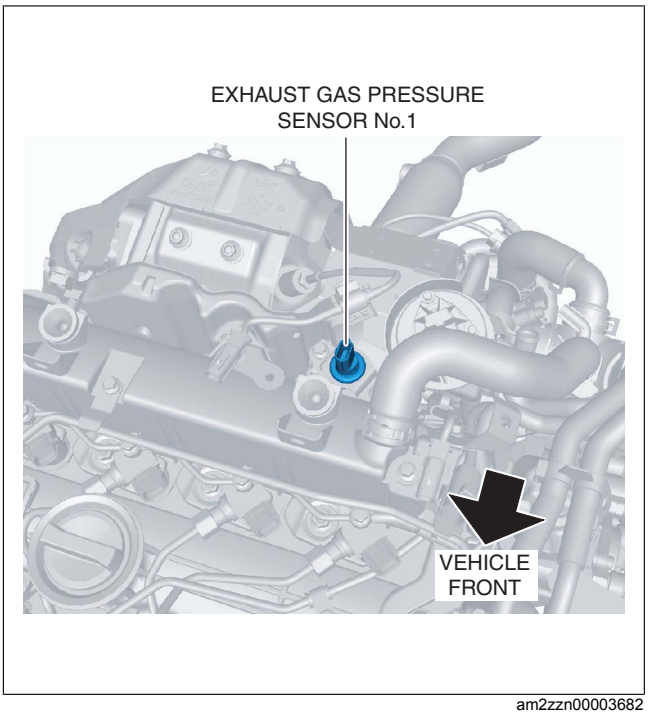

am2zzn00003682


Operation

- Sends the signal, which fluctuates according to the exhaust gas pressure exhausted from the cylinder, to the PCM.

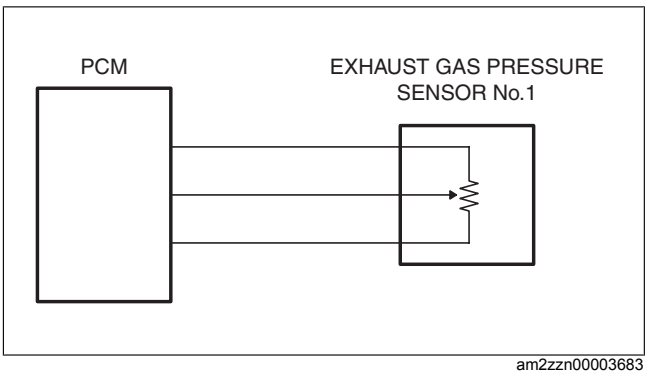

am2zzn00003683

Exhaust gas pressure sensor No.1 characteristic

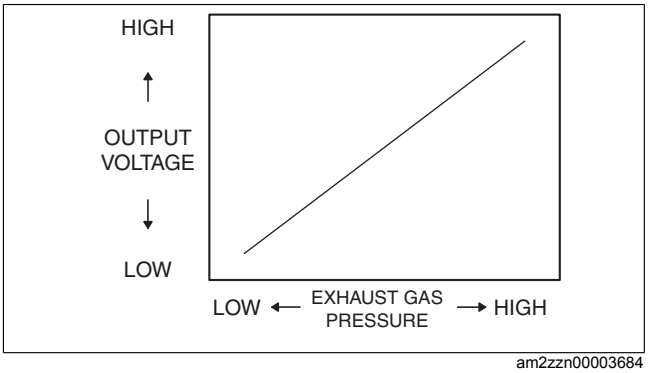

am2zzn00003684

Fail-safe

DTC No.	Fail-safe function
P0471:00	• Limits the engine torque.
P0472:00	• Inhibits the EGR control.
P0473:00	• PCM restricts engine-transaxle integration control. (ATX)


Exhaust Gas Pressure Sensor No.2

Purpose/Function

- Detects the difference in pressure between exhaust gas pressure before and after passing the diesel particulate filter as basic information for mainly diesel particulate filter regeneration control.
- Detects the difference in pressure between exhaust gas pressure before and after passing the diesel particulate filter and sends to the PCM as an exhaust gas pressure signal.

Construction


- Exhaust gas pressure sensor No.2 is located on the front side of the cylinder block.
- A piezoelectric element has been adopted to the exhaust gas pressure sensor No.2 as the detecting element for detecting the difference in pressure between exhaust gas pressure before and after passing the diesel particulate filter.

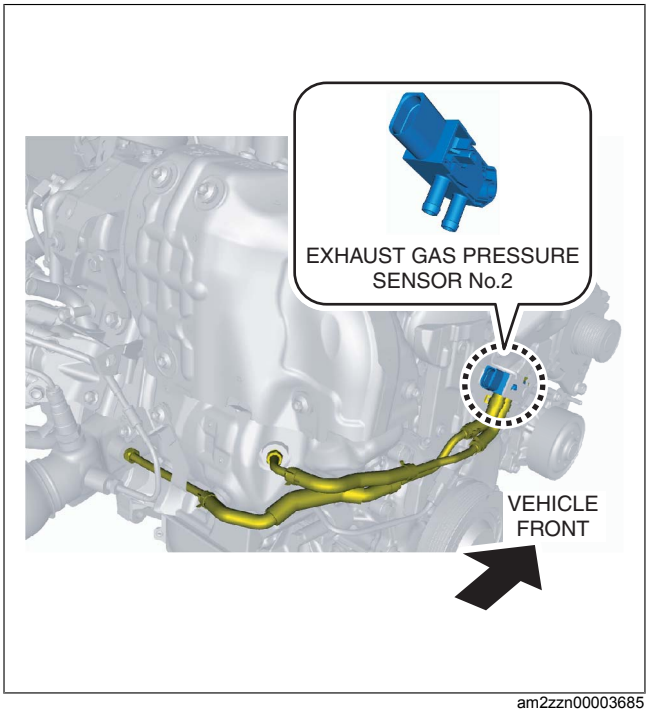

am2zzn00003685


Operation

- Sends the signal, which fluctuates according to the difference in pressure between exhaust gas pressure before and after passing the diesel particulate filter, to the PCM.

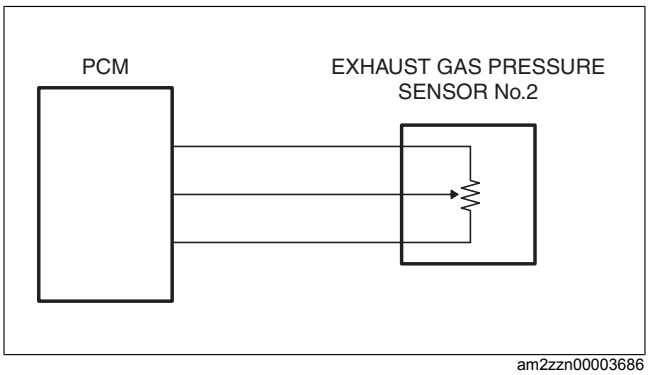

am2zzn00003686

Exhaust gas pressure sensor No.2 characteristic

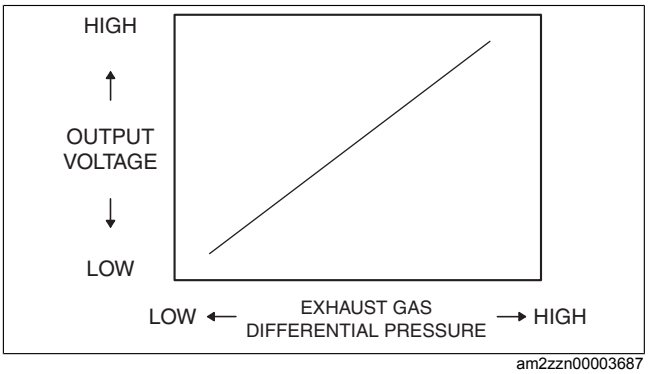

am2zzn00003687

Fail-safe

DTC No.	Fail-safe function
P244A:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.
P2454:00	
P2455:00	