HP-EGR CONTROL VALVE POSITION SENSOR [SKYACTIV-D 1.5]


id0140z5433500

Purpose/Function

- Detects the HP-EGR control valve open/closed condition as basic information for mainly EGR control and boost control.
- Detects the HP-EGR control valve opening/closing condition and sends it to the PCM as the HP-EGR control valve opening angle signal.

Construction


- Built into the HP-EGR control valve.
- A Hall element has been adopted as the detecting element for detecting the HP-EGR control valve opening/closing condition.

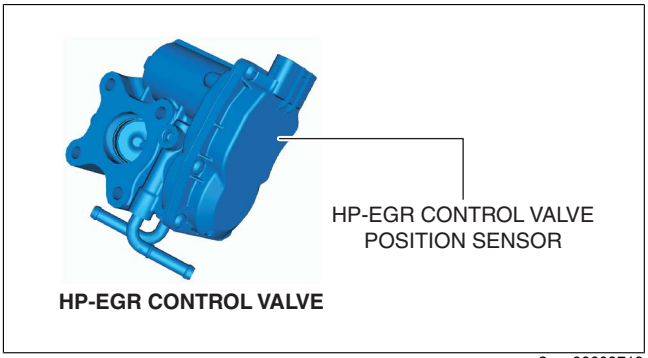

am2zzn00003719


Operation

- Sends the signal, which fluctuates according to the HP-EGR control valve opening/closing, to the PCM.

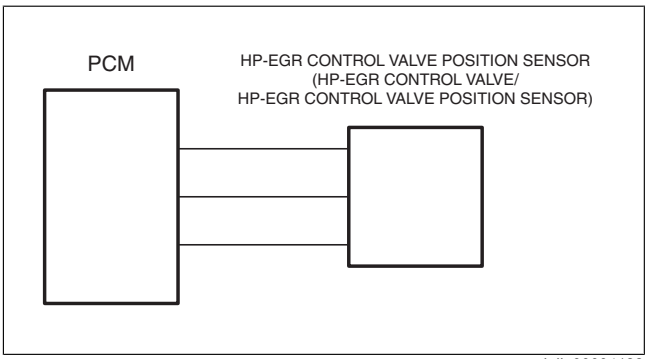

adejjn00004122

HP-EGR control valve position sensor characteristic

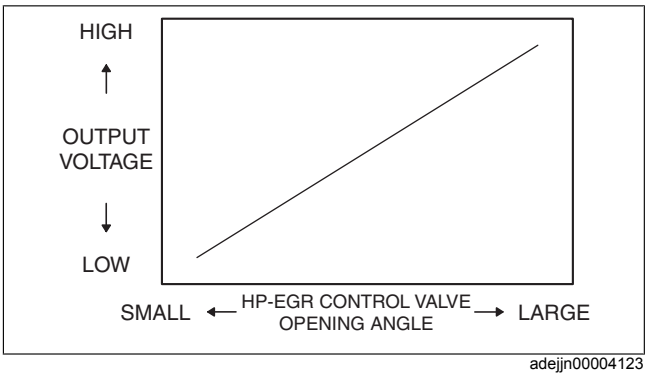

adejjn00004123

Fail-safe

DTC No.	Fail-safe function
P0401:00	• PCM restricts engine-transaxle integration control. (ATX)
P0402:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.
P0404:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function. • PCM restricts engine-transaxle integration control. (ATX)
P0405:00	
P0406:00	