LP-EGR CONTROL VALVE POSITION SENSOR [SKYACTIV-D 1.5]


id0140z5433600

Purpose/Function

- Detects the LP-EGR control valve open/closed condition as basic information for mainly EGR control and boost control.
- Detects the LP-EGR control valve opening/closing condition and sends it to the PCM as the LP-EGR control valve opening angle signal.

Construction


- Built into the LP-EGR control valve.
- A Hall element has been adopted as the detecting element for detecting the LP-EGR control valve opening/closing condition.

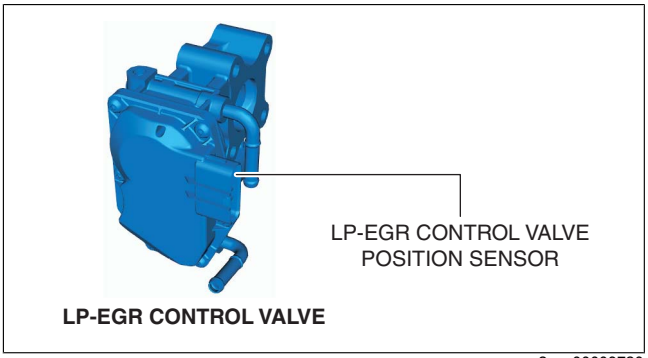

am2zzn00003720


Operation

- Sends the signal, which fluctuates according to the LP-EGR control valve opening/closing, to the PCM.

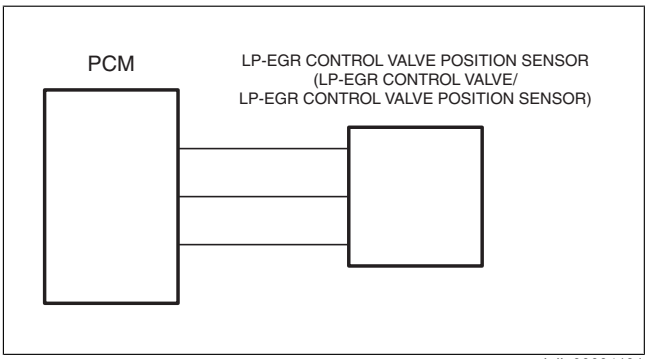

adejjn00004131

LP-EGR control valve position sensor characteristic

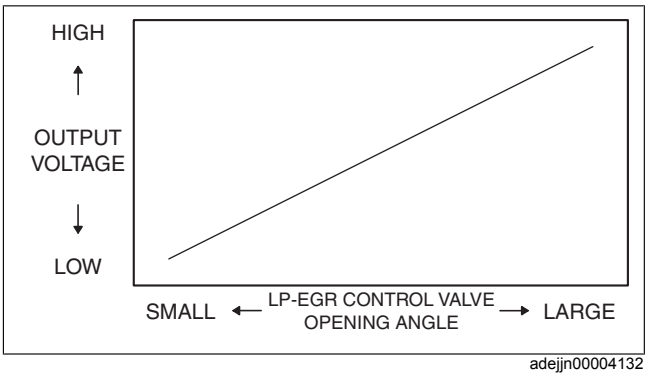

adejjn00004132

Fail-safe

DTC No.	Fail-safe function
P0407:00	• Limits the engine torque. • Inhibits the EGR control.
P0408:00	
P045B:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.
P049C:00	
P213B:00	
P049B:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits engine-stop by operating the i-stop function.