EXHAUST SHUTTER VALVE POSITION SENSOR [SKYACTIV-D 1.5]


id0140z5433700

Purpose/Function

- Detects the exhaust shutter valve open/closed condition as basic information for mainly diesel particulate filter regeneration control and exhaust shutter valve control.
- Detects the exhaust shutter valve opening/closing condition and sends it to the PCM as the exhaust shutter valve opening angle signal.

Construction


- Built into the exhaust shutter valve.
- A Hall element has been adopted as the detecting element for detecting the exhaust shutter valve opening/closing condition.

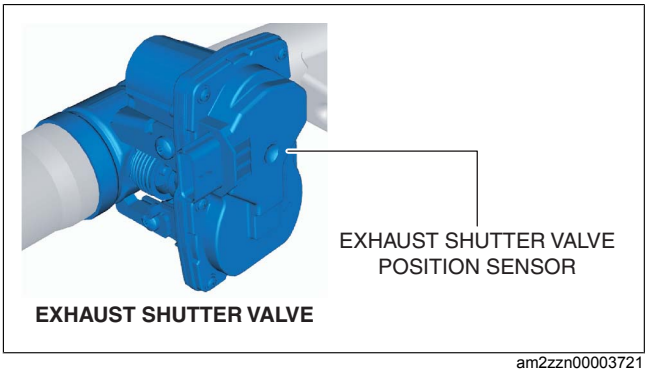

am2zzn00003721


Operation

- Sends the signal, which fluctuates according to the exhaust shutter valve opening/closing, to the PCM.

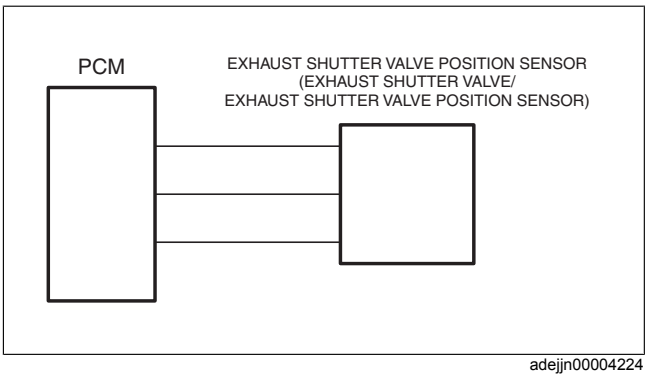

adejjn00004224

Exhaust shutter valve position sensor characteristic

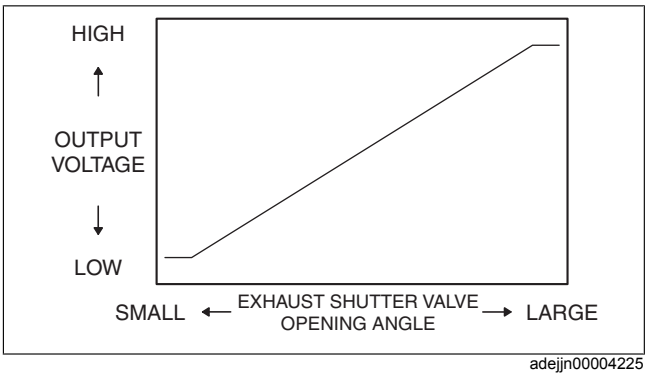

adejjn00004225

Fail-safe

DTC No.	Fail-safe function
P0475:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.
P0476:00	
P048D:00	• Limits the engine torque. • Inhibits the EGR control.
P048E:00	
P049B:00	• Limits the engine torque. • Inhibits the EGR control. • Inhibits engine-stop by operating the i-stop function.