COOLANT CONTROL VALVE POSITION SENSOR [SKYACTIV-D 1.5]


id0140z5433800

Purpose/Function

- Depending on the engine operation conditions, the coolant control valve position sensor detects the open/closed condition of the coolant control valve so that the appropriate amount of engine coolant can be sent to the appropriate coolant passage at the appropriate timing.
- The coolant control valve position sensor detects the open/closed condition of the coolant control valve and sends it to the PCM as an coolant control valve opening angle signal.

Construction


- The coolant control valve position sensor is integrated with the coolant control valve.
- The coolant control valve position sensor has adopted a contact-type rotary to the detection area for detecting the open/closed condition of the coolant control valve.

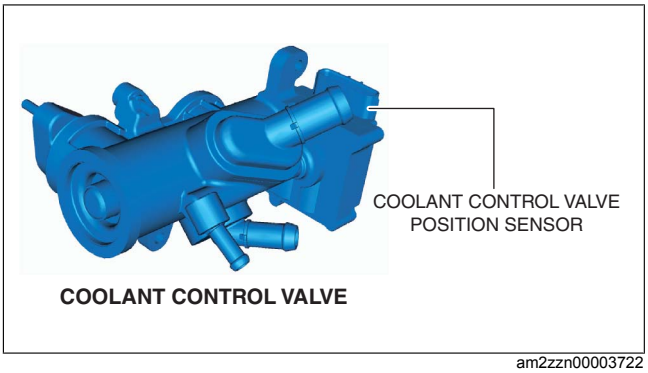

am2zzn00003722


Operation

- The signal, which varies according to the open/closed condition of the coolant control valve, is sent to the PCM.

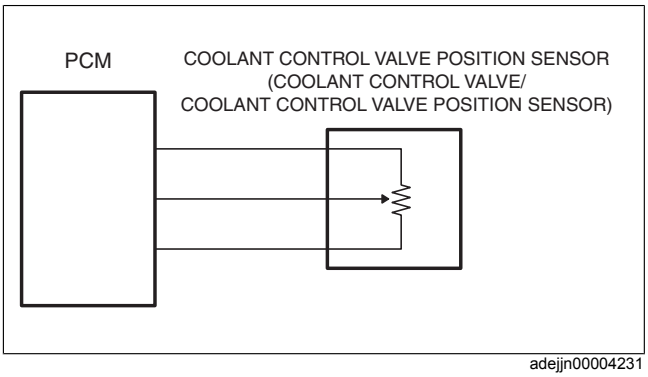

adejjn00004231

Coolant control valve position sensor characteristic

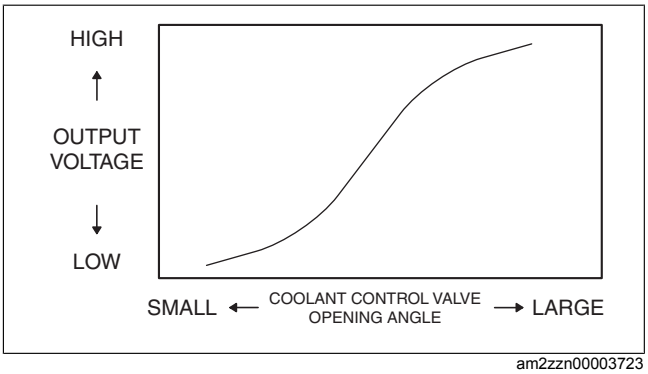

am2zzn00003723

Fail-safe

DTC No.	Fail-safe function
P2681:00	• Limits the engine torque.
P26A3:00	• Inhibits the EGR control. • Inhibits the auto DPF regeneration control. • Inhibits the compulsory DPF regeneration control. • Inhibits engine-stop by operating the i-stop function.