ENGINE OIL LEVEL SENSOR [SKYACTIV-D 1.5]


id0140z5566300

Purpose

- The engine oil level sensor detects the engine oil level in the oil pan.

Function


- The engine oil level sensor intakes the engine oil and measures the engine oil level based on the rate at which the ultrasonic waves are reflected off the surface of the engine oil and into the internal detection part.
- The detected engine oil level is input to the PCM as an engine oil level signal.

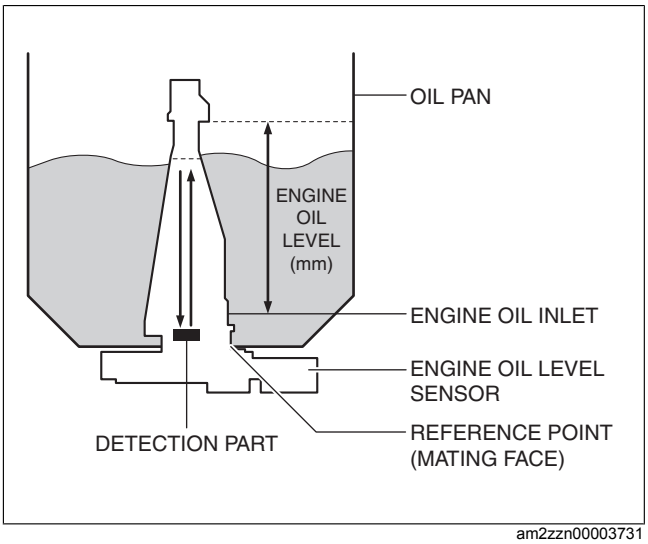

am2zzn00003731

Construction


- The engine oil level sensor is installed to the lower part of the oil pan.
- A piezoelectric element has been adopted for the detection part of the engine oil level sensor for detecting the engine oil level.

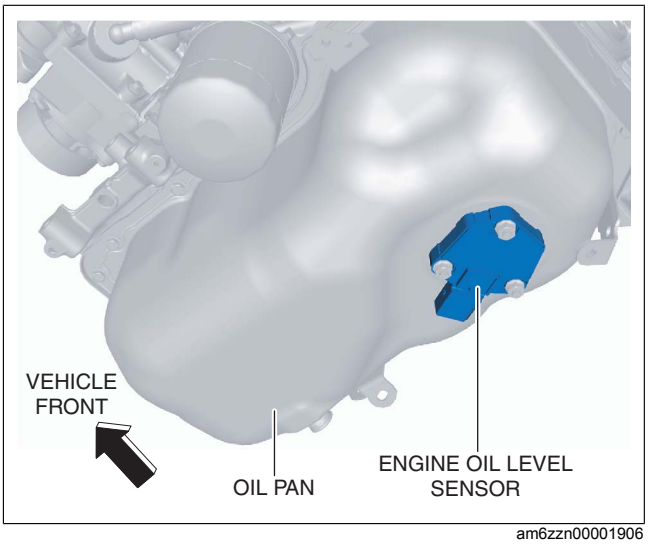

am6zzn00001906

Operation

- The engine oil level sensor inputs the signal to the PCM, which changes according to the engine oil level, via LIN communication.

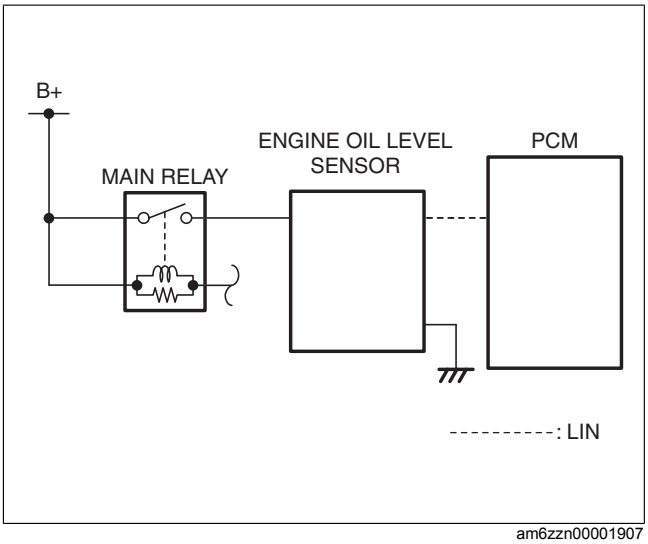

am6zzn00001907

Fail-safe

- Not applicable