
ENGINE OIL MAINTENANCE MONITOR [SKYACTIV-D 1.5]

id0140z5687900

Outline

- Calculates the engine oil replacement period as an appropriate target period for replacing the engine oil.

Block Diagram

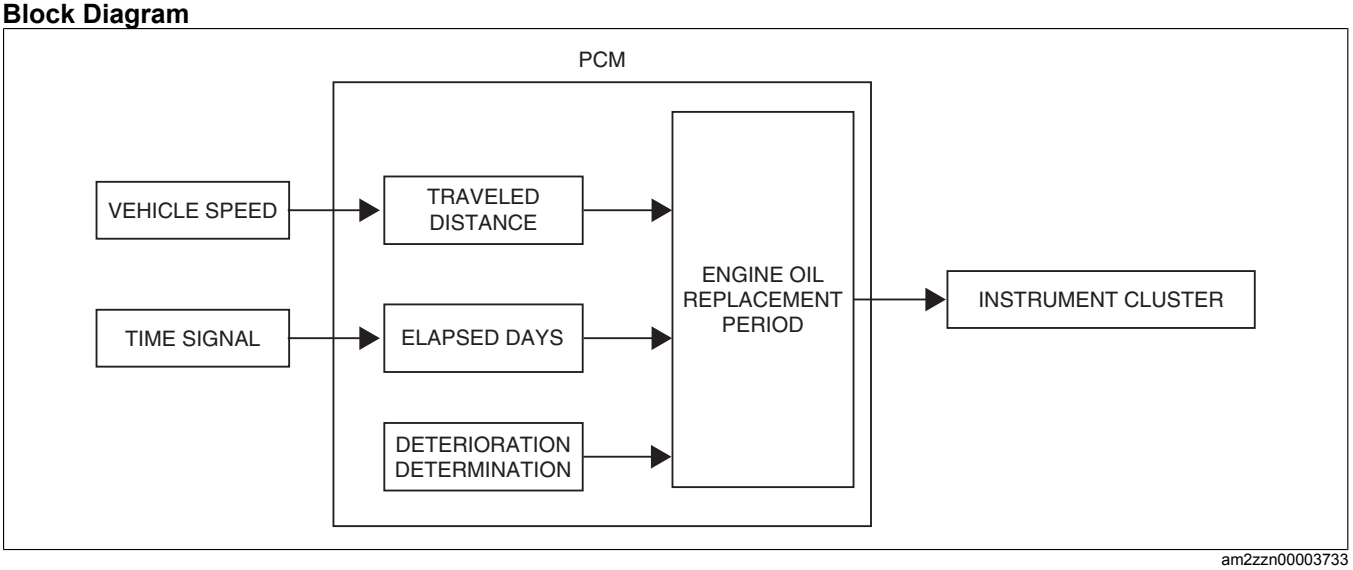

am2zzn00003733

Operation

- The PCM calculates the traveled distance and the number of elapsed days since the engine oil maintenance monitor function was activated, and if the traveled distance and number of elapsed days exceeds the specified value, it determines that engine oil replacement period is reached.
- When the PCM determines that the engine oil replacement period has been reached, the wrench indicator light illumination request signal is sent to the instrument cluster. (See WRENCH INDICATOR LIGHT [SKYACTIV-D 1.5].)