
INTAKE SHUTTER VALVE CONTROL [SKYACTIV-D 1.5]

id0140z5988300

Outline

- The PCM controls the intake shutter valve when the following controls are performed.
  - — EGR control: Due to the difficulty in generating a pressure difference between the intake and exhaust during light engine-loads, the exhaust gas recirculation is corrected by the HP-EGR by closing the intake shutter valve and pressurizing the intake manifold.
  - — DPF regeneration control: Intake air is reduced during DPF regeneration control to cause the exhaust gas temperature to increase more easily.
  - — During deceleration: Intake air is reduced so that the catalyst temperature is not lowered by the incoming outside air.

Block Diagram

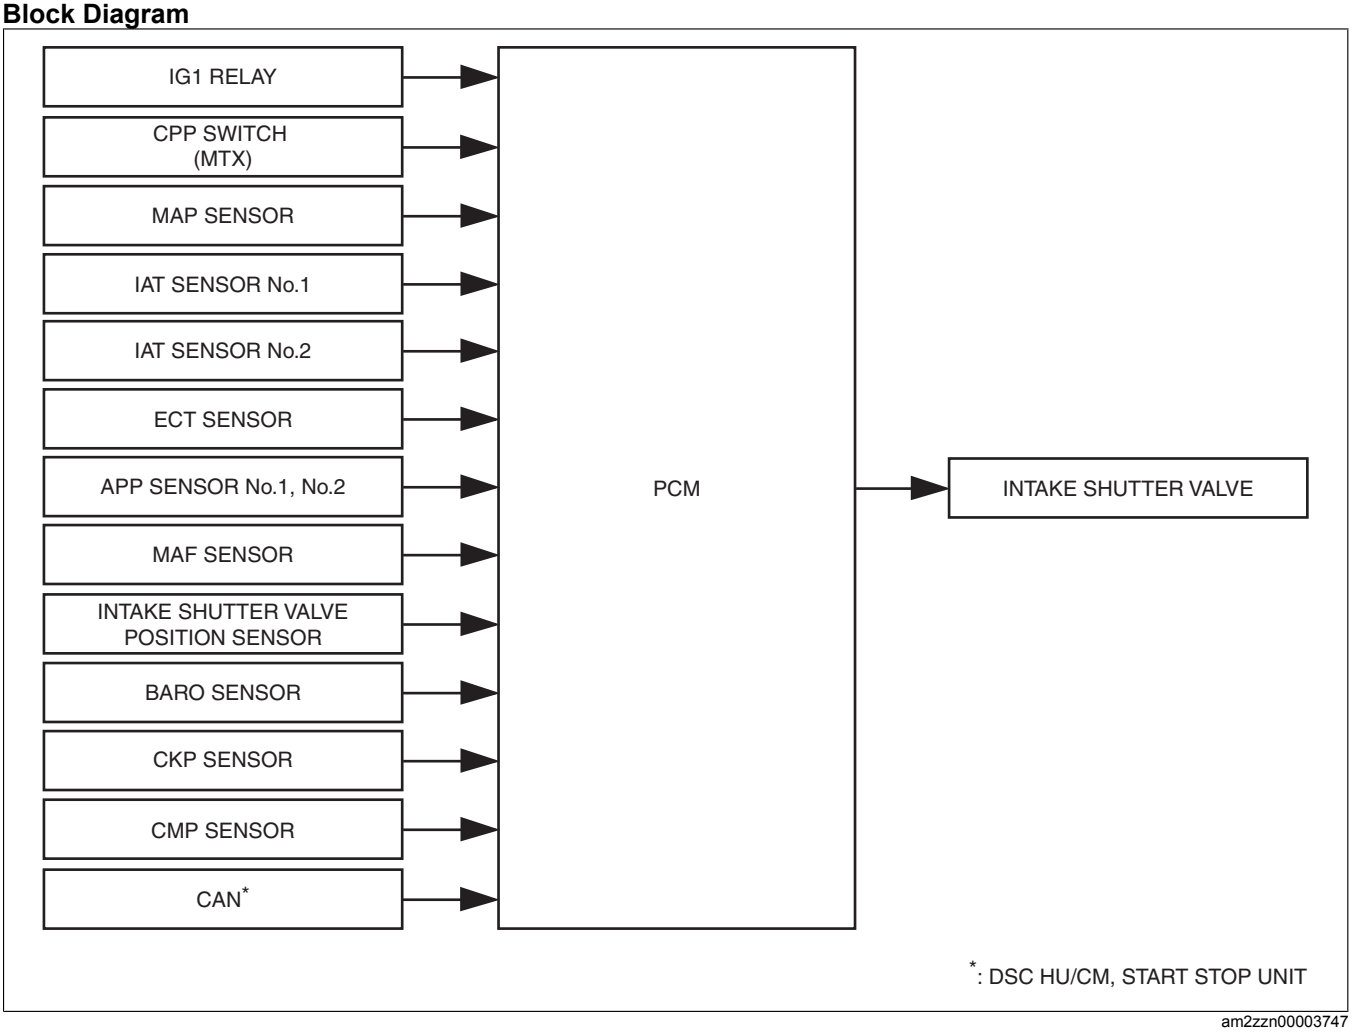

am2zzn00003747

Operation

During EGR control

- The PCM controls the intake shutter valve to the optimum opening angle based on the engine speed, fuel injection amount, and intake air amount.

During DPF regeneration control

- The PCM controls the intake shutter valve to the optimum opening angle based on the engine speed, fuel injection amount, exhaust gas temperature, and intake air amount.