
COOLANT CONTROL VALVE CONTROL [SKYACTIV-D 1.5]

id0140z5988700

Outline

- Depending on the engine operation conditions, the PCM controls the coolant control valve opening angle so that the appropriate amount of engine coolant can be sent to the appropriate coolant passage at the appropriate timing.

Block Diagram

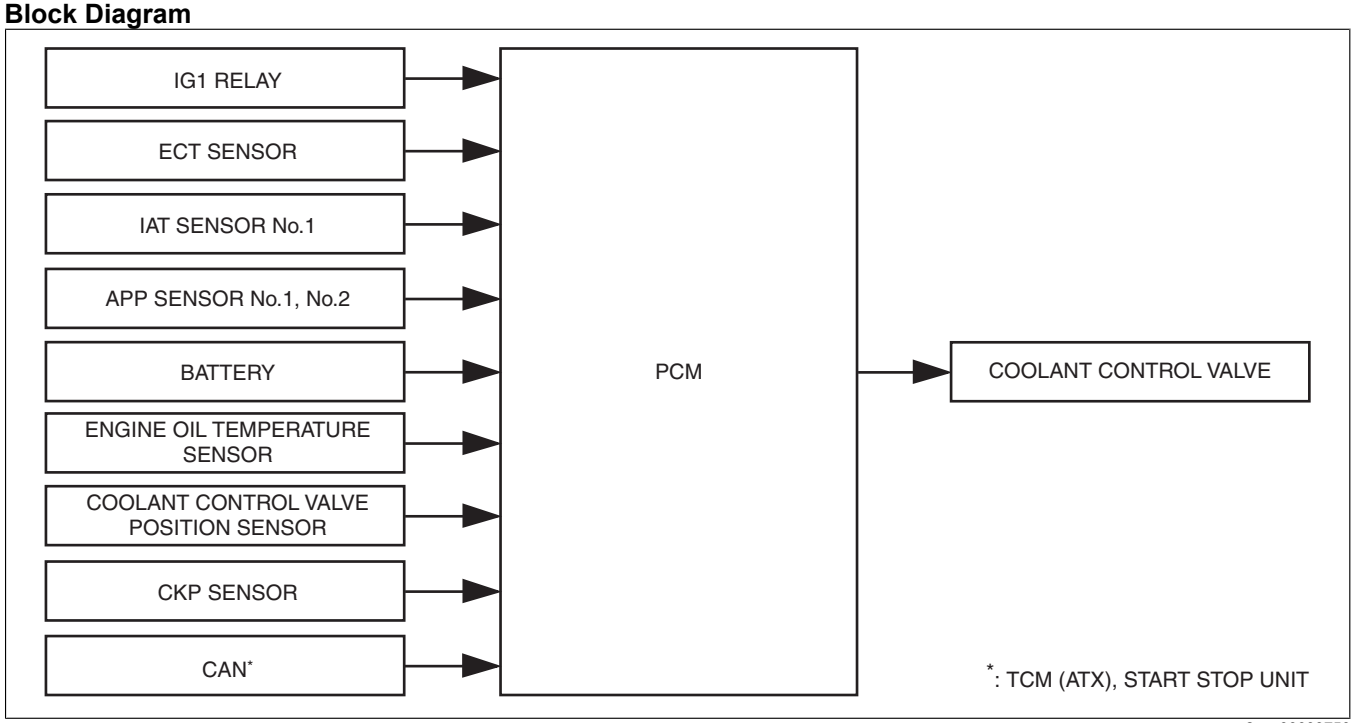

am2zzn00003750

Operation

- The PCM controls the coolant control valve opening angle as follows:

Operation conditions

Engine coolant passage from intake shutter valve

- Normal circulation flow

Engine coolant passage from heater core


- Engine coolant temperature **78 °C {172 °F}**: Fully open

Engine coolant passage from radiator

- Engine coolant temperature **105 °C {221 °F}**: Fully open

Engine coolant passage from ATF oil cooler

- Engine coolant temperature **85 °C {185 °F}** and ATF temperature 90 °C {194 °F}: Fully open

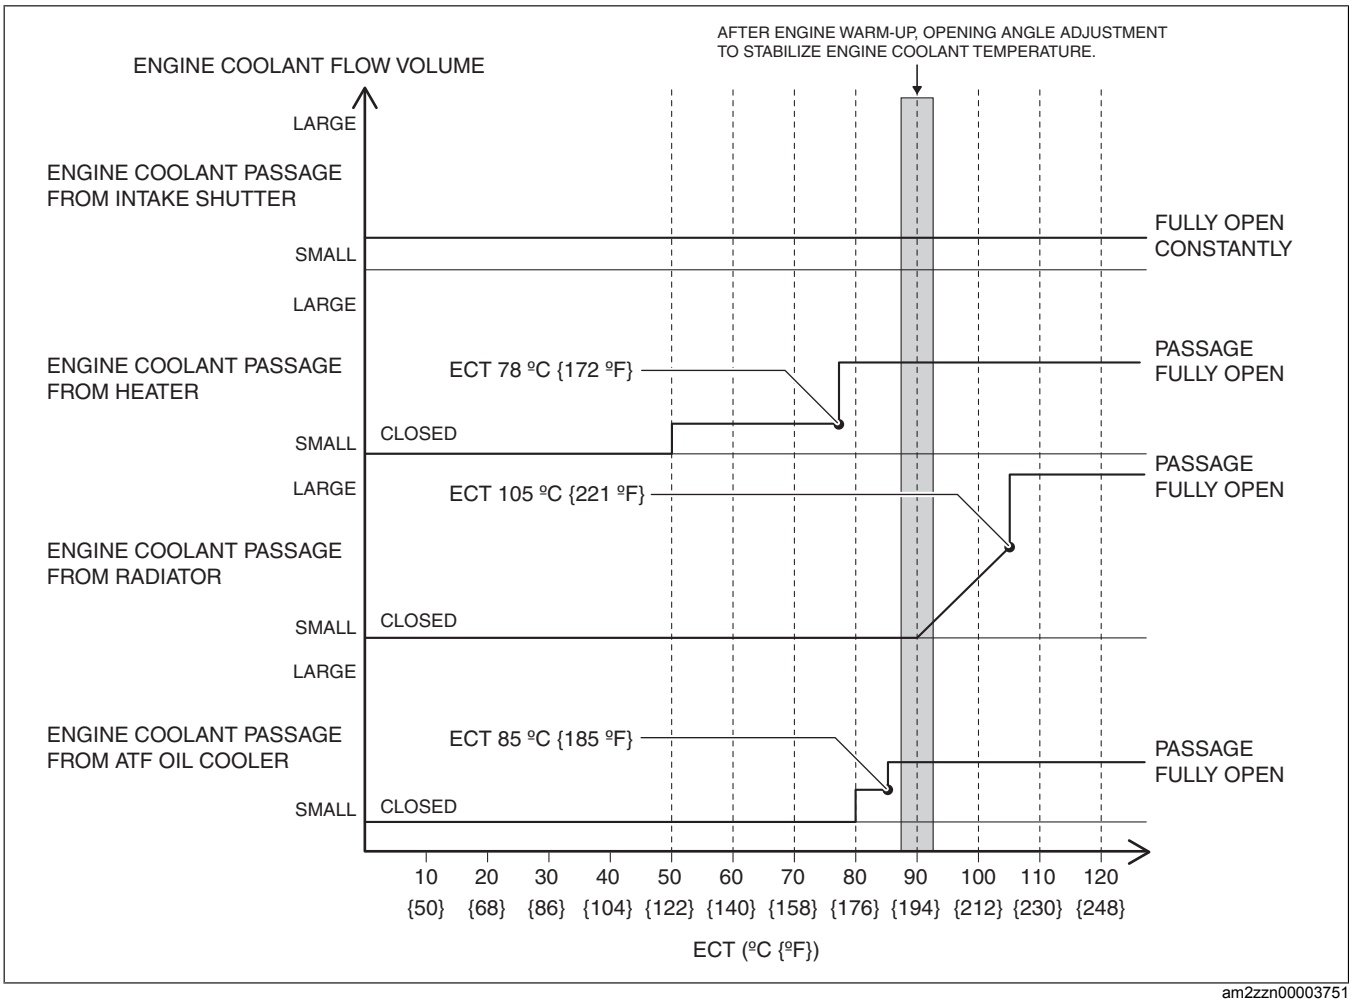

am2zzn00003751

- After engine warm-up, the coolant control valve adjusts to the appropriate opening angle to stabilize the engine coolant temperature.