
EXHAUST SHUTTER VALVE CONTROL [SKYACTIV-D 1.5]

id0140z5995100

Outline

- The PCM controls the exhaust shutter valve when the following controls are performed.
  - — EGR control: During LP-EGR control, the exhaust shutter valve is closed, and the exhaust gas recirculation is corrected by raising the exhaust gas pressure at the LP-EGR valve inlet.

Block Diagram

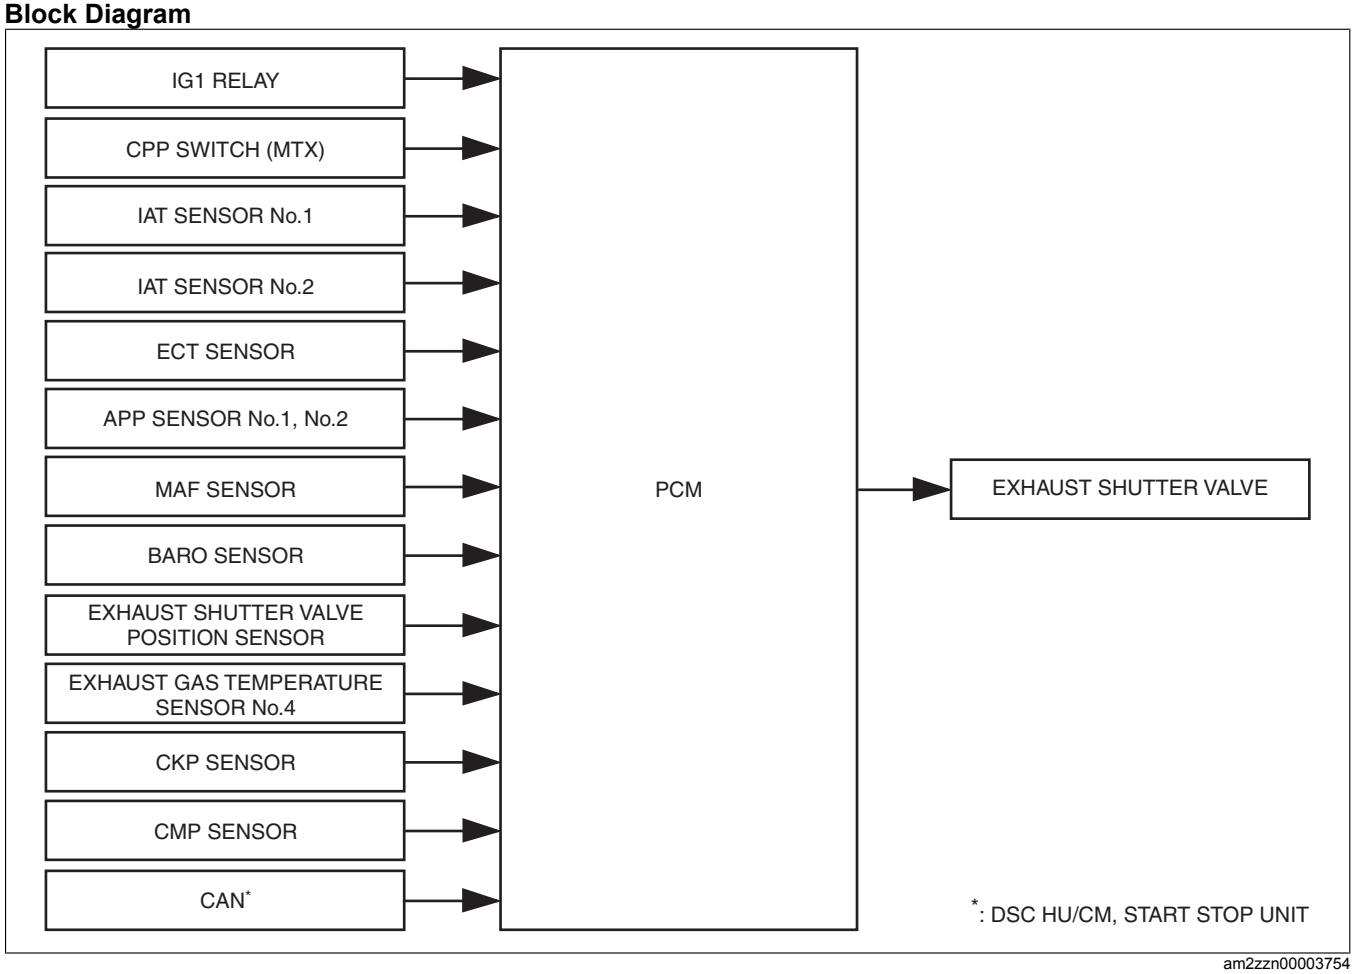

am2zzn00003754

Operation

LP-EGR control

- The PCM controls the exhaust shutter valve to the optimum opening angle according to the engine speed, fuel injection amount, and intake air amount.

Other than LP-EGR control

- The PCM controls the exhaust shutter valve fixed at fully open.