
GENERAL PROCEDURES (SUSPENSION)

id021000800300

Wheel and Tire Installation

1. When installing the wheels and tires, tighten the wheel nuts to the following tightening torque in the order shown in the figure.

   Tightening torque
   108—147 N·m {12—14 kgf·m, 80—108 ft·lbf}

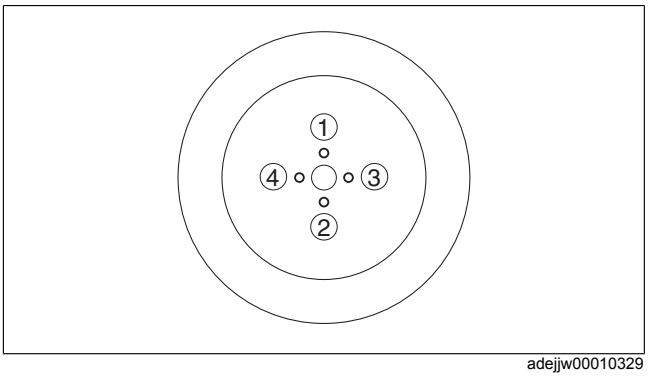

adejjw00010329

Suspension Links Removal/Installation

1. For the joint sections with rubber bushings, raise the vehicle using a lift, and then temporarily tighten the installation bolts and nuts. Lower the vehicle to the ground and tighten them to the specified tightening torque.

Connector Disconnection

1. Disconnect the negative battery terminal before performing any work that requires handling of connectors. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

Headlight Auto Leveling System Initialization (with headlight auto leveling system)

1. Initialize the auto leveling sensor, when performing the following services. (See HEADLIGHT AUTO LEVELING SYSTEM INITIALIZATION.)
   - — Removing the auto leveling sensor
   - — Disconnecting the auto leveling sensor link
   - — Removing the suspension parts related the vehicle height