TIRE PRESSURE MONITORING SYSTEM WARNING LIGHT


id021200202000

Purpose, Function

- The tire pressure monitoring system warning light notifies the driver that it was determined that a tire pressure has decreased below the specified value based on the initialization.
- The tire pressure monitoring system warning light notifies the driver that a malfunction has occurred in the tire pressure monitoring system.
- For vehicles with center display, a warning message in the center display is displayed when the tire pressure monitoring system warning light is illuminated or flashes. For the message content and verification method, refer to the CENTER DISPLAY. (See CENTER DISPLAY [WITH CENTER DISPLAY].)

Construction, Operation

- The tire pressure monitoring system warning light is built into the instrument cluster.

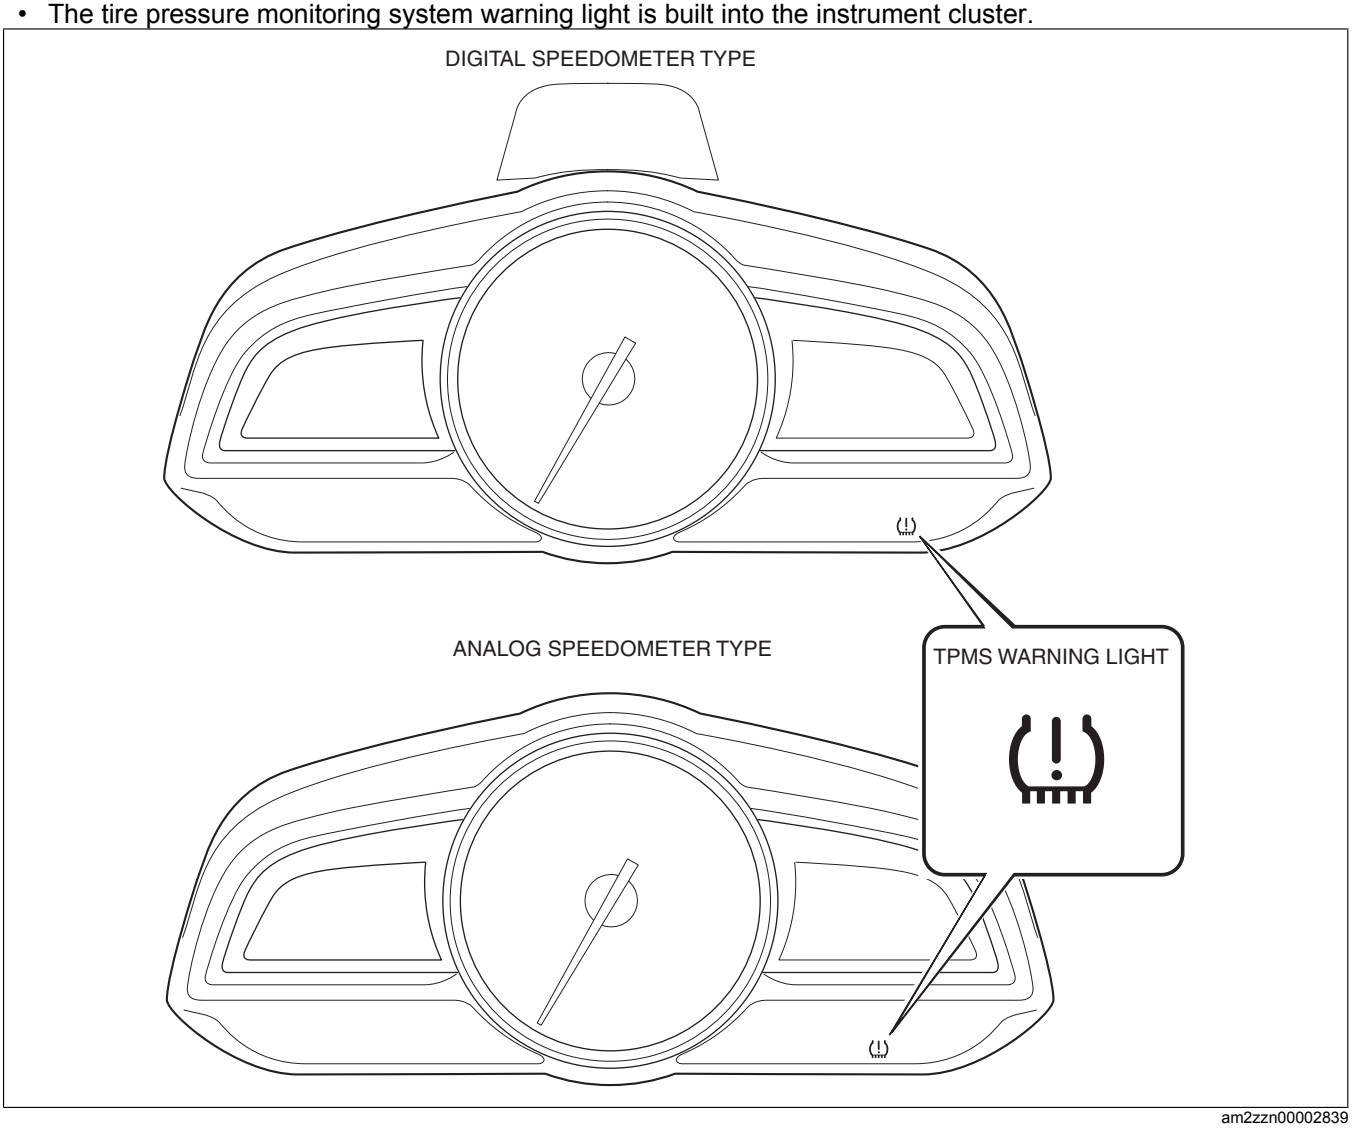

am2zzn00002839

- The tire pressure monitoring system warning light illuminates/flashes based on the DSC HU/CM command.
- The tire pressure monitoring system warning light illuminates if a tire pressure decreases below the specified value based on the initialization.
- The tire pressure monitoring system warning light flashes for 1 min if a malfunction is detected in the tire pressure monitoring system, and then it illuminates.
- If the tire pressure monitoring system warning light has illuminated, it will turn off by performing the initialization. If the initialization is not performed, the light will illuminate again when the ignition is switched from off to ON.

Fail-safe

- Function not equipped.