TIRE PRESSURE MONITORING SYSTEM SET SWITCH INSPECTION


id021200206000

Note
- The Tire Pressure Monitoring System (TPMS) set switch is integrated with the cluster switch.
- If the Tire Pressure Monitoring System (TPMS) set switch is replaced, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

Resistance Inspection
1. Remove the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)
2. Measure the resistance between cluster switches B and C under the following conditions:

Resistance with Tire Pressure Monitoring System (TPMS) set switch pressed and held (standard)
- **187.61—191.39 ohms**

Resistance with any switches not pressed (standard)
- **1,139.99—1,163.01 ohms**

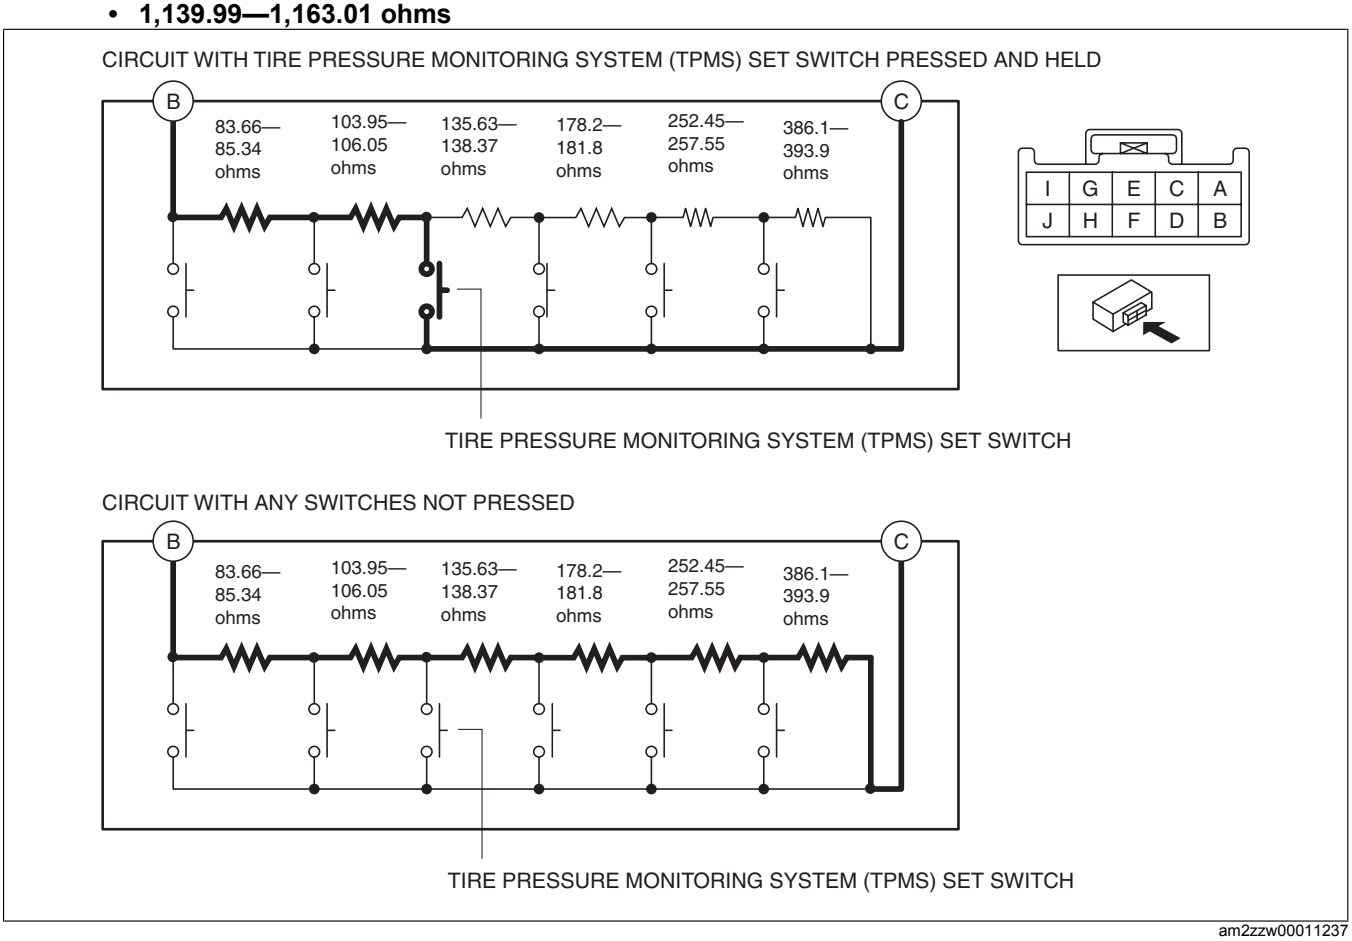


am2zzw00011237

- If not within the specification, replace the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

LED Illumination Inspection
1. Remove the cluster switch. (See CLUSTER SWITCH REMOVAL/INSTALLATION.)

2. Apply battery positive voltage to cluster switch terminal J, and connect terminal I to ground.
3. Verify that the LED illuminates.
   - If there is any malfunction, replace the cluster switch.

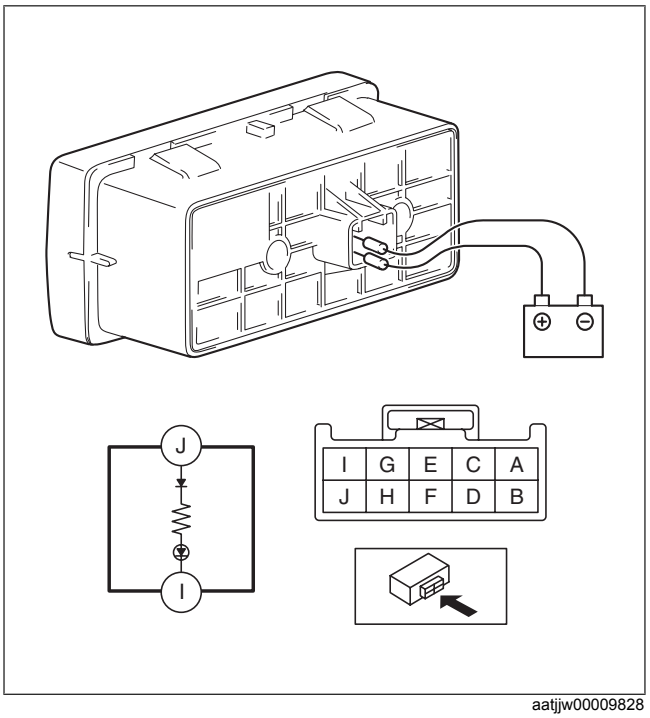

aatjjw00009828