
FRONT LOWER ARM REMOVAL/INSTALLATION

id021300800600

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.
4. Inspect the wheel alignment and adjust it if necessary. (See FRONT WHEEL ALIGNMENT.)

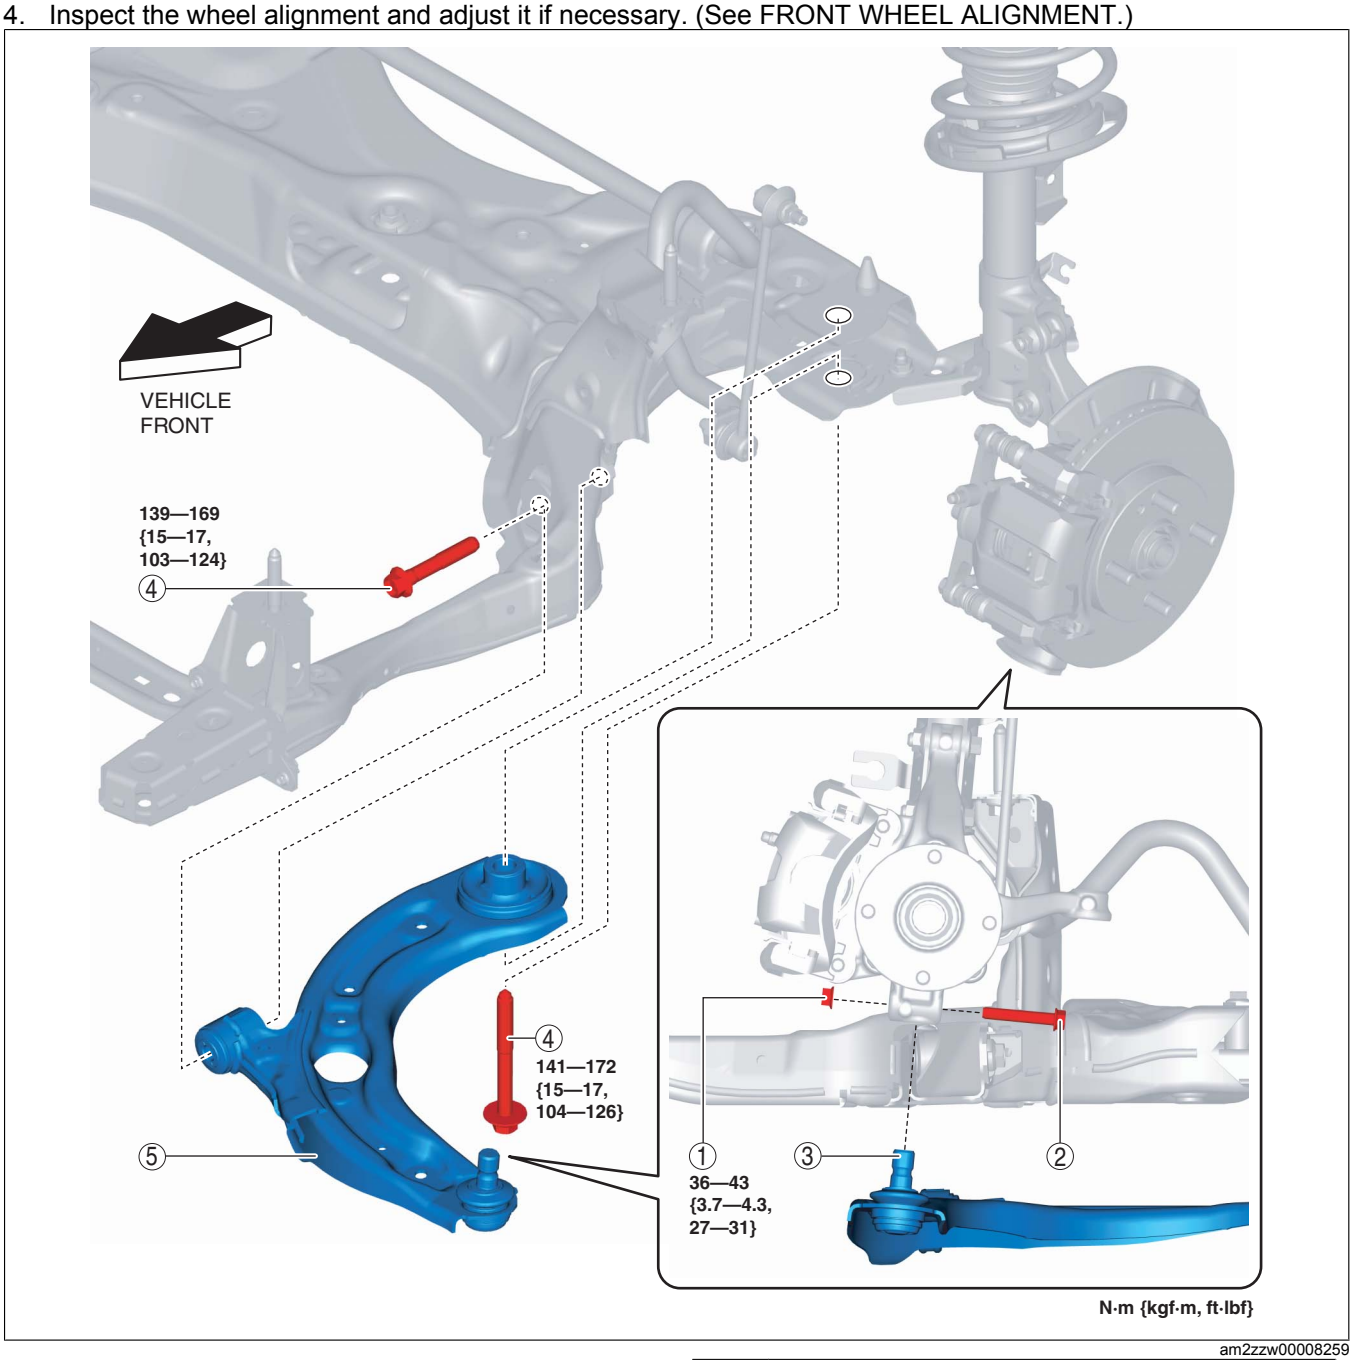

am2zzw00008259

1	Nut
2	Bolt
3	Front lower arm ball joint (See Front Lower Arm Ball Joint Installation Note.)
4	Bolt
5	Front lower arm

Front Lower Arm Ball Joint Installation Note

1. Install the front lower arm ball joint to the steering knuckle, insert the bolts in the same direction for the right and left, then tighten them to the specified torque.