
FRONT LOWER ARM INSPECTION

id021300800700

1. Remove the front under cover No.2. (See FRONT UNDER COVER No.2 REMOVAL/INSTALLATION.)
2. Remove the front lower arm. (See FRONT LOWER ARM REMOVAL/INSTALLATION.)
3. Inspect the front lower arm for bending or damage, and the front lower arm ball joint for excessive looseness.
   - If there is any malfunction, replace the front lower arm. (See FRONT LOWER ARM REMOVAL/INSTALLATION.)
4. Rotate the front lower arm ball joint **10 times**.
5. Install the **SST** to the front lower arm ball joint stud, and measure the front lower arm ball joint initial torque and rotational torque using a torque wrench.

   Front lower arm ball joint initial torque
   11 N·m {112 kgf·cm, 97 in·lbf}
   Front lower arm ball joint rotational torque
   2.0 N·m {20 kgf·cm, 18 in·lbf}

   - If not within the specification, replace the front lower arm. (See FRONT LOWER ARM REMOVAL/INSTALLATION.)

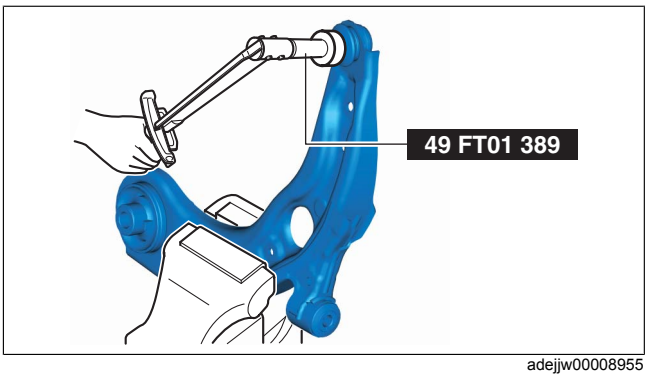

adejjw00008955